

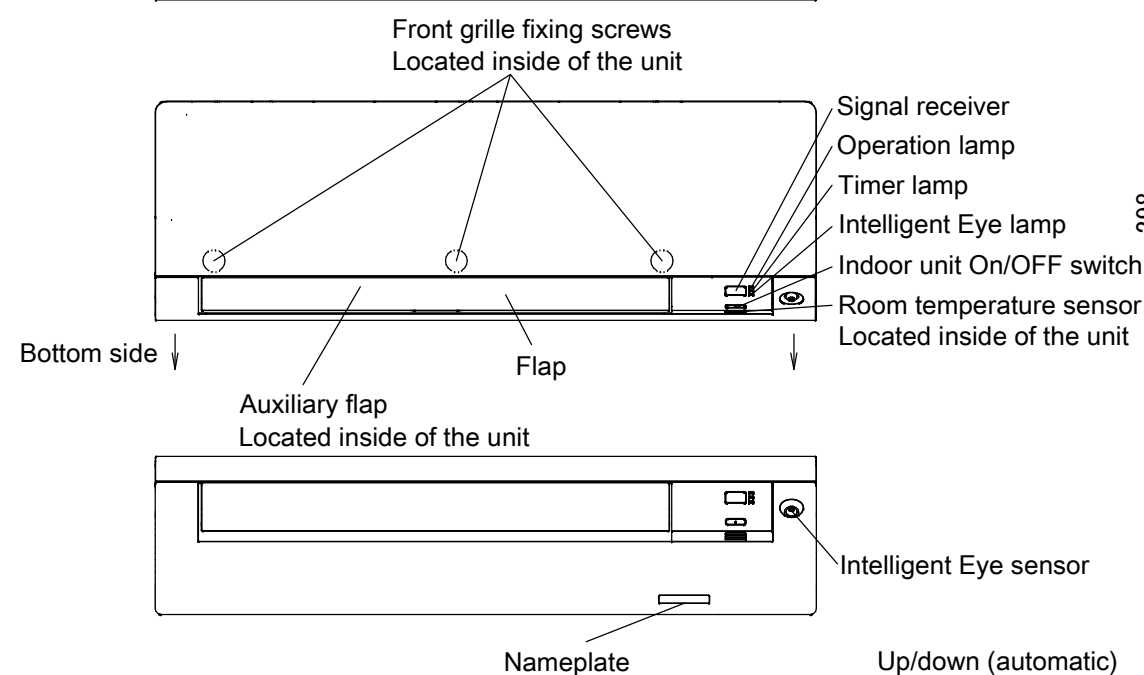
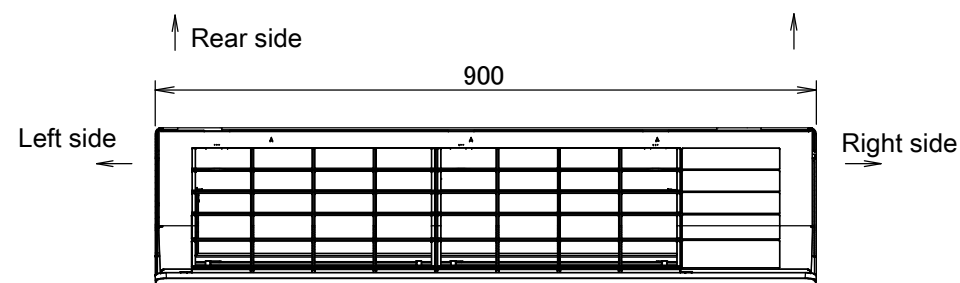




The (→) mark shows the piping direction.

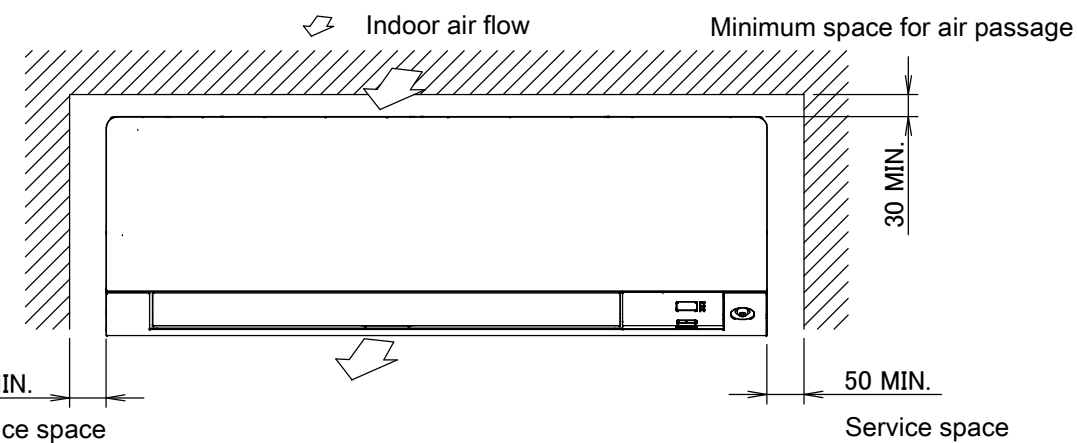

Including mounting plate

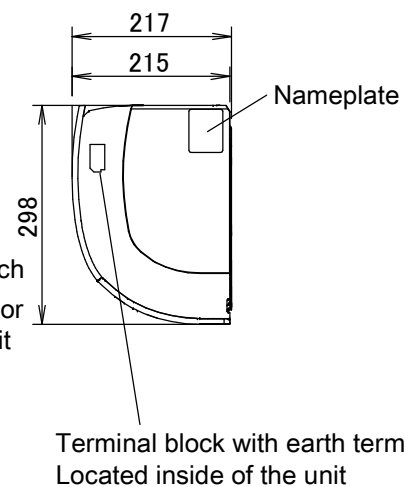


Required space for service and ventilation

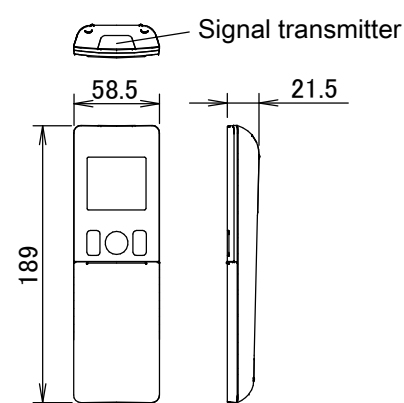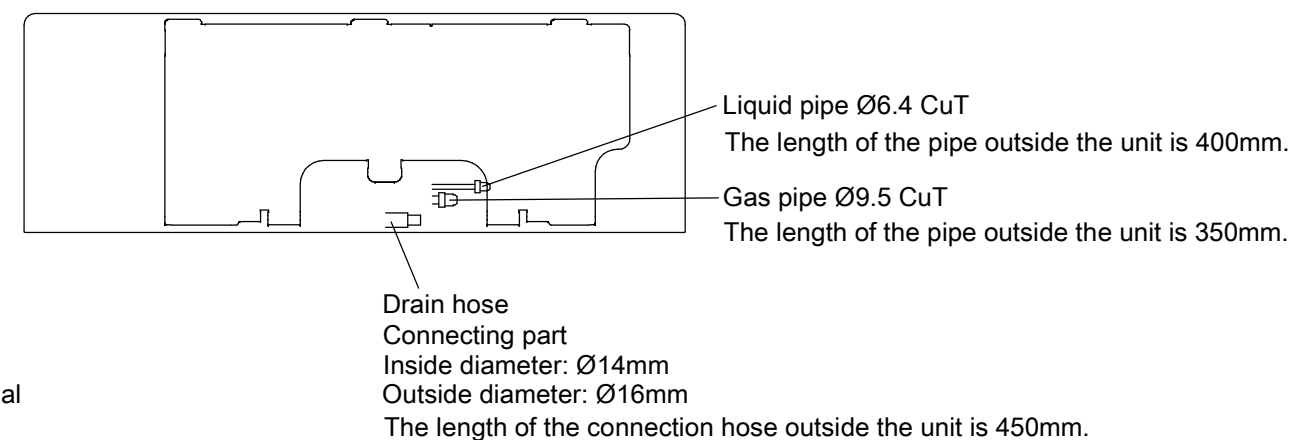


Wireless remote control (ARC466A9)

Up/down (automatic)

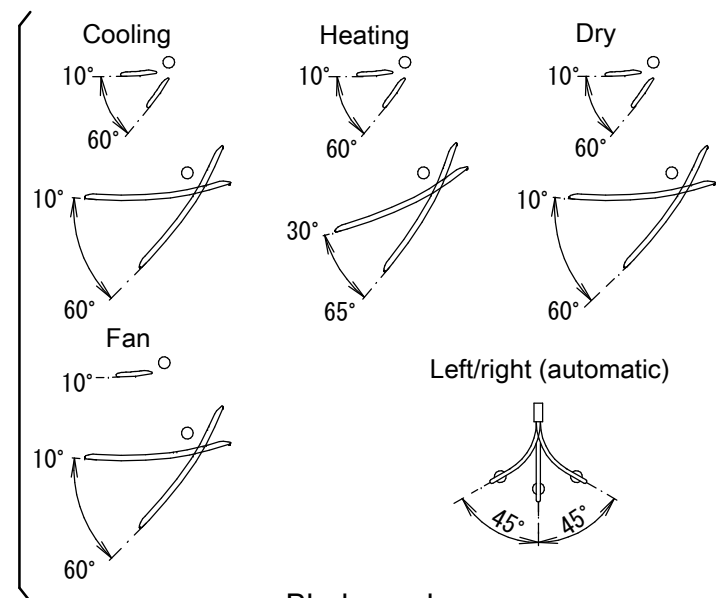

Blade angle

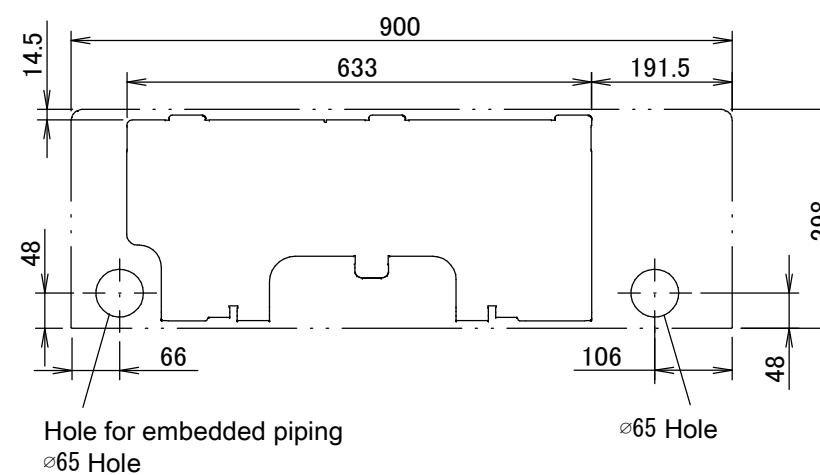

Standard location of holes in the wall