



Installation manual

Daikin room air conditioner



FTXTP25M5V1B
FTXTP35M5V1B
FTXTP25N5V1B
FTXTP35N5V1B

Installation manual
Daikin room air conditioner

English

EU – Safety declaration of conformity
EU – Sicherheits-Konformitätserklärung
UE – Déclaration de conformité de sécurité
EU – Conformitateverklaring veiligheid

EC – Declaración de conformidad sobre seguridad
EU – Dichiarazione di conformità in materia di sicurezza
EE – Auhjón samþykkingar yfir mýr gæðu
EU – Declaração de conformidade relativa à segurança

EU – Varnostna izjava o skladnosti
EU – Obusna varnostna deklaracija
EC – Дeклapация за cоветствие за безопасност
AB – Govenik ugovorluk bejani

Daikin Europe N.V.

- 01 ^{en} declares under its sole responsibility that the products to which this declaration relates:
- 02 ^{en} erklärt in alleiniger Verantwortung, dass die Produkte, auf die sich diese Erklärung bezieht:
- 03 ^{en} déclare sous sa seule responsabilité que les produits visés par la présente déclaration:
- 04 ^{en} verklaart hierbij op eigen verantwoordelijkheid dat de producten waarop deze verklaring betrekking heeft:
- 05 ^{en} dichiara bajo su única responsabilidad que los productos a los que hace referencia esta declaración:
- 06 ^{en} dichiara sotto la propria responsabilità che i prodotti a cui è riferita questa dichiarazione:
- 07 ^{en} объявляет под своей ответственностью, что продукция, к которой относится данное заявление:
- 08 ^{en} declara sob sua exclusiva responsabilidade que os produtos a que esta declaração se refere:

ATXTP25M5V1B, ATXTP35M5V1B, FTXTP25M5V1B, FTXTP35M5V1B,

- 01 are in conformity with the following directives (or regulations), provided that the products are used in accordance with our instructions:
- 02 ^{en} folgender/n Richtlinie/n oder Vorschriften entsprechen, vorausgesetzt, dass diese gemäß unseren Anweisungen verwendet werden:
- 03 sont conformes à la/aux directive(s) ou règlement(s) suivant(s), à condition que les produits soient utilisés conformément à nos instructions:
- 04 in overeenstemming zijn met de volgende richtlijn(en) of verordening(en), op voorwaarde dat de producten worden gebruikt overeenkomstig onze instructies:
- 05 están en conformidad con la/s siguiente(s) directiva(s) o reglamento(s), siempre que se utilicen de acuerdo con nuestras instrucciones:
- 06 sono conformi alle direttive o ai regolamenti seguenti, a patto che i prodotti vengano usati in conformità alle nostre istruzioni:
- 07 ^{en} соотвoет/уютирa je тив(и) предпoлoжeн(и) cтaнoвoу, у кoтoрoм/у кoтoрoм/у oтпoвeтнo уcтpoeнo je тaк oбнaчeнo:
- 08 estão em conformidade com a(s) seguinte(s) directiva(s) ou regulamento(s), desde que os produtos sejam utilizados de acordo com as nossas instruções:

Machinery 2006/42/EC**
Low Voltage 2014/35/EU
Electromagnetic Compatibility 2014/30/EU*

- 01 following the provisions of:
 - 02 gemäß der Bestimmungen in:
 - 03 conformément aux dispositions de:
 - 04 volgens de bepalingen van:
 - 05 siguiendo las disposiciones de:
 - 06 secondo le disposizioni di:
 - 07 ^{en} соотвoет/уютирa je тaк тpебoвaн(и)ям/у:
 - 08 seguindo as disposições de:
 - 09 в соответствии с положениями:
- 01 ^{en} as set out in <A> and (judged positively) by
 - 02 ^{en} Hinweis* according to the Certificate <A>
 - 03 ^{en} Remark* telles que définies dans <A> et évaluées positivement par conformément au Certificat <A>
 - 04 ^{en} Bemerk* zoals uiteengezet in <A> en positief beoordeeld door overeenkomstig het Certificaat <A>
 - 05 ^{en} Nota* tal como se estabelece em <A> y valorado positivamente por de acuerdo con el Certificado <A>
- 10 under/egtagelse af:
 - 11 enligt bestämmelserna för:
 - 12 i henhold til bestemmelserne i:
 - 13 noudattaien säännöksiä:
 - 14 za dodženi usloveni:
 - 15 prema uredbama:
 - 16 kovalt alzi:
 - 17 zgodnie z postanowieniami:
 - 18 umārdh prevedētie:

<A>	DAIKIN.TCF.032E12/06-2021
	DEKRA (NB0344)
<C>	2159619.0551-EMC

- 01** Daikin Europe N.V. is authorised to compile the Technical Construction File.
 - 02** Daikin Europe N.V. hat die Berechtigung die Technische Konstruktionssakte zusammenzustellen.
 - 03** Daikin Europe N.V. est autorisé à compiler le Dossier de Construction Technique.
 - 04** Daikin Europe N.V. is bevoegd om het Technisch Constructiedossier samen te stellen.
 - 05** Daikin Europe N.V. está autorizado a compilar el Archivo de Construcción Técnica.
 - 06** Daikin Europe N.V. è autorizzata a redigere il File Tecnico di Costruzione.
- 07** H Daikin Europe N.V. eiwa ёўчоpоpоmуbнv va оvоvоdъt тоv Tеxнuч оpоbоtо kоnстpуkцuј;
 - 08** A Daikin Europe N.V. está autorizada a compilar a documentação técnica de fabrico.
 - 09** Koninaim Daikin Europe N.V. ymоvоvоvеdъt осtаvаt kоmеntаr tеxнuчесkи dокуmеntаци.
 - 10** Daikin Europe N.V. er autorisert til å utarbeide de tekniske konstruksjonsdata.
 - 11** Daikin Europe N.V. är behörigad att sammanställa den tekniska konstruktionsfilen.
 - 12** Daikin Europe N.V. har tillatelse til å kompilere den Tekniske konstruktionsfilen.

Hiromitsu Iwasaki
Director
Ostend, 1st of December 2022

Zandvoordestraat 300, B-8400 Oostende, Belgium

09 ^{en} заявляет, исключительно под свою ответственность, что продукция, к которой относится настоящее заявление:

- 10 ^{en} erklær som eneansvarlig, at produktene, som er omfattet af denne erklæring:
- 11 ^{en} deklarerer i egen skap av huvudsansvar, att produkterna som berörs av denna deklaration innebär att:
- 12 ^{en} erklær et til sig selv ansvar for at produktene som er underlagt denne erklæring:
- 13 ^{en} imolava ystionama omalla vastuuttajan, että lainan imoituksen takoitallatuotteet:
- 14 ^{en} prohlásje na svou plnou odpovědnost, že výrobky, kterým se toto prohlášení vztahuje:
- 15 ^{en} izjavljuje pod isključivo vlastitom odgovornošću da su proizvodi na koje se ova izjava odnosi:
- 16 ^{en} teljes felelősségre vállalhat, kijelent, hogy a termék, melyekre a nyilatkozat vonatkzik:

- 09 отвечает требованиям упомянутых ниже директив или нормативных документов при условии эксплуатации данной продукции в соответствии с нашими инструкциями:
- 10 overholder bestemmelserne i følgende direktiver (eller bestemmelser), forudsat at produktene anvendes i overensstemmelse med vores instruktioner:
- 11 uppfyller följande direktiv (eller föreskrifter), under förutsättning att produkterna används enligt metod i våra instruktioner:
- 12 er i overensstemmelse med følgende direktiv(er) eller forskrifter, forudsat at produktene brukes i henhold til våre instruksjoner:
- 13 ovat seurauksien direktiivien tai asetuksien mukaisia, edellyttäen että tuotetta käytetään ohjeiden mukaisesti:
- 14 jsou ve shodě s následujícími směrnici nebo předpisy za předpokladu, že tyto výrobky jsou používány v souladu s našimi pokyny:
- 15 u skladu sa splećom direktiv(na) ili oredbom(na), uz uvjet da se proizvodi koriste skladno našim uputama:
- 16 megfelelnek az alábbi irányelvek vagy egyéb szabványok(ot)nak, ha a termékeket előírás szerinti hasznájak:

- 01 as amended,
- 02 in de jeweils gültigen Fassung,
- 03 zoals que modifiées,
- 04 teals que modifiçd,
- 05 en su forma emendada,
- 06 e successive modifiche,
- 07 ömuk ёvюv, pporоmеdъpеi,

EN 60335-2-40,

- 16 Megjegyzés* al(z) <A> alapján, al(z) igazolta a megjelölést, 21 Забeмeкa* karo в кaзeнoм в <A> и cвeдeнo пoлнoмoчeнo oт <A> cтaтисчe Cертификaтa <A>
- 17 Uvaga* zgodnie z dokumentacją <A> pozytywną kapi nurodzą <A> ir įėjama nuspręsta pagal
- 22 Pastaba* vaabavajantis Sertifikatu <A>
- 23 Piezīmes* ka norāzīs <A> ir pozitīvi novērtēts saskaņā ar Sertifikātu <A>
- 24 Poznamka* ako bolo stanovené v <A> a kladne posúdené podľa Osvedčenia <A>
- 25 Not* Mis on sätestatud dokumentis <A> ja hinnatud vastavolulise dokumentis vastavalt Sertifikaadile <A>

- 13** Daikin Europe N.V. on vabaltuutud lastamaan Teknisen asakijain.
- 14** Společnost Daikin Europe N.V. má oprávnění ke kompilaci souboru technické konstrukce.
- 15** Daikin Europe N.V. je ověřen za zpracovatele a technický konstruktér.
- 16** A Daikin Europe N.V. jogosult a műszaki konstrukciós dokumentáció összeállítására.
- 17** Daikin Europe N.V. má upovaženie do zberania i opracowywania dokumentacji konstrukcyjnej.
- 18** Daikin Europe N.V. este autorizat să compileze Dosarul Tehnic de construcție.

- 19** Daikin Europe N.V. je pooblaščen za sestavo datoteke s tehnično mapo.
- 20** Daikin Europe N.V. on voluttuut kostaana tehniisi dokumentaatsiooni.
- 21** Daikin Europe N.V. e oropkapapaa ja oacraai Ara za tekniseesa kostrutyvua.
- 22** Daikin Europe N.V. yra įgalia sudaryti šį techniški konstrukcijų failą.
- 23** Daikin Europe N.V. ir autorizēts sastādīt tehniskā konstruktiojli.
- 24** Spoločnosť Daikin Europe N.V. je oprávnená vyvívať soft technické konštrukcie.
- 25** Daikin Europe N.V. Doyasym dielenye je jebitliir.

UKCA – Safety declaration of conformity

Daikin Europe N.V.

declares under its sole responsibility that the products to which this declaration relates:

ATXTP25M5V1B, ATXTP35M5V1B, FTXTP25M5V1B, FTXTP35M5V1B,

are in conformity with the following directive(s) or regulation(s), provided that the products are used in accordance with our instructions:

- S.I. 2008/1597: Supply of Machinery (Safety) Regulations 2008**
- S.I. 2016/1101: Electrical Equipment (Safety) Regulations 2016
- S.I. 2016/1091: Electromagnetic Compatibility Regulations 2016*

as amended,

following the provisions of: BS EN 60335-2-40,

* as set out in <A> and judged positively by according to the **Certificate <C>**.

** Daikin Europe N.V. is authorised to compile the Technical Construction File.

<A>	DAIKIN.TCF.032E12/06-2021
	—
<C>	—

UKCA – Safety declaration of conformity

Daikin Europe N.V.

declares under its sole responsibility that the products to which this declaration relates:

FTXTP25N5V1B, FTXTP35N5V1B,

are in conformity with the following directive(s) or regulation(s), provided that the products are used in accordance with our instructions:

- S.I. 2008/1597: Supply of Machinery (Safety) Regulations 2008**
- S.I. 2016/1101: Electrical Equipment (Safety) Regulations 2016
- S.I. 2016/1091: Electromagnetic Compatibility Regulations 2016*

as amended,

following the provisions of: BS EN 60335-2-40,

* as set out in <A> and judged positively by according to the **Certificate <C>**.

** Daikin Europe N.V. is authorised to compile the Technical Construction File.

<A>	DAIKIN.TCF.032F02/06-2023
	—
<C>	—



Hiromitsu Iwasaki

Director

Ostend, 3rd of July 2023

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Table of contents

1	About the documentation	6
1.1	About this document.....	6
2	Specific installer safety instructions	6
3	About the box	8
3.1	Indoor unit	8
3.1.1	To remove the accessories from the indoor unit	8
4	About the unit	8
4.1	About the wireless LAN	8
4.1.1	Precautions when using the wireless LAN	8
4.1.2	Basic parameters	8
5	Unit installation	8
5.1	Preparing the installation site	8
5.1.1	Installation site requirements of the indoor unit	8
5.2	Mounting the indoor unit.....	9
5.2.1	To install the mounting plate	9
5.2.2	To drill a wall hole	9
5.2.3	To remove the pipe port cover	9
5.3	Connecting the drain piping.....	10
5.3.1	To connect the piping on right side, right-back, or right-bottom.....	10
5.3.2	To connect the piping on left side, left-back, or left-bottom	10
5.3.3	To check for water leaks	10
6	Piping installation	10
6.1	Preparing refrigerant piping.....	10
6.1.1	Refrigerant piping requirements.....	10
6.1.2	Refrigerant piping insulation	11
6.2	Connecting the refrigerant piping	11
6.2.1	To connect the refrigerant piping to the indoor unit	11
6.2.2	To check refrigerant piping joints for leaks after charging refrigerant.....	11
7	Electrical installation	11
7.1	Specifications of standard wiring components	11
7.2	To connect the electrical wiring to the indoor unit	12
8	Finishing the indoor unit installation	12
8.1	To insulate the drain piping, refrigerant piping and interconnection cable	12
8.2	To pass the pipes through the wall hole.....	13
8.3	To fix the unit on the mounting plate	13
9	Wireless LAN adapter installation	13
9.1	To install the adapter	13
9.1.1	To connect the adapter with the unit.....	13
9.1.2	To place the adapter into the unit	14
9.1.3	To check the functionality of the adapter	14
9.2	Setting the wireless LAN	14
9.2.1	To install the ONECTA app.....	14
10	Configuration	14
11	Commissioning	14
11.1	Checklist before commissioning	15
11.2	To perform a test run	15
11.2.1	To perform a test run in winter season	15
12	Disposal	15
13	Technical data	15
13.1	Wiring diagram	15
13.1.1	Unified wiring diagram legend.....	15

1 About the documentation

1.1 About this document

**WARNING**

Make sure installation, servicing, maintenance, repair and applied materials follow the instructions from Daikin (including all documents listed in "Documentation set") and, in addition, comply with applicable legislation and are performed by qualified persons only. In Europe and areas where IEC standards apply, EN/IEC 60335-2-40 is the applicable standard.

**INFORMATION**

Make sure that the user has the printed documentation and ask him/her to keep it for future reference.

Target audience

Authorised installers

**INFORMATION**

This appliance is intended to be used by expert or trained users in shops, in light industry, and on farms, or for commercial and household use by lay persons.

Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
 - Safety instructions that you **MUST** read before installing
 - Format: Paper (in the box of the indoor unit)
- **Indoor unit installation manual:**
 - Installation instructions
 - Format: Paper (in the box of the indoor unit)
- **Installer reference guide:**
 - Preparation of the installation, good practices, reference data,...
 - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

Scan the QR code below to find the full documentation set and more information about your product on Daikin website.



FTXTP-M



FTXTP-N

The original instructions are written in English. All other languages are translations of the original instructions.

Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

2 Specific installer safety instructions

Always observe the following safety instructions and regulations.

Unit installation (see "5 Unit installation" ▶ 8)



WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.



WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.



CAUTION

For walls containing a metal frame or a metal board, use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.

Piping installation (see "6 Piping installation" ▶ 10)



CAUTION

Piping and joints of a split system shall be made with permanent joints when inside an occupied space except joints directly connecting the piping to the indoor units.



DANGER: RISK OF BURNING/SCALDING



CAUTION

- Incomplete flaring may cause refrigerant gas leakage.
- Do NOT re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.

Electrical installation (see "7 Electrical installation" ▶ 11)



DANGER: RISK OF ELECTROCUTION



WARNING

ALWAYS use multicore cable for power supply cables.



WARNING

- All wiring MUST be performed by an authorised electrician and MUST comply with the applicable national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction MUST comply with the applicable legislation.



WARNING

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shock.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT use taped wires, extension cords, or connections from a star system. They can cause overheating, electrical shock or fire.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.



WARNING

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.



WARNING

If the supply cord is damaged, it MUST be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



WARNING

Do NOT connect the power supply to the indoor unit. This could result in electrical shock or fire.



WARNING

- Do NOT use locally purchased electrical parts inside the product.
- Do NOT branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.



WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.

Wireless LAN adapter installation (see "9 Wireless LAN adapter installation" ▶ 13)



DANGER: RISK OF ELECTROCUTION

- Turn off the power supply before installing the adapter.
- Do NOT handle the adapter with wet hands.
- Do NOT let the adapter get wet.
- Do NOT disassemble, modify or repair the adapter.
- Grip the connector when disconnecting the connecting cord.
- Turn OFF the power supply in case the adapter gets damaged.

3 About the box


3 About the box

3.1 Indoor unit

3.1.1 To remove the accessories from the indoor unit

1 Remove:

- the accessory bag located at the bottom of the package,
- the mounting plate attached to the back of the indoor unit.

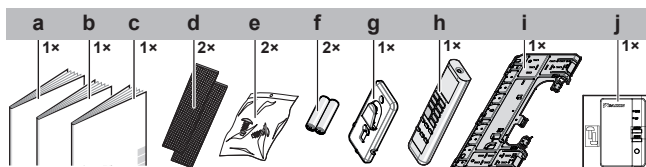

- a Installation manual
- b Operation manual
- c General safety precautions
- d Titanium apatite deodorising filter and the silver particle filter (Ag-ion filter)
- e Indoor unit fixing screw (M4×12L). Refer to "8.3 To fix the unit on the mounting plate" ▶ 13].
- f Dry battery AAA.LR03 (alkaline) for user interface
- g User interface holder
- h User interface
- i Mounting plate
- j Wireless LAN adapter

4 About the unit



WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.

4.1 About the wireless LAN

- Wireless LAN adapter is part of the accessory bag.

For detailed specifications, installation instructions, setting methods, FAQ, declaration of conformity and the latest version of this manual, visit app.daikineurope.com.



INFORMATION: Declaration of conformity

- Daikin Industries Czech Republic s.r.o. declares that the radio equipment type inside of this unit is in compliance with Directive 2014/53/EU and S.I. 2017/1206: Radio Equipment Regulations 2017.
- This unit is considered as combined equipment according to the definition of Directive 2014/53/EU and S.I. 2017/1206: Radio Equipment Regulations 2017.



INFORMATION

Install the wireless LAN adapter after finishing the indoor unit installation. Refer to "9 Wireless LAN adapter installation" ▶ 13].

4.1.1 Precautions when using the wireless LAN

Do NOT use near:

- Medical equipment.** E.g. persons using cardiac pacemakers or defibrillators. This product may cause electromagnetic interference.
- Auto-control equipment.** E.g. automatic doors or fire alarm equipment. This product may cause faulty behaviour of the equipment.
- Microwave oven.** It may affect wireless LAN communications.

4.1.2 Basic parameters

What	Value
Frequency range	2400 MHz~2483.5 MHz
Radio protocol	IEEE 802.11b/g/n
Radio frequency channel	1~11
Output power	0 dBm~18 dBm
Effective radiated power	17 dBm (11b) / 13 dBm (11g) / 12 dBm (11n)
Power supply	DC 14 V / 100 mA

5 Unit installation



INFORMATION

If you are not sure how to open or close parts of the unit (front panel, electrical wiring box, front grille...) refer to the installer reference guide of the unit for opening and closing procedures. For location of the installer reference guide see "1.1 About this document" ▶ 6].



WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.

5.1 Preparing the installation site



WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.


5.1.1 Installation site requirements of the indoor unit



INFORMATION

The sound pressure level is less than 70 dBA.


- Air flow.** Make sure nothing blocks the air flow.
- Drainage.** Make sure condensation water can be evacuated properly.
- Wall insulation.** When conditions in the wall exceed 30°C and a relative humidity of 80%, or when fresh air is inducted into the wall, then additional insulation is required (minimum 10 mm thickness, polyethylene foam).
- Wall strength.** Check whether the wall or the floor is strong enough to support the weight of the unit. If there is a risk, reinforce the wall or the floor before installing the unit.
- Spacing.** Install the unit at least 1.8 m from the floor and keep the following requirements in mind for distances from the walls and the ceiling:

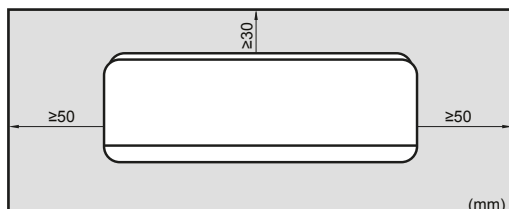

5.2 Mounting the indoor unit

5.2.1 To install the mounting plate


- 1 Install the mounting plate temporarily.
- 2 Level the mounting plate.

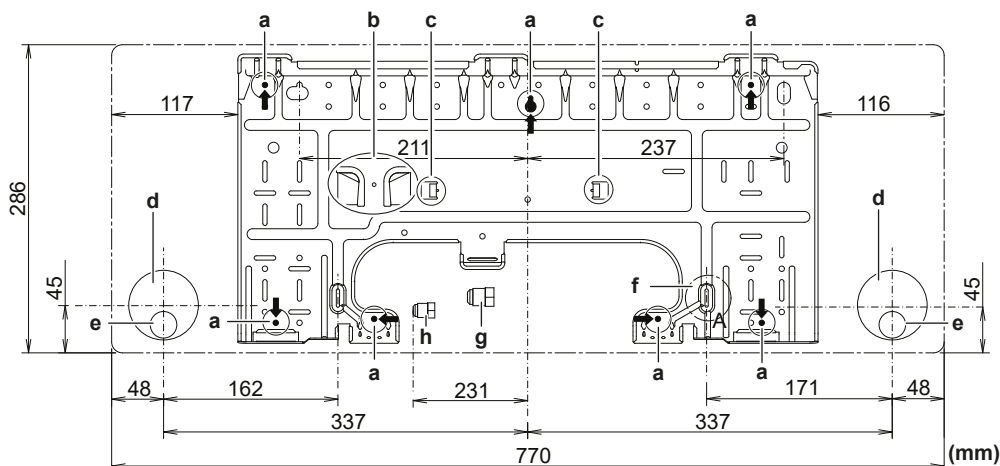

- a Recommended mounting plate fixing spots
- b Pocket for the pipe port cover
- c Tabs for placing a spirit level
- d Through-the-wall hole Ø65 mm

- f Position for the tape measure at symbol "▷"
- g Gas pipe end
- h Liquid pipe end
- e Drain hose position

- 3 Mark the centres of the drilling points on the wall using a tape measure. Position the end of tape measure at symbol "▷".
- 4 Finish the installation by securing the mounting plate on the wall using M4×25L screws (field supply).

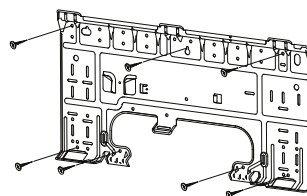

INFORMATION

The removed pipe port cover can be kept in the mounting plate pocket.

5.2.2 To drill a wall hole



CAUTION


For walls containing a metal frame or a metal board, use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.



NOTICE

Be sure to seal the gaps around the pipes with sealing material (field supply), in order to prevent water leakage.

- 1 Bore a 65 mm large feed-through hole in the wall with a downward slope towards the outside.
- 2 Insert a wall embedded pipe into the hole.
- 3 Insert a wall cover into the wall pipe.

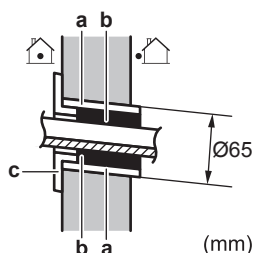

- a Wall embedded pipe
- b Putty
- c Wall hole cover

- 4 After completing wiring, refrigerant piping and drain piping, do NOT forget to seal the gap with putty.


5.2.3 To remove the pipe port cover




INFORMATION

To connect the piping on right-side, right-bottom, left-side or left-bottom, the pipe port cover MUST be removed.

- 1 Cut off the pipe port cover from inside the front grille using a coping saw.

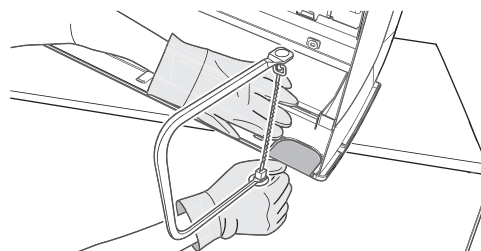

- 2 Remove any burrs along the cut section using a half round needle file.

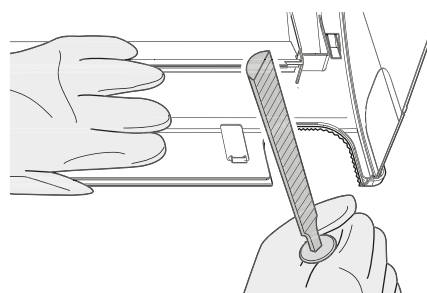

6 Piping installation



NOTICE

Do NOT use nippers to remove the pipe port cover, as this would damage the front grille.

5.3 Connecting the drain piping


5.3.1 To connect the piping on right side, right-back, or right-bottom



INFORMATION

The factory default is right-side piping. For left-side piping, remove the piping from the right side and install it on the left side.

- 1 Attach the drain hose with adhesive vinyl tape to the bottom of the refrigerant pipes.
- 2 Wrap the drain hose and the refrigerant pipes together using insulation tape.

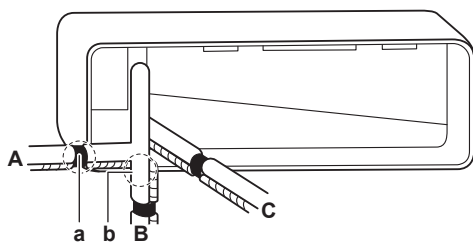

- A Right-side piping
- B Right-bottom piping
- C Right-back piping
- a Remove the pipe port cover here for right side piping
- b Remove the pipe port cover here for right-bottom piping

5.3.2 To connect the piping on left side, left-back, or left-bottom



INFORMATION

The factory default is right-side piping. For left-side piping, remove the piping from the right side and install it on the left side.


- 1 Remove the insulation fixing screw on the right side and remove the drain hose.
- 2 Remove the drain plug on the left side and attach it to the right side.



NOTICE


Do NOT apply lubricating oil (refrigerant oil) to the drain plug when inserting it. The drain plug may deteriorate and cause drain leakage from the plug.

- 3 Insert the drain hose on the left side and do not forget to tighten it with the fixing screw; otherwise water leakage may occur.

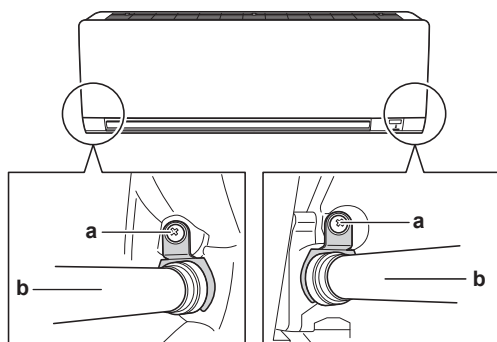

- a Insulation fixing screw
- b Drain hose


- 4 Attach the drain hose to the refrigerant piping bottom side using adhesive vinyl tape.

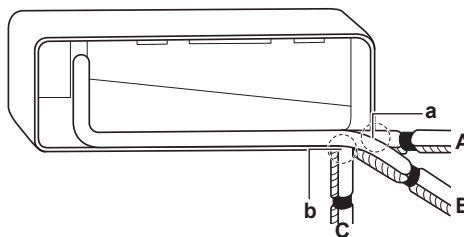

- A Left-side piping
- B Left-back piping
- C Left-bottom piping
- a Remove the pipe port cover here for left-side piping
- b Remove the pipe port cover here for left-bottom piping

5.3.3 To check for water leaks

- 1 Remove the air filters.
- 2 Gradually pour approximately 1 l of water in the drain pan, and check for water leaks.

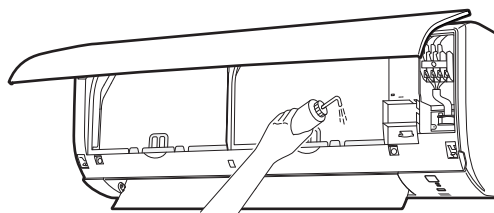

6 Piping installation

6.1 Preparing refrigerant piping

6.1.1 Refrigerant piping requirements



CAUTION

Piping and joints of a split system shall be made with permanent joints when inside an occupied space except joints directly connecting the piping to the indoor units.



NOTICE

The piping and other pressure-containing parts shall be suitable for refrigerant. Use phosphoric acid deoxidised seamless copper for refrigerant piping.

- Foreign materials inside pipes (including oils for fabrication) must be ≤ 30 mg/10 m.

Refrigerant piping diameter

Use the same diameters as the connections on the outdoor units:

Liquid piping	Gas piping
$\varnothing 6.4$ mm	$\varnothing 9.5$ mm

Refrigerant piping material

- Piping material:** phosphoric acid deoxidised seamless copper
- Flare connections:** Only use annealed material.
- Piping temper grade and thickness:**

Outer diameter ($\varnothing$)	Temper grade	Thickness (t) ^(a)	
6.4 mm (1/4")	Annealed (O)	≥ 0.8 mm	
9.5 mm (3/8")	Annealed (O)		

^(a) Depending on the applicable legislation and the maximum working pressure of the unit (see "PS High" on the unit name plate), larger piping thickness might be required.

6.1.2 Refrigerant piping insulation

- Use polyethylene foam as insulation material:
 - with a heat transfer rate between 0.041 and 0.052 W/mK (0.035 and 0.045 kcal/mh°C)
 - with a heat resistance of at least 120°C
- Insulation thickness

Pipe outer diameter ($\varnothing_p$)	Insulation inner diameter ($\varnothing_i$)	Insulation thickness (t)
6.4 mm (1/4")	8~10 mm	≥10 mm
9.5 mm (3/8")	10~14 mm	≥13 mm



If the temperature is higher than 30°C and the humidity is higher than RH 80%, the thickness of the insulation materials should be at least 20 mm to prevent condensation on the surface of the insulation.

6.2 Connecting the refrigerant piping



DANGER: RISK OF BURNING/SCALDING


6.2.1 To connect the refrigerant piping to the indoor unit



WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.

- Pipe length.** Keep refrigerant piping as short as possible.
 - Connect refrigerant piping to the unit using **flare connections**.
 - Wrap the refrigerant piping connection using vinyl tape, overlapping at least half the width of the tape with each turn. Keep the slit of the heat insulation pipe cover up. Avoid wrapping the tape too tight.

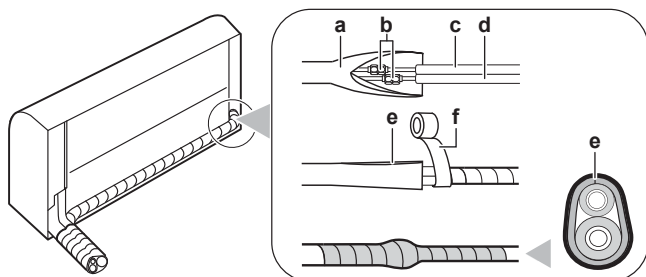

- a Heat insulation pipe cover (on the indoor unit side)
- b Flare connections
- c Liquid pipe (with insulation) (field supply)
- d Gas pipe (with insulation) (field supply)
- e Slit on heat insulation pipe cover facing up
- f Vinyl tape (field supply)

- Insulate** the refrigerant piping, interconnection cable and drain hose on the indoor unit: See ["8.1 To insulate the drain piping, refrigerant piping and interconnection cable"](#) ▶ 12].



NOTICE

Make sure to insulate all refrigerant piping. Any exposed piping might cause condensation.

6.2.2 To check refrigerant piping joints for leaks after charging refrigerant

- Perform the leak tests according to instructions in the outdoor unit installation manual.
- Charge refrigerant.
- Check for refrigerant leaks after charging (see below).

Tightness test of field-made refrigerant joints indoors

- Use a leakage test method with a minimum sensitivity of 5 g of refrigerant/year. Test leaks using a pressure of at least 0.25 times the maximum working pressure (see "PS High" on the unit nameplate).

If a leak is detected

- Recover the refrigerant, repair the joint, and repeat the test.

7 Electrical installation



DANGER: RISK OF ELECTROCUTION



WARNING

ALWAYS use multicore cable for power supply cables.



WARNING

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.



WARNING

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



WARNING

Do **NOT** connect the power supply to the indoor unit. This could result in electrical shock or fire.



WARNING

- Do **NOT** use locally purchased electrical parts inside the product.
- Do **NOT** branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.



WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.

7.1 Specifications of standard wiring components



NOTICE

We recommend using solid (single-core) wires. If stranded wires are used, slightly twist the strands to consolidate the end of the conductor for either direct use in the terminal clamp or insertion in a round crimp-style terminal. Details are described in "Guidelines when connecting the electrical wiring" in the installer reference guide.

8 Finishing the indoor unit installation

Component		
Interconnection cable (indoor↔outdoor)	Voltage	220~240 V
	Wire size	Only use harmonized wire providing double insulation and suitable for applicable voltage 4-core cable 1.5 mm ² ~2.5 mm ² (based on outdoor unit)

7.2 To connect the electrical wiring to the indoor unit



WARNING

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.




NOTICE

- Keep the power line and transmission line apart from each other. Transmission wiring and power supply wiring may cross, but may NOT run parallel.
- In order to avoid any electrical interference, the distance between both wirings should ALWAYS be at least 50 mm.

Electrical work should be carried out in accordance with the installation manual and the national electrical wiring rules or code of practice.

- Set the indoor unit on the mounting plate hooks. Use the "△" marks as a guide.

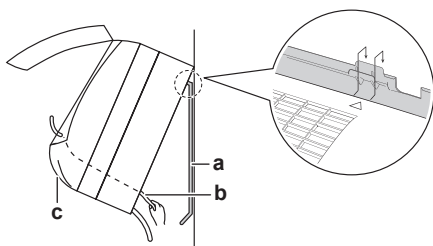


- a Mounting plate (accessory)
- b Interconnection cable
- c Wire guide

- Open the front panel, and then the service cover. Refer to the Installer reference guide for opening procedure. For location of the installer reference guide refer to "[1 About the documentation](#)" [p. 6].
- Pass the interconnection cable from the outdoor unit through the feed-through wall hole, through the back of the indoor unit and through the front side.

Note: In case the interconnection cable was stripped in advance, cover the ends with insulating tape.


- Bend the end of the cable up.

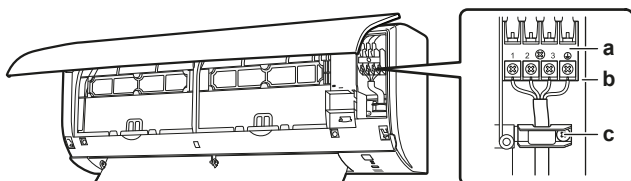

- a Terminal block
- b Electrical component block
- c Cable clamp


- Strip the wire ends approximately 15 mm.

- Match wire colours with terminal numbers on the indoor unit terminal blocks and firmly screw the wires to the corresponding terminals.
- Connect the earth wire to the corresponding terminal.
- Firmly fix the wires with the terminal screws.
- Pull the wires to make sure that they are securely attached, then retain the wires with the wire retainer.
- Shape the wires so that the service cover fits securely, then close the service cover.

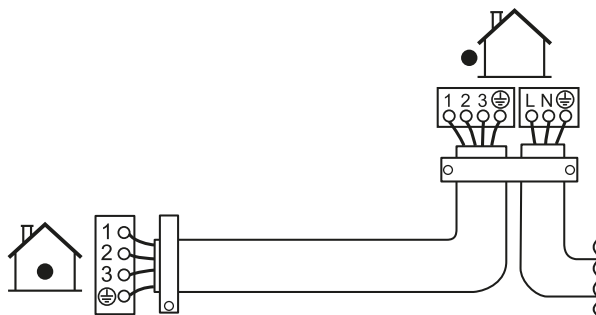


8 Finishing the indoor unit installation

8.1 To insulate the drain piping, refrigerant piping and interconnection cable

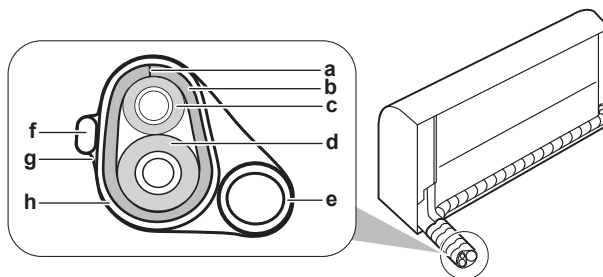

- a Slit
- b Heat insulation pipe cover
- c Liquid pipe
- d Gas pipe
- e Drain pipe
- f Interconnection wire
- g Insulation tape
- h Vinyl tape


- After the drain piping, refrigerant piping and the electrical wiring are finished. Wrap refrigerant piping, interconnection cable and drain hose together using insulation tape. Overlap at least half the width of the tape with each turn.

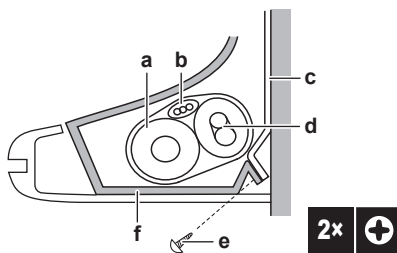

- a Drain hose
- b Interconnection cable
- c Mounting plate (accessory)
- d Refrigerant piping
- e Indoor unit fixing screw M4×12L (accessory)
- f Bottom frame

8.2 To pass the pipes through the wall hole

- 1 Shape the refrigerant pipes along the pipe path marking on the mounting plate.

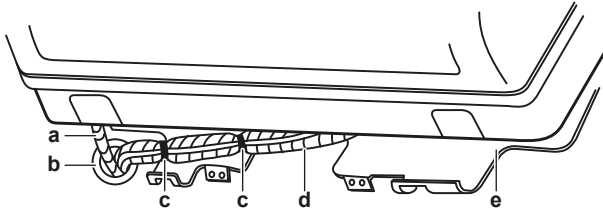


- a Drain hose
- b Caulk this hole with putty or caulking material
- c Adhesive vinyl tape
- d Insulation tape
- e Mounting plate (accessory)



NOTICE


- Do NOT bend refrigerant pipes.
- Do NOT push the refrigerant pipes onto the bottom frame or the front grille.

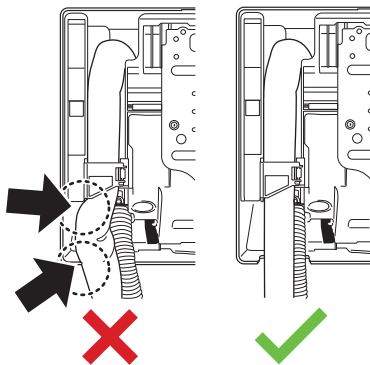

- 2 Pass the drain hose and refrigerant piping through the wall hole and seal the gap with a putty.

8.3 To fix the unit on the mounting plate

- 1 Set the indoor unit on the mounting plate hooks. Use the "△" marks as a guide.

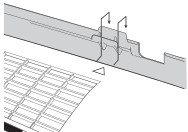

- 2 Press the bottom frame of the unit with both hands to set it on the bottom hooks of the mounting plate. Make sure that the wires do NOT get squeezed anywhere.

Note: Take care that the interconnection cable does NOT get caught in the indoor unit.

- 3 Press the bottom edge of the indoor unit with both hands until it is firmly caught by the mounting plate hooks.
- 4 Secure the indoor unit to the mounting plate using 2 indoor unit fixing screws M4×12L (accessory).

9 Wireless LAN adapter installation

- Wireless LAN adapter is part of the accessory bag.

9.1 To install the adapter




DANGER: RISK OF ELECTROCUTION

- Turn off the power supply before installing the adapter.
- Do NOT handle the adapter with wet hands.
- Do NOT let the adapter get wet.
- Do NOT disassemble, modify or repair the adapter.
- Grip the connector when disconnecting the connecting cord.
- Turn off the power supply in case the adapter gets damaged.


9.1.1 To connect the adapter with the unit

- 1 Remove the tape holding the connecting cord connector.

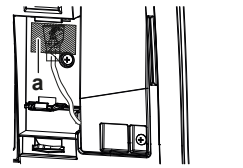


a Tape

- 2 Cut the clip and remove the connector from the protection sleeve.

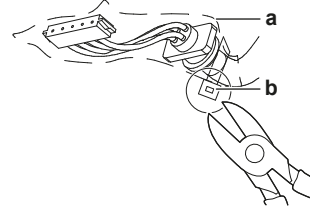


a Protection sleeve
b Clip

- 3 Remove the upper case of the wireless LAN adapter.

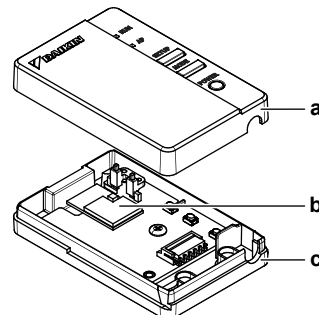

a Upper case
b Printed circuit board of the wireless LAN adapter
c Lower case

- 4 Attach the connecting cord connector (white).

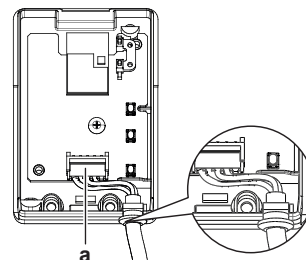


a Connector


- 5 Fasten the connecting cord to the notch in the adapter case (lower). Ensure that external force is not transmitted.

10 Configuration

- 6 Snap the top of the upper case into the clip at the top of the lower case and press to close the box.

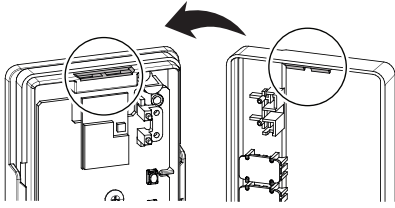


- 7 Fix the upper adapter case with 2 screws (accessory).

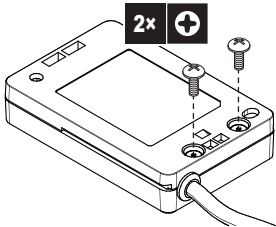


9.1.2 To place the adapter into the unit

- 1 Place the wireless LAN adapter against the hooks.

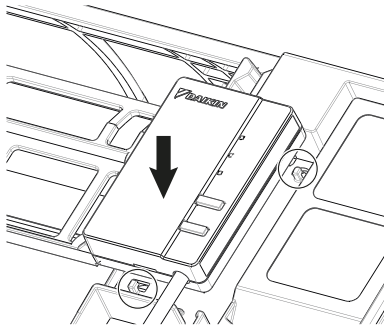


- 2 Lock the adapter by pressing it down.

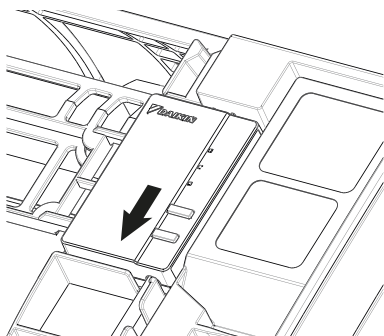

- 3 To remove the adapter, perform the installation steps in reverse order.

9.1.3 To check the functionality of the adapter

- 1 Turn on the power supply and check that the RUN lamp of the product blinks.

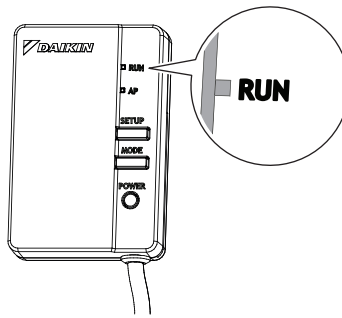

9.2 Setting the wireless LAN

The customer is responsible for providing:

- Smartphone or tablet with minimum supported version of Android or iOS, specified on app.daikineurope.com
- Internet line and communicating device, such as modem, router, etc.
- Wireless LAN access point.
- Installed free ONECTA application.

9.2.1 To install the ONECTA app

- 1 Go to Google Play (for Android devices) or the App Store (for iOS devices) and search for "ONECTA".
- 2 Follow the directions on the screen to install the ONECTA app.



INFORMATION

Scan the QR code to download and install the ONECTA app on your mobile phone or tablet:



10 Configuration



INFORMATION

In case 2 indoor units are installed in 1 room, set different addresses for 2 user interfaces. For procedure refer to the installer reference guide, for location see "1.1 About this document" [p. 6].

11 Commissioning



NOTICE

General commissioning checklist. Next to the commissioning instructions in this chapter, a general commissioning checklist is also available on the Daikin Business Portal (authentication required).

The general commissioning checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during commissioning and hand-over to the user.



NOTICE

ALWAYS operate the unit with thermistors and/or pressure sensors/switches. If NOT, burning of the compressor might be the result.

11.1 Checklist before commissioning

- 1 After the installation of the unit, check the items listed below.
- 2 Close the unit.
- 3 Power up the unit.

☐	You read the complete installation instructions, as described in the installer reference guide .
☐	The indoor units are properly mounted.
☐	The outdoor unit is properly mounted.
☐	Air inlet/outlet Check that the air inlet and outlet of the unit is NOT obstructed by paper sheets, cardboard, or any other material.
☐	There are NO missing phases or reversed phases .
☐	The refrigerant pipes (gas and liquid) are thermally insulated.
☐	Drainage Make sure drainage flows smoothly. Possible consequence: Condensate water might drip.
☐	The system is properly earthed and the earth terminals are tightened.
☐	The fuses or locally installed protection devices are installed according to this document, and have NOT been bypassed.
☐	The power supply voltage matches the voltage on the identification label of the unit.
☐	The specified wires are used for the interconnection cable .
☐	The indoor unit receives the signals of the user interface .
☐	There are NO loose connections or damaged electrical components in the switch box.
☐	The insulation resistance of the compressor is OK.
☐	There are NO damaged components or squeezed pipes on the inside of the indoor and outdoor units.
☐	There are NO refrigerant leaks .
☐	The correct pipe size is installed and the pipes are properly insulated.
☐	The stop valves (gas and liquid) on the outdoor unit are fully open.

11.2 To perform a test run

Prerequisite: Power supply MUST be in the specified range.

Prerequisite: Test run may be performed in cooling or heating mode.

Prerequisite: Test run should be performed in accordance with the operation manual of the indoor unit to make sure that all functions and parts are working properly.

- 1 In cooling mode, select the lowest programmable temperature. In heating mode, select the highest programmable temperature. Test run can be disabled if necessary.
- 2 When the test run is finished, set the temperature to a normal level. In cooling mode: 26~28°C, in heating mode: 20~24°C.
- 3 The system stops operating 3 minutes after the unit is turned OFF.

11.2.1 To perform a test run in winter season

When operating the air conditioner in **Cooling** mode in winter, set it to test run operation using the following method.

- 1 Press , , and simultaneously.
- 2 Press .
- 3 Select **7°**.
- 4 Press .
- 5 Press to switch the system on.

Result: Test run operation will stop automatically after about 30 minutes.

- 6 To stop operation, press .



INFORMATION

Some of the functions CANNOT be used in the test run operation mode.

If a power failure occurs during operation, the system automatically restarts immediately after power is restored.

12 Disposal



NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts MUST comply with applicable legislation. Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery.

13 Technical data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

13.1 Wiring diagram

The wiring diagram is delivered with the unit, located on the inner right side of the indoor unit front grille.

13.1.1 Unified wiring diagram legend

For applied parts and numbering, refer to the wiring diagram on the unit. Part numbering is by Arabic numbers in ascending order for each part and is represented in the overview below by "*" in the part code.

Symbol	Meaning	Symbol	Meaning
	Circuit breaker		Protective earth
	Connection		Protective earth (screw)
	Connector		Rectifier
	Earth		Relay connector
	Field wiring		Short-circuit connector
	Fuse		Terminal



13 Technical data



Symbol	Meaning	Symbol	Meaning
	Indoor unit		Terminal strip
	Outdoor unit		Wire clamp
	Residual current device		Heater



Symbol	Colour	Symbol	Colour
BLK	Black	ORG	Orange
BLU	Blue	PNK	Pink
BRN	Brown	PRP, PPL	Purple
GRN	Green	RED	Red
GRY	Grey	WHT	White
SKY BLU	Sky blue	YLW	Yellow

Symbol	Meaning
A*P	Printed circuit board
BS*	Pushbutton ON/OFF, operation switch
BZ, H*O	Buzzer
C*	Capacitor
AC*, CN*, E*, HA*, HE*, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A, K*R_*, NE	Connection, connector
D*, V*D	Diode
DB*	Diode bridge
DS*	DIP switch
E*H	Heater
FU*, F*U, (for characteristics, refer to PCB inside your unit)	Fuse
FG*	Connector (frame ground)
H*	Harness
H*P, LED*, V*L	Pilot lamp, light emitting diode
HAP	Light emitting diode (service monitor green)
HIGH VOLTAGE	High voltage
IES	Intelligent eye sensor
IPM*	Intelligent power module
K*R, KCR, KFR, KHuR, K*M	Magnetic relay
L	Live
L*	Coil
L*R	Reactor
M*	Stepper motor
M*C	Compressor motor
M*F	Fan motor
M*P	Drain pump motor
M*S	Swing motor
MR*, MRCW*, MRM*, MRN*	Magnetic relay
N	Neutral
n=*, N=*	Number of passes through ferrite core
PAM	Pulse-amplitude modulation
PCB*	Printed circuit board
PM*	Power module
PS	Switching power supply
PTC*	PTC thermistor
Q*	Insulated gate bipolar transistor (IGBT)

Symbol	Meaning
Q*C	Circuit breaker
Q*DI, KLM	Earth leak circuit breaker
Q*L	Overload protector
Q*M	Thermo switch
Q*R	Residual current device
R*	Resistor
R*T	Thermistor
RC	Receiver
S*C	Limit switch
S*L	Float switch
S*NG	Refrigerant leak detector
S*NPH	Pressure sensor (high)
S*NPL	Pressure sensor (low)
S*PH, HPS*	Pressure switch (high)
S*PL	Pressure switch (low)
S*T	Thermostat
S*RH	Humidity sensor
S*W, SW*	Operation switch
SA*, F1S	Surge arrester
SR*, WLU	Signal receiver
SS*	Selector switch
SHEET METAL	Terminal strip fixed plate
T*R	Transformer
TC, TRC	Transmitter
V*, R*V	Varistor
V*R	Diode bridge, Insulated-gate bipolar transistor (IGBT) power module
WRC	Wireless remote controller
X*	Terminal
X*M	Terminal strip (block)
Y*E	Electronic expansion valve coil
Y*R, Y*S	Reversing solenoid valve coil
Z*C	Ferrite core
ZF, Z*F	Noise filter

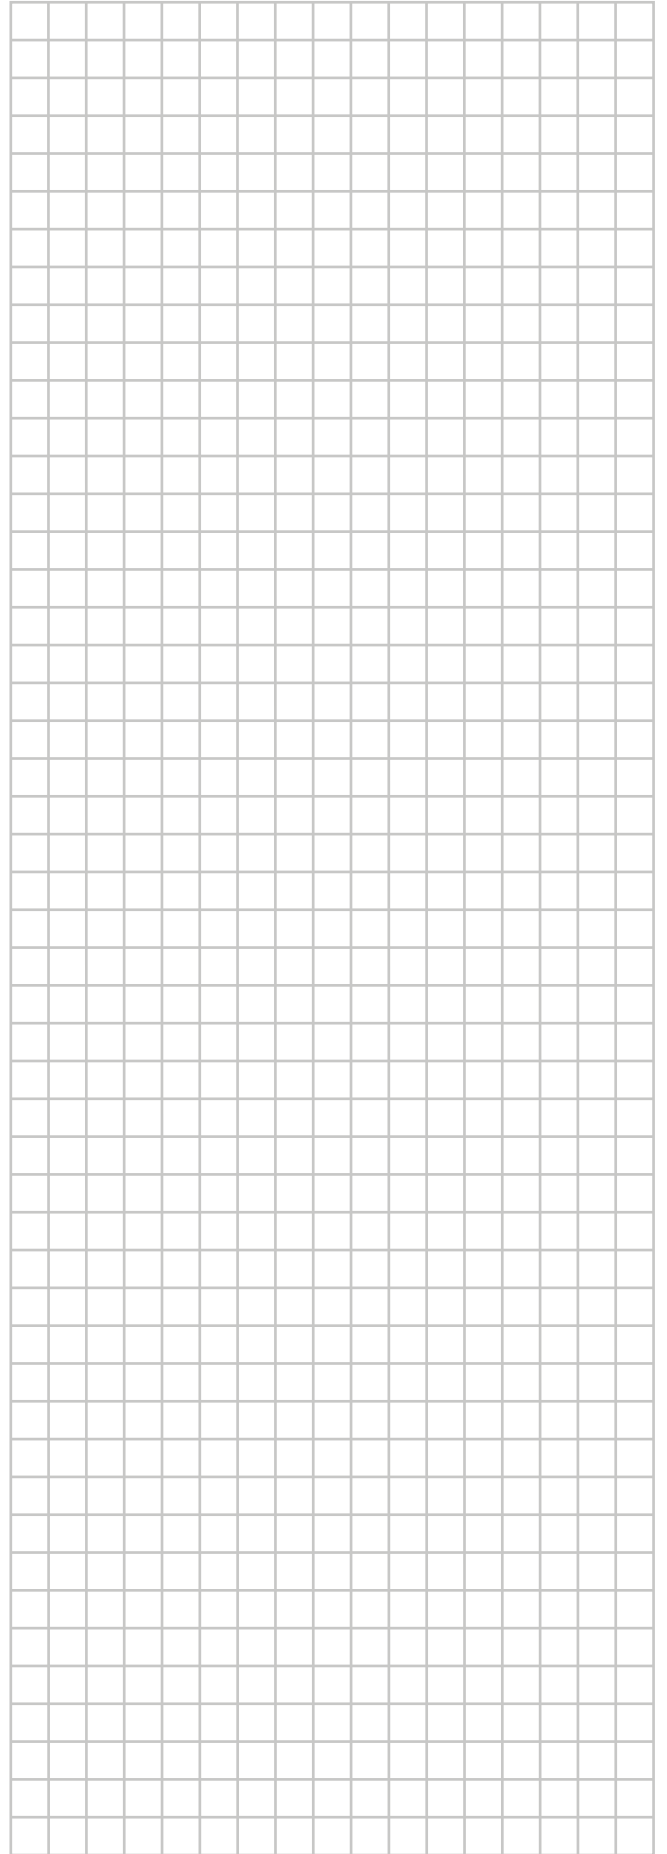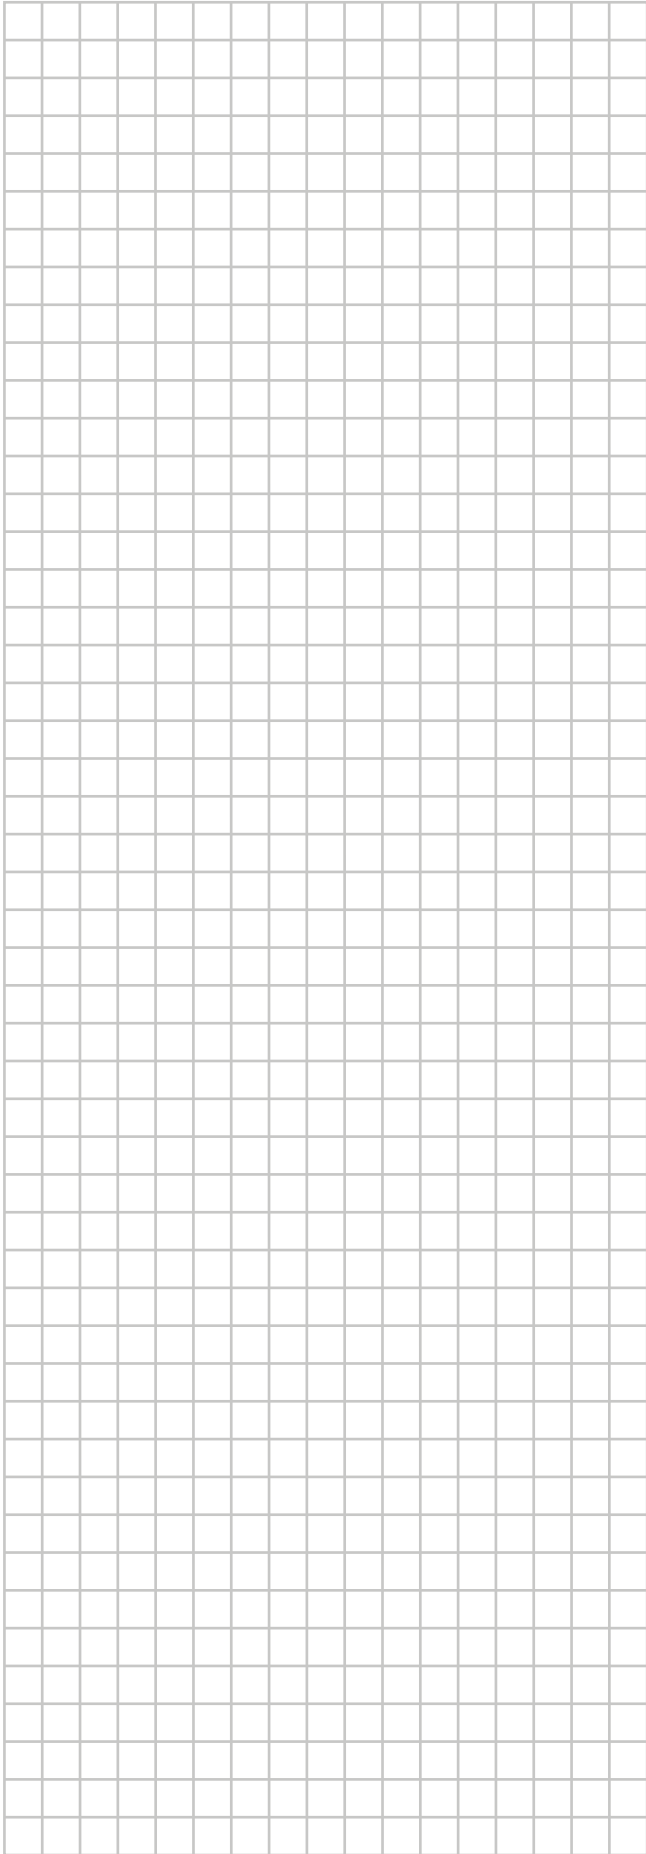

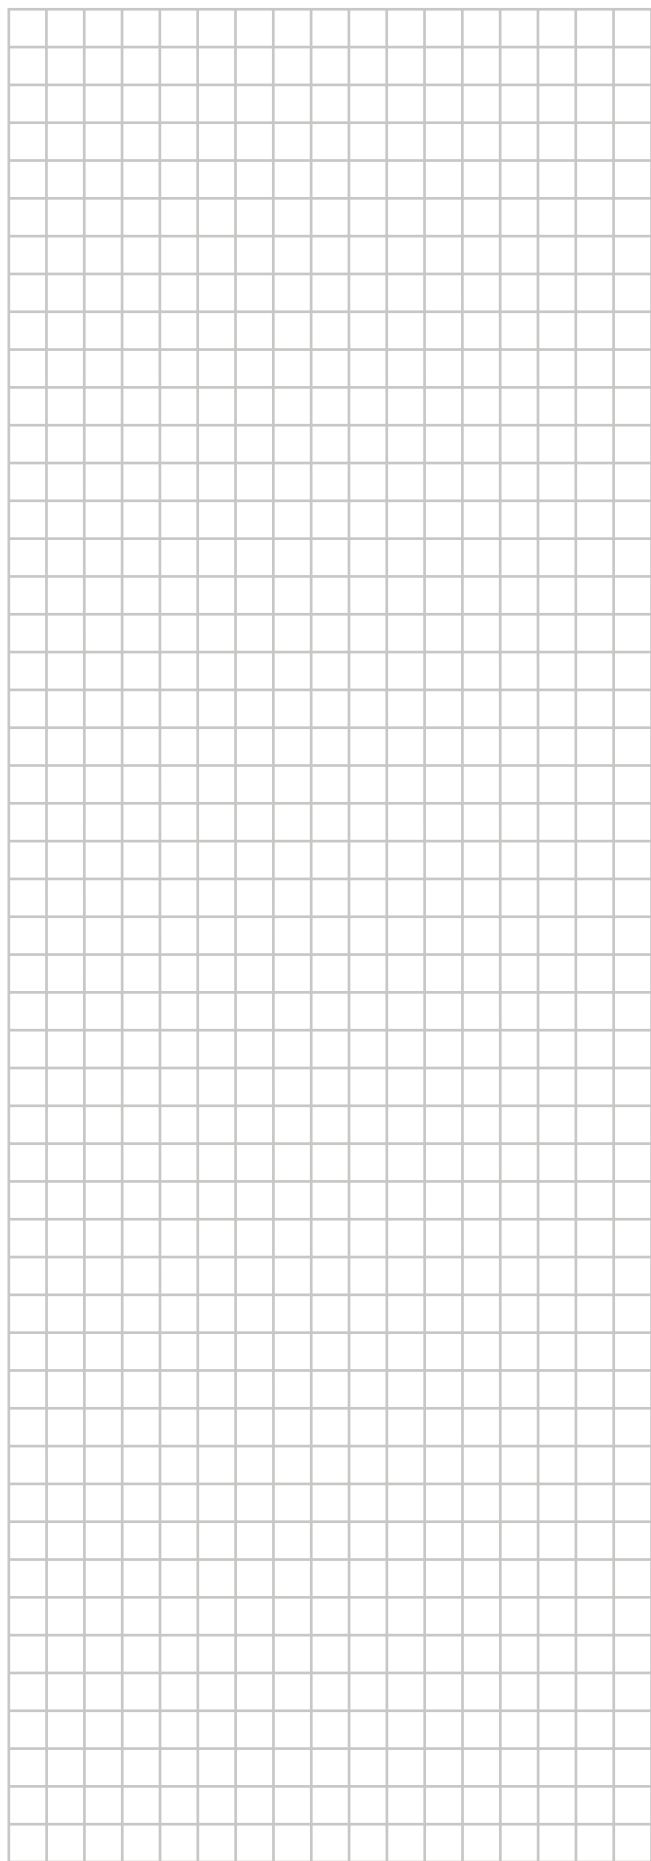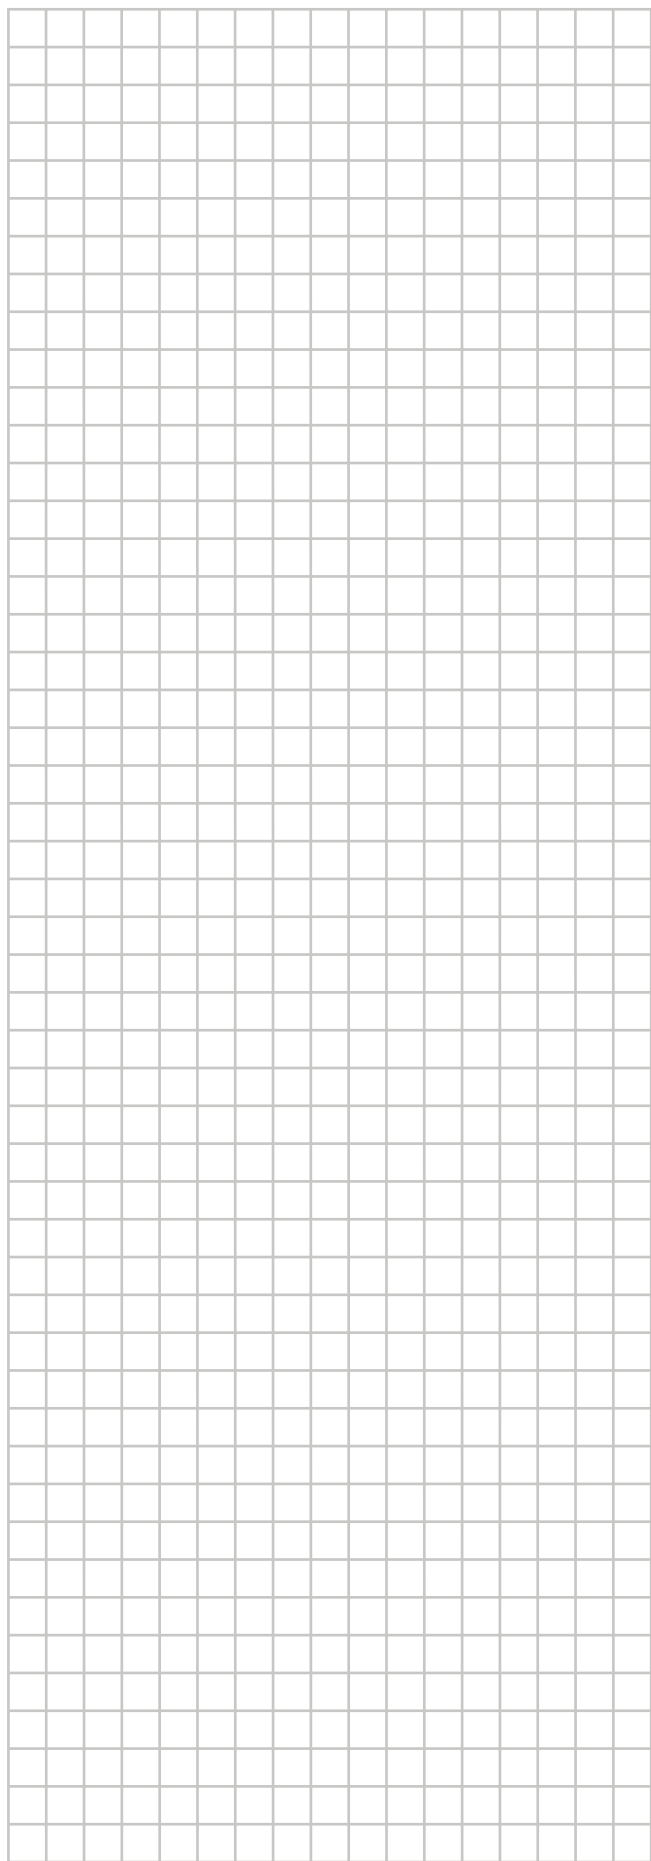

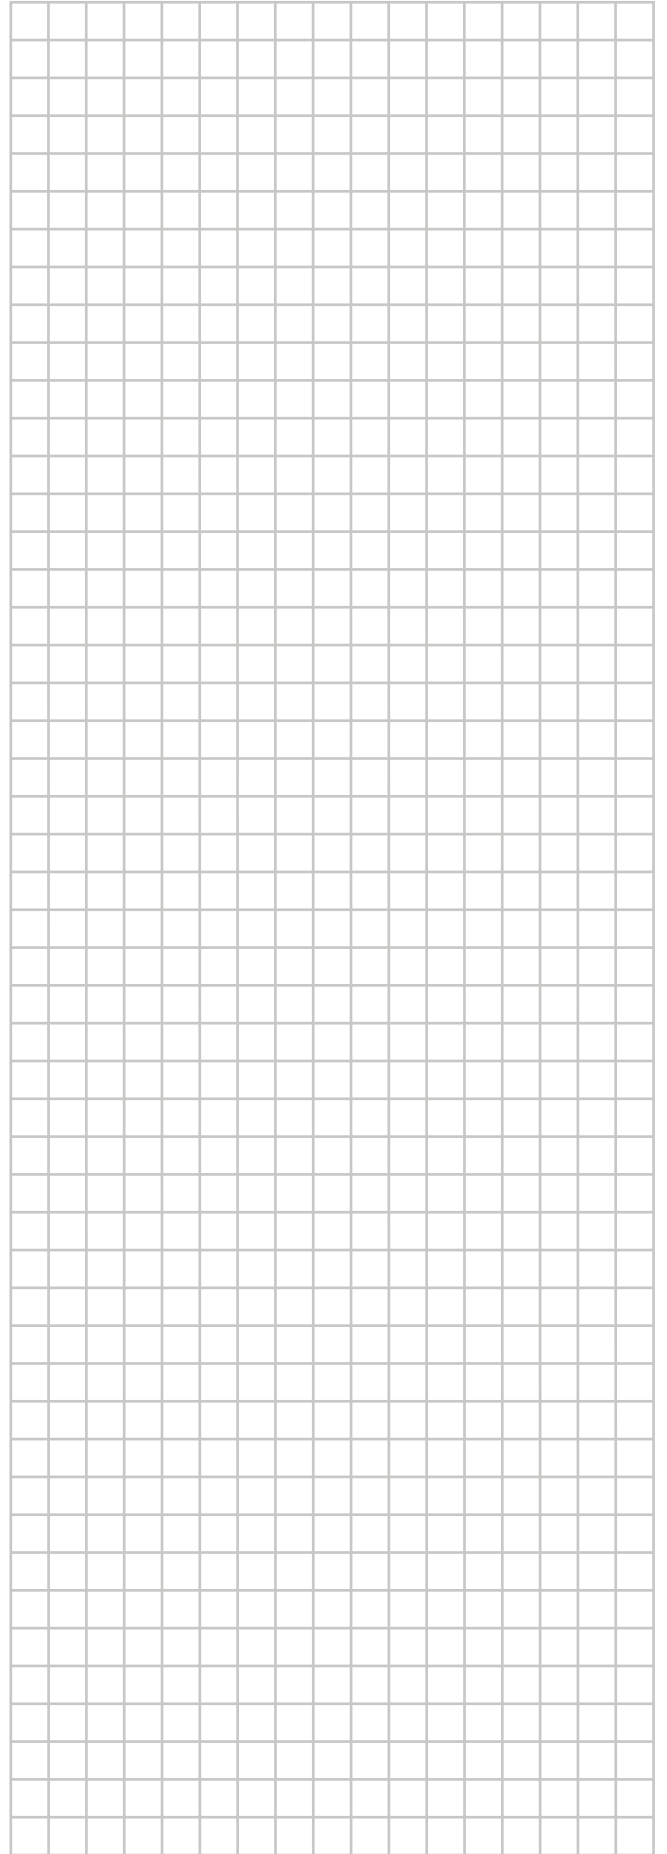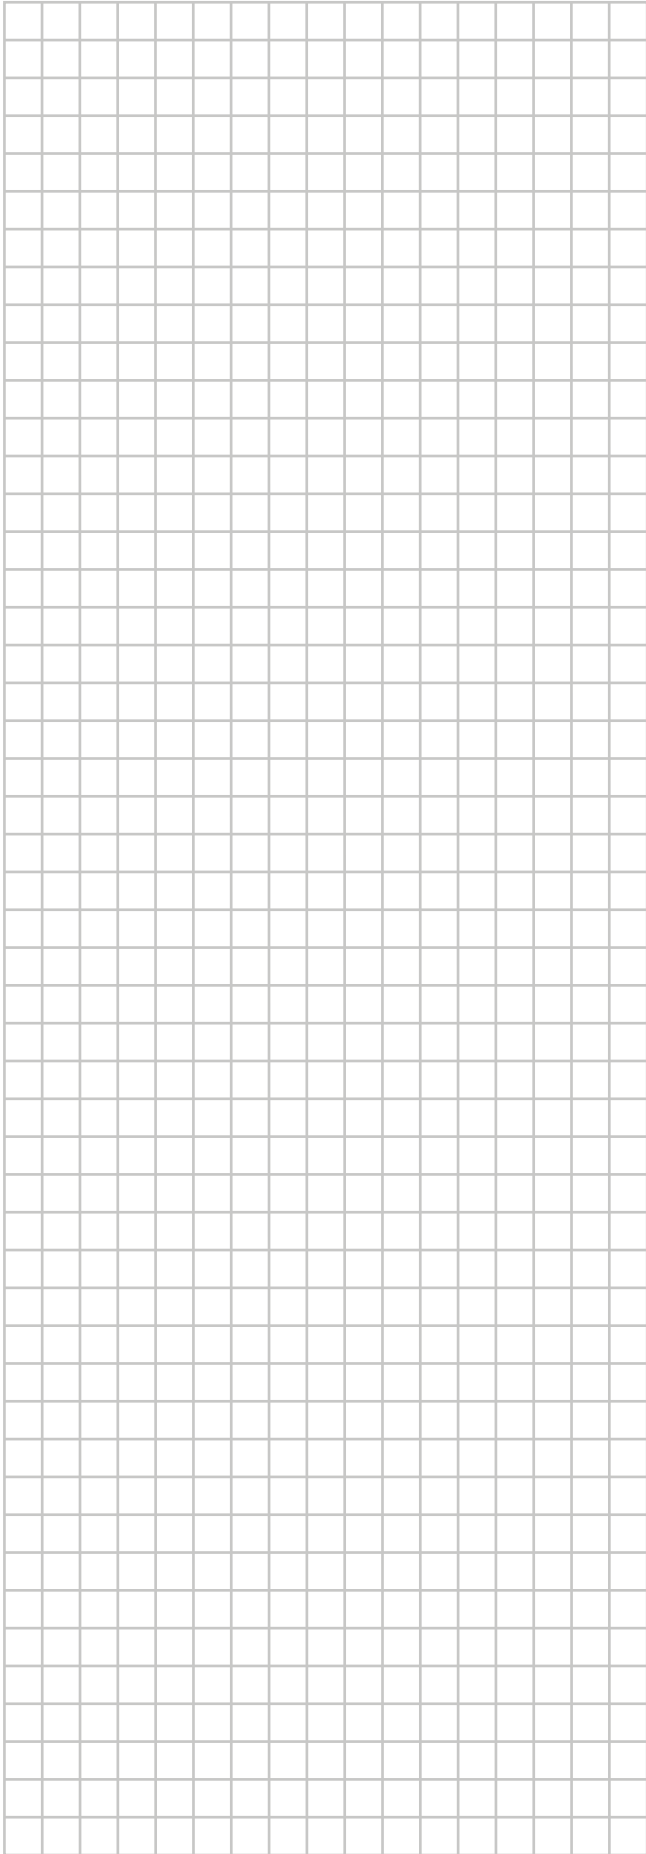



DAIKIN ISITMA VE SOĞUTMA SİSTEMLERİ SAN.TİC. A.Ş.

Gülsuyu Mahallesi, Fevzi Çakmak Caddesi, Burçak Sokak, No:20, 34848 Maltepe

İSTANBUL / TÜRKİYE

Tel: 0216 453 27 00

Faks: 0216 671 06 00

Çağrı Merkezi: 444 999 0

Web: www.daikin.com.tr

Copyright 2023 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

3P650253-16U 2023.03