



# Operation Manual

## intelligent Touch Controller



Model  
DCS601C51

- Thank you for purchasing intelligent Touch Controller.
- This operation manual contains notes for safe use of the product.  
For correct use, be sure to read this manual carefully before use.
- When you have read this manual, be sure to store it in a place where the operator can conveniently refer to at anytime.  
In case of personnel change, be sure to give the manual to the new operator.

### Before use

|   |   |
|---|---|
| Safety Considerations                                 |   |
| Be sure to follow the instructions below              | 1 |
| System Overview                                       | 3 |
| Features and Functions                                | 4 |
| Part Names and Functions                              | 5 |
| Part Names on the Monitoring Screen and the Functions |   |
| List  | 7 |
| Icon  | 9 |

Before use

### Operation

|   |    |
|---|----|
| Operation                                   |    |
| Quick Reference                             | 13 |
| Air Conditioner Operation                   | 15 |
| Monitoring the Operation of Air Conditioner | 26 |
| System Setup Menu                           | 32 |

Operation

### Maintenance

|   |    |
|---|----|
| Precautions   | 73 |
| Maintenance   |    |
| LCD Maintenance                                     | 74 |
| When Leaving the Product Turned OFF for a Long Time | 74 |
| Troubleshooting                                     | 75 |

Maintenance

### For Your Information

|                     |    |
|---------------------|----|
| Options             | 82 |
| Specification       | 83 |
| After-sales Service | 84 |

For Your Information

Use smart and save smart

# Safety Considerations


Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly.


After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained.


Also, inform customers that they should store this installation manual along with the operation manual for future reference.

This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of warning, caution and note symbols.

 **Warning** .... Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **caution** .... Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **Note** ..... Indicates situation that may result in equipment or property-damage-only accidents.

**Keep these warning sheets handy so that you can refer to them if needed.**

Also, if this equipment is transferred to a new user, make sure to hand over this operation manual to the new user.

## **Warning**

In order to avoid electric shock, fire or injury, or if you detect any abnormality such as smell of fire, turn off power and call your dealer for instructions.

**Ask your dealer for installation of the air conditioner.**

Incomplete installation performed by yourself may result in a water leakage, electric shock, and fire.

**Ask your dealer for improvement, repair, and maintenance.**

Incomplete improvement, repair, and maintenance may result in a water leakage, electric shock, and fire.

**Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin which are specifically designed for use with the equipment and have them installed by a professional.**

**Ask your dealer to move and reinstall the air conditioner or the remote controller.**

Incomplete installation may result in a water leakage, electric shock, and fire.

**Never let the indoor unit or the remote controller get wet.**

It may cause an electric shock or a fire.

**Never use flammable spray such as hair spray, lacquer or paint near the unit.**

It may cause a fire.

**Never replace a fuse with that of wrong ampere ratings or other wires when a fuse blows out.**

Use of wire or copper wire may cause the unit to break down or cause a fire.

**Never inspect or service the unit by yourself.**

Ask a qualified service person to perform this work.

**Cut off all electric waves before maintenance.**

**Do not wash the air conditioner or the remote controller with excessive water.**

Electric shock or fire may result.

Do not install the air conditioner or the remote controller at any place where flammable gas may leak out.

If the gas leaks out and stays around the air conditioner, a fire may break out.

**Do not touch the switch with wet fingers.**

Touching a switch with wet fingers can cause electric shock.

**CISPR 22 Class A Warning:**

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## — CAUTION —

**After a long use, check the unit stand and fitting for damage.**

If they are left in a damaged condition, the unit may fall and result in injury.

**Do not allow a child to mount on the unit or avoid placing any object on it.**

Falling or tumbling may result in injury.

**Do not let children play on and around the unit.**

If they touch the unit carelessly, it may result in injury.

**Do not place a flower vase and anything containing water.**

Water may enter the unit, causing an electric shock or fire.

**Never touch the internal parts of the controller.**

Do not remove the front panel. Some parts inside are dangerous to touch, and a machine trouble may happen.

For checking and adjusting the internal parts, contact your dealer.

**Avoid placing the controller in a spot splashed with water.**

Water coming inside the machine may cause an electric leak or may damage the internal electronic parts.

**Do not operate the air conditioner when using a room fumigation - type insecticide.**

Failure to observe could cause the chemicals to become deposited in the unit, which could endanger the health of those who are hypersensitive to chemicals.

**Safely dispose of the packing materials.**

Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.

Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

**Do not turn off the power immediately after stopping operation.**

Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

**The appliance is not intended for use by young children or infirm persons without supervision. The remote controller should be installed in such away that children cannot play with it.**

---

## — NOTE —

**Never press the button of the remote controller with a hard, pointed object.**

The remote controller may be damaged.

**Never pull or twist the electric wire of the remote controller.**

It may cause the unit to malfunction.

**Do not place the controller exposed to direct sunlight.**

The LCD display may get discolored, failing to display the data.

**Do not wipe the controller operation panel with benzine, thinner, chemical dustcloth, etc.**

The panel may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. And wipe it with another dry cloth.

**Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**

---

# System Overview


This intelligent Touch Controller is capable of controlling/monitoring up to 64 groups of indoor units (hereafter "groups").

The main functions of the intelligent Touch Controller include:


1. Collective starting/stopping of operation of the indoor units connected to the intelligent Touch Controller.
2. Starting/stopping of operation, temperature setting, switching between temperature control modes and enabling/disabling of operation with the hand-held remote control by zone or group.
3. Scheduling by zone or group.
4. Monitoring of the operation status by zone or group.
5. Display of the air conditioner operation history.
6. Compulsory contact stop input from the central monitoring panel (non-voltage, normally-open contact).
7. Power distribution of the air conditioners. (With the optional DCS002A51)

\* A group of indoor units include:

- ① One indoor unit without a remote control.
- ② One indoor unit controlled with one or two remote controls.




- ③ Up to 16 indoor units controlled with one or two remote controls.



\* Zone control with the intelligent Touch Controller

\* Zone control, which allows collective settings for more than one group, is available with the intelligent Touch Controller, which facilitates the setting operations.

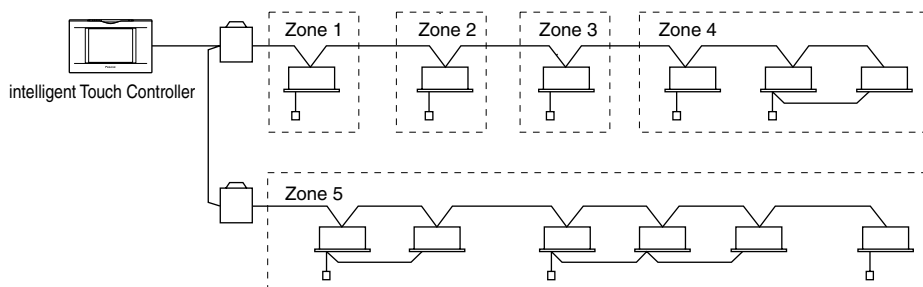

- One setting makes the same setting for all of the units in one zone.
- Up to 128 zones can be set with one intelligent Touch Controller.  
(The maximum number of groups in one zone is 64.)
- Groups can be zoned at will with the intelligent Touch Controller.
- Units in one group can be divided into more than one zone.

## Operation Menu

intelligent Touch Controller is capable of starting/stopping of the operation by the group or zone. Collective starting/stopping is also available.

See pages

15 to 17

## Air Conditioner Detail Setup

Temperature setting, switching between temperature control modes, switching of speed and direction of wind and remote control mode setting are available by the group, by the zone or collectively.

See pages

18 to 22

## Monitoring of Various Information on Indoor Units

Information on operation such as the operation mode and temperature setting of the indoor units, maintenance information including the filter or element cleaning sign, troubleshooting information such as error codes can be displayed by the group or the zone.

See pages

26 to 29

## Diversified Operation Modes

Operation can be controlled both with the main unit and the remote control to provide diversified operation management. Setting with the main unit allows the following remote control settings by the group, by the zone or collectively:

- |                             |                             |                             |
|-----------------------------|-----------------------------|-----------------------------|
| 1. Start/Stop               | 2. Operation Mode           | 3. Temperature Setting      |
| :(Remote control) Inhibited | :(Remote control) Inhibited | :(Remote control) Inhibited |
| :(Remote control) Permitted | :(Remote control) Permitted | :(Remote control) Permitted |
| :(Priority)                 |                             |                             |

See page

22

## Zone Control Simplifying Complicated Setting Operations

Up to 64 groups can be controlled with the intelligent Touch Controller. More than one group can be consolidated into a zone, which can be registered, to allow the following settings by the zone. This eliminates the need for repeating the same setting operation for each group. Function to allow collective setting for all groups is also available.

- Start/stop
- Temperature setting
- Switching between operation modes
- Setting of direction and fan speed
- Disabling/enabling the remote control

See pages

15 to 29  
33

## Detailed Scheduled Operation Control

The intelligent Touch Controller allows detailed scheduled operation by the group, by the zone or collectively. Up to 8 options for annual schedule can be set. Each schedule can include four types of plans: for Weekdays, Holidays, Special days 1 and Special days 2. Each of the plans allows setting of up to 16 operations.

See pages

35 to 36

## Handy Automated Control

The Intelligent Touch Controller can do the following.

- Change Over Settings: automatically switches between cooling and heating according to the room temperature.
- Temperature Limit Settings: prevents the temperature from rising too high or too low in unmanned rooms.
- Heating Optimization Settings: stops uncomfortable hot air from blowing when the heating thermo is off.

See pages

37 to 46

Before use


# Part Names and Functions

## Front and Side View



### PCMCIA Card Slot

Used when using the optional Power Proportional Distribution (DCS002C51) or updating the intelligent Touch Controller software to a newer version.

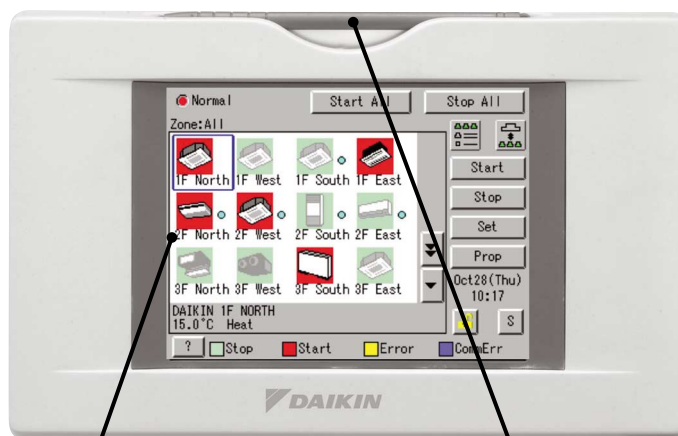

### Color LCD with Touch Panel

Provides a display for monitoring and operation.  
Be sure to use the touch pen provided for operation.

### Touch Pen


Use the touch pen for operation.  
Be sure to use the touch pen for operation.  
Use caution not to lose the touch pen.

(When the pen is lost, contact the dealer you purchased the product from.)

### Note

- Be sure to use the touch pen for operation of the touch panel of the intelligent Touch Controller. Operating with an object other than the touch pen provided may cause damage and failure.

# Terminals on the Back of intelligent Touch Controller

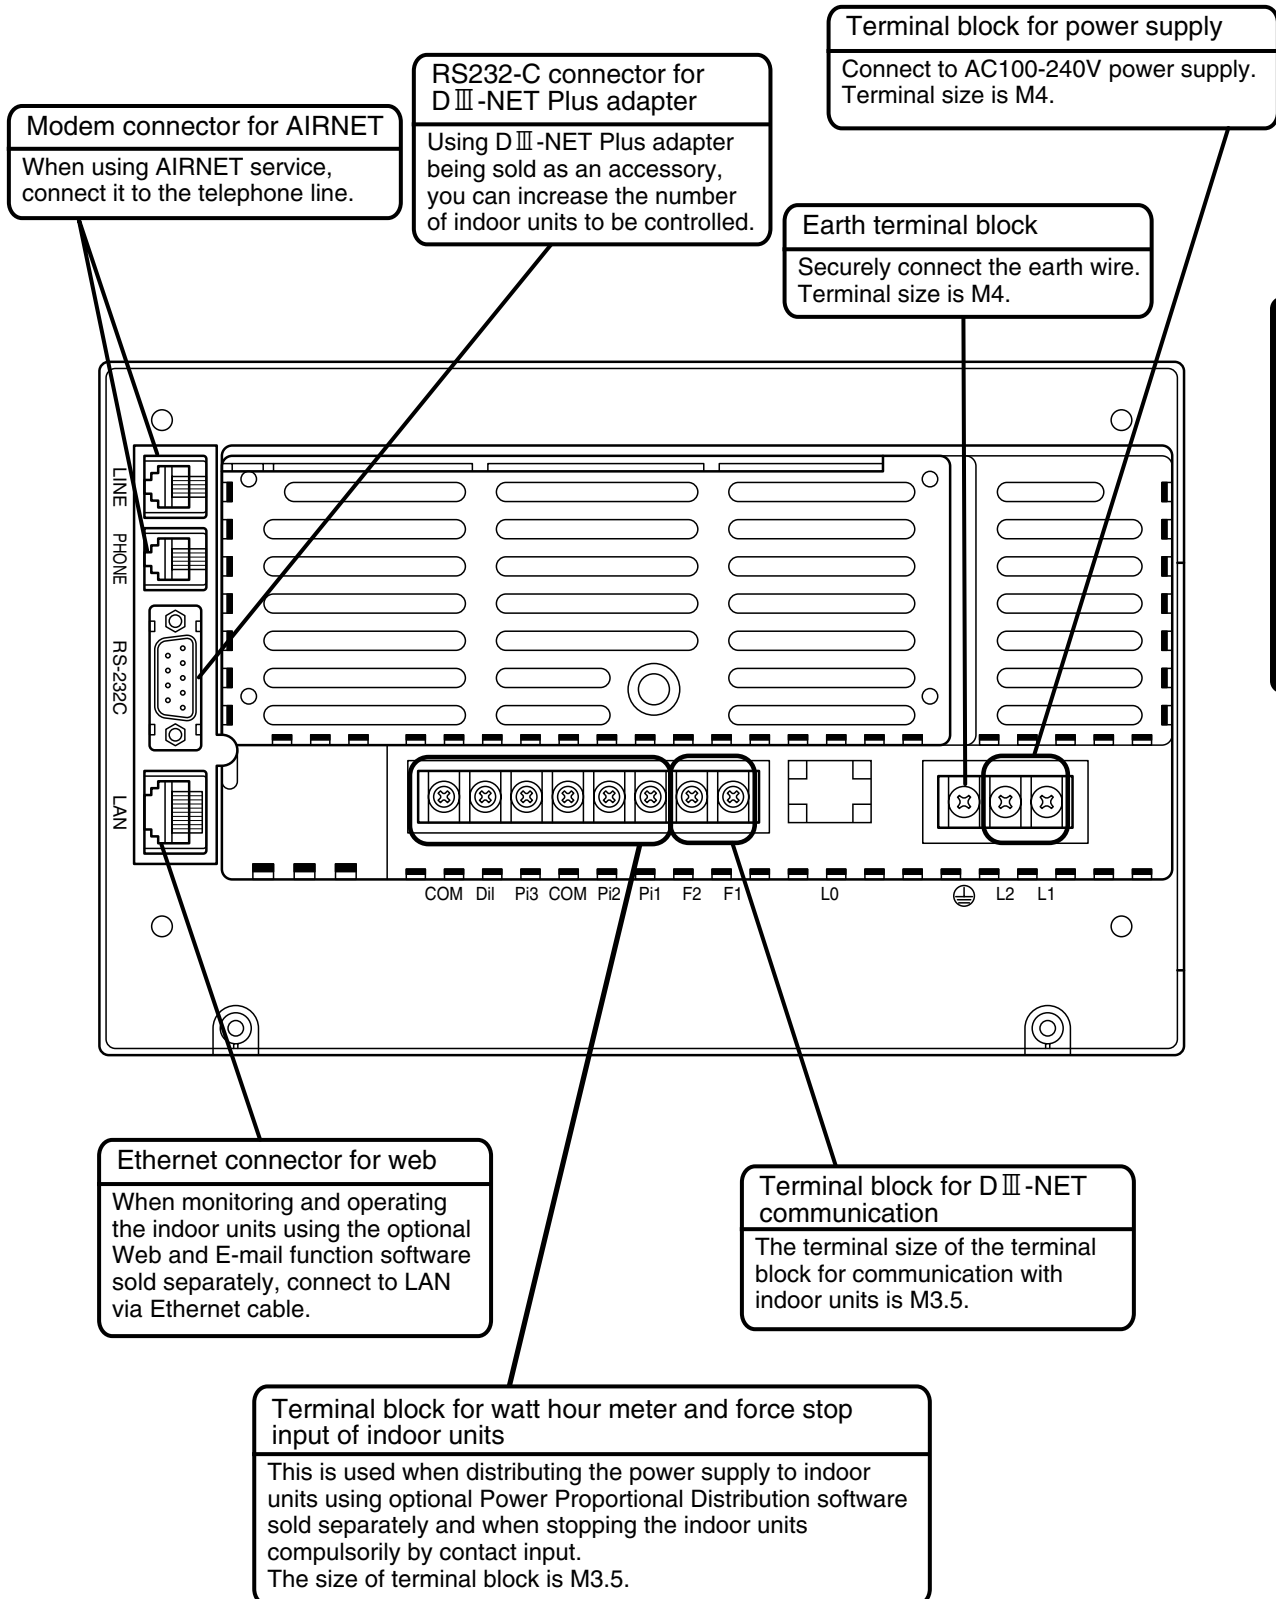

Before use

# Part Names on the Monitoring Screen and the Functions

## List

### Contents of the List Currently Displayed

- When Group List is displayed  
"Zone: Zone Name"
- When Zone List is displayed  
"Zone List"

### Zone/Group Currently Displayed

The name of the zone/group currently selected is highlighted in light-blue.

### Display Mode Selection

Press the button and display change between Zone and Group.

### Zone/Group Name

Set the names in the Group Registration or Zone Registration in the System Setup Mode.

### Target of Automatic Control

Displayed when there is any air conditioner with the registration of scheduled in the zone or in the group.

### Filter/Element Sign


Displayed when there is any air conditioner showing a filter or element sign in the zone or the group.

### Monitoring Screen Legend

Pressing the "?" button shows more detailed legend.

### System Condition Displayed Domain

Domain displaying system condition (Compulsory Stop etc.)

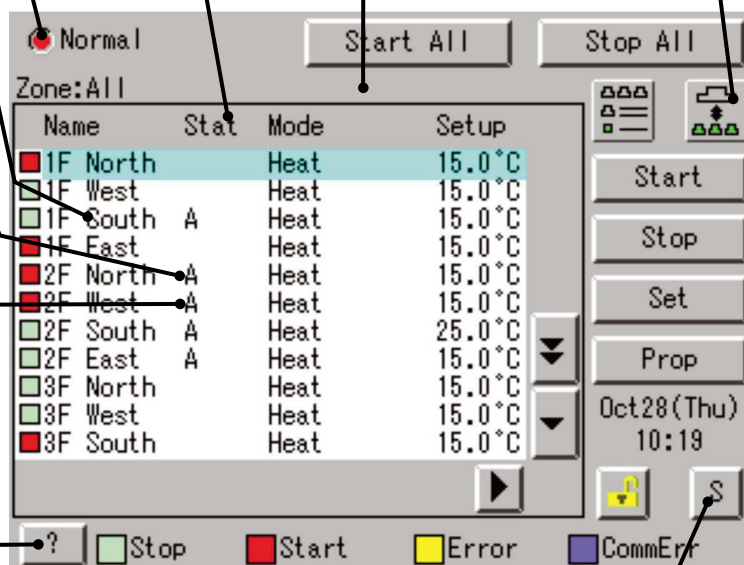

### Button to Switch to the System Setup Mode

Use this button for settings including the time, group, zone and schedule.



# List

## Display for Collective Monitoring of Air Conditioners Connected to intelligent Touch Controller

When operation is normal and any air conditioner is in operation:

Red/Normal

When operation is normal and all air conditioners are in stoppage:

Green/Normal


When there is any air conditioner generating an error:

Yellow/Abnormal

When there is any air conditioner with communication error:

Blue/Abnormal

(Change in color of Start/Stop is possible by Iconcolor Settings in System Settings.)

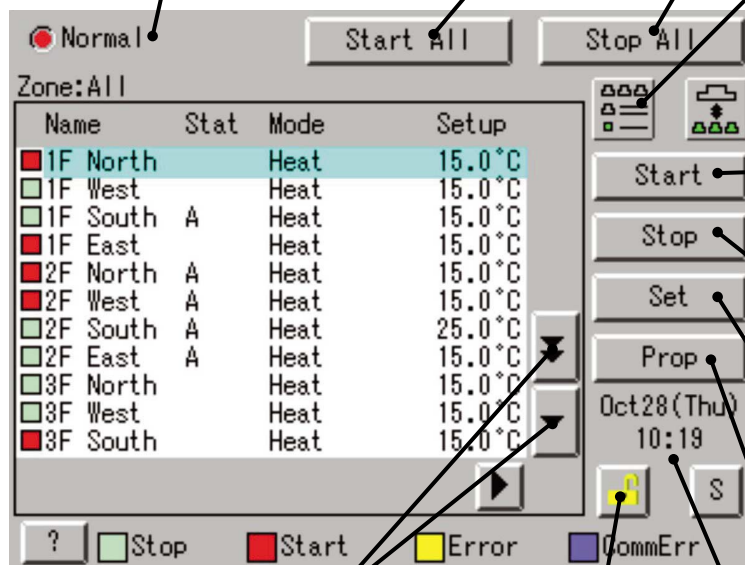

### Start All Button

Button to collectively start all the air conditioners connected to intelligent Touch Controller.

### Stop All Button

Button to collectively stop all the air conditioners connected to intelligent Touch Controller.

### Display Mode Selection

Select the mode among icon/list/detailed icon.  
(Displayed in List in the right figure.)  
Icon display is P9, 10.  
Detailed icon display is P11, 12.

### Group/Zone Start Button

Button to start operation of the group/zone selected.

### Group/Zone Stop Button

Button to stop operation of the group/zone selected.

### Group/Zone Set Button

Makes settings (temperature setting, temperature control mode, etc.) and display of the group/zone selected.

### Group/Zone Prop Button

Detailed display of the group/zone selected

### Current Time Display

Shows the current date and time.

### Lock Setting/Cancel Button


Displays possibility of monitor operation.  
Expresses detailed information in P31, 32.

### Scroll Buttons

Up/Down scroll button used when monitoring zone/group which are not currently displayed.  
Left/Right scroll button used when monitoring temperature and errors etc.  
Which are not currently displayed.

Before use

# Icon

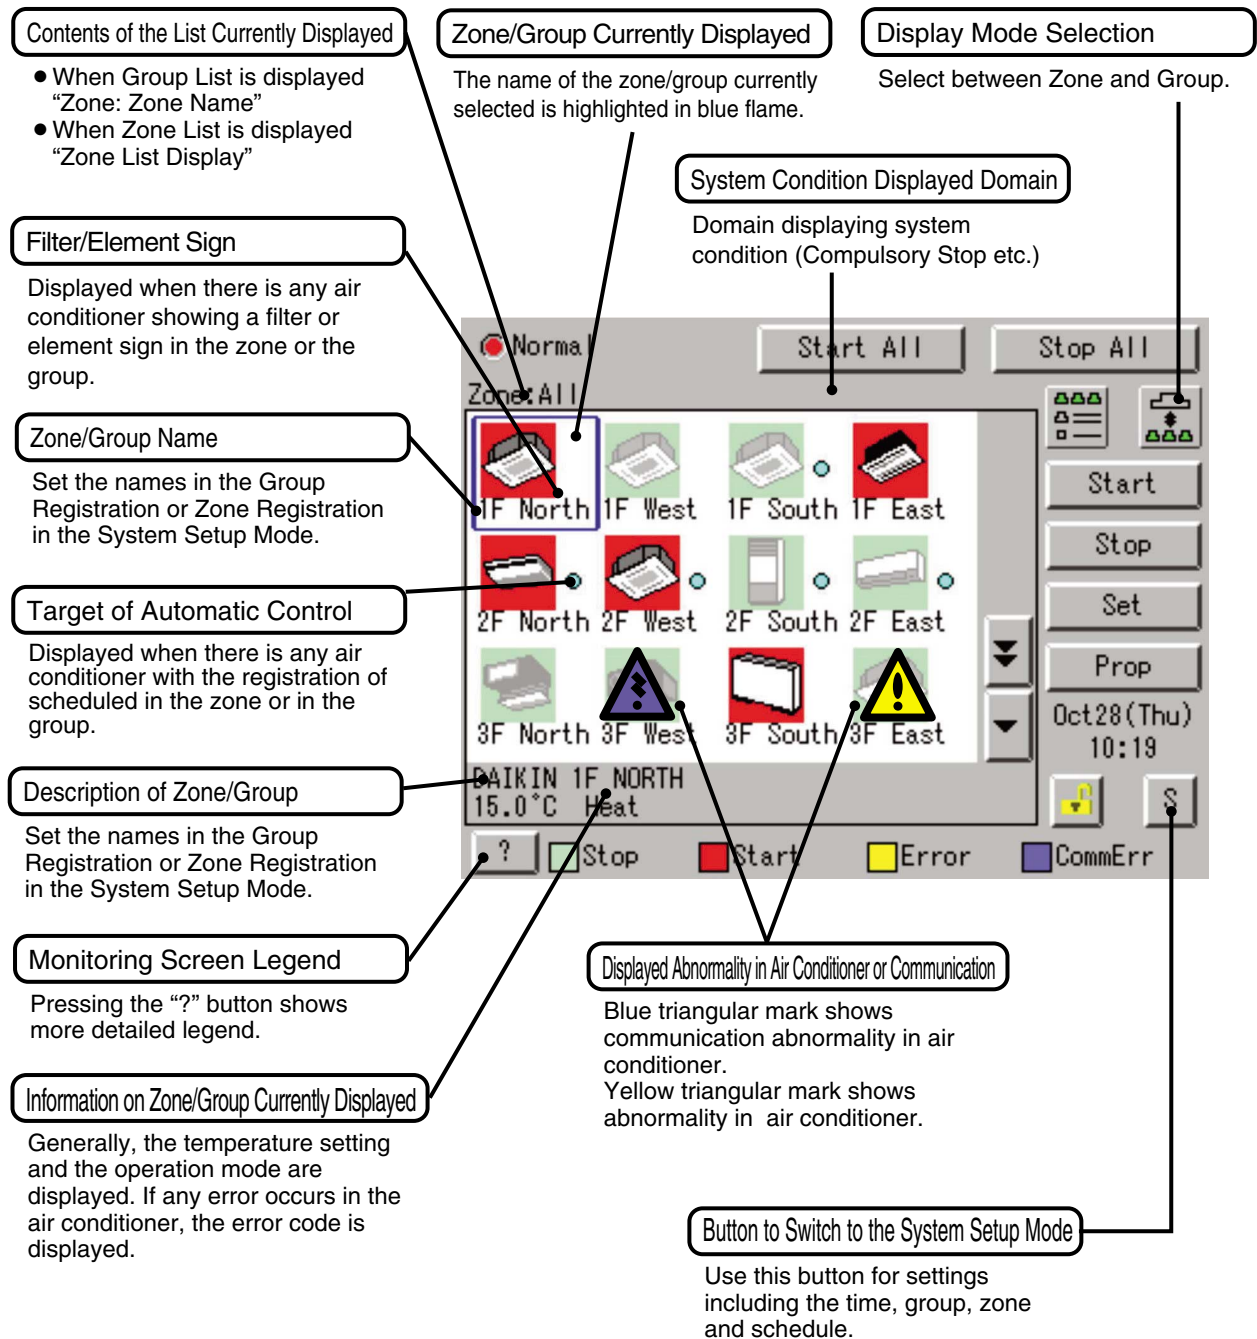

# Icon

Display for Collective Monitoring of Air Conditioners Connected to intelligent Touch Controller

When operation is normal and any air conditioner is in operation:

Red/Normal

When operation is normal and all air conditioners are in stoppage:

Green/Normal

When there is any air conditioner generating an error:

Yellow/Abnormal

When there is any air conditioner with communication error:

Blue/Abnormal

(Change in color of Start/Stop is possible by Iconcolor Settings in System Settings.)

Start All Button

Button to collectively start all the air conditioners connected to intelligent Touch Controller.

Stop All Button

Button to collectively stop all the air conditioners connected to intelligent Touch Controller.

Display Mode Selection

Select the mode among icon/list/detailed icon.  
(Displayed is List in the right figure.)  
(List display in P7, 8.  
Detailed icon display is P11, 12.)

Group/Zone Start Button

Button to start operation of the group/zone selected.

Group/Zone Stop Button

Button to stop operation of the group/zone selected.

Group/Zone Set Button

Makes settings (temperature setting, temperature control mode, etc.) and display of the group/zone selected.

Group/Zone Prop Button

Detailed display of the group/zone selected

Current Time Display

Shows the current date and time.

Lock Setting/Cancel Button


Displays possibility of monitor operation.  
Expresses detailed information in P31, 32.

Scroll Buttons

Up/Down scroll button used when monitoring zone/group which are not currently displayed.

Left/Right scroll button used when monitoring temperature and errors etc.

Which are not currently displayed.

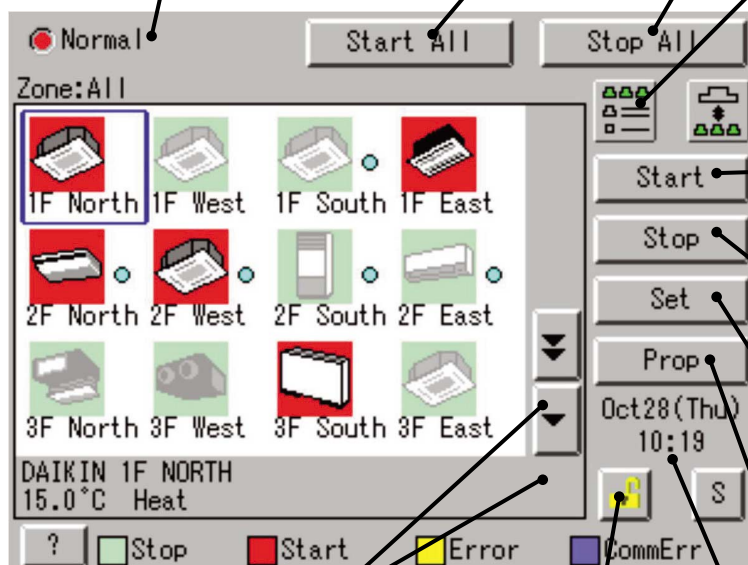

Before use

# Icon

**Contents of the List Currently Displayed**

- When Group List is displayed “Zone: Zone Name”
- When Zone List is displayed “Zone List Display”

**Zone/Group Currently Displayed**

The name of the zone/group currently selected is highlighted in blue frame.

**Display Mode Selection**

Press the button and a display change between Zone and Group.

**Filter/Element Sign**

Displayed when there is any air conditioner showing a filter or element sign in the zone or the group.

**System Condition Displayed Domain**

Domain displaying system condition (Compulsory Stop etc.).

**Zone/Group Name**

Set the names in the Group Registration or Zone Registration in the System Setup Mode.

**Target of Automatic Control**

Displayed when there is any air conditioner with the registration of scheduled in the zone or in the group.

**Displayed Abnormality in Air Conditioner or Communication**

Blue triangular mark shows communication abnormality in air conditioner.  
Yellow triangular mark shows abnormality in air conditioner.

**Monitoring Screen Legend**

Pressing the “?” button shows more detailed legend.

**Button to Switch to the System Setup Mode**

Use this button for settings including the time, group, zone and schedule.

The screenshot shows a monitoring interface with a list of zones. The first zone, 'DAIKIN 1F NORTH', is highlighted with a blue border. It shows a red icon (filter/element sign) and temperatures: Heat 15.0°C and Room 16.7°C. Other zones listed are 'DAIKIN 1F WEST', 'DAIKIN 1F SOUTH', and 'DAIKIN 1F EAST', each with their own icons and temperatures. On the right, there are buttons for 'Start All', 'Stop All', 'Start', 'Stop', 'Set', and 'Prop'. Below these is a date and time display 'Oct28(Thu) 10:33' and a legend button '?'. At the bottom, a status bar shows 'Normal' (red dot), 'Start' (red square), 'Error' (yellow square), and 'CommErr' (blue square).

# Icon

## Display for Collective Monitoring of Air Conditioners Connected to intelligent Touch Controller

When operation is normal and any air conditioner is in operation:

Red/Normal

When operation is normal and all air conditioners are in stoppage:

Green/Normal


When there is any air conditioner generating an error:

Yellow/Abnormal

When there is any air conditioner with communication error:

Blue/Abnormal

(Change in color of Start/Stop is possible by Iconcolor Settings in System Settings.)

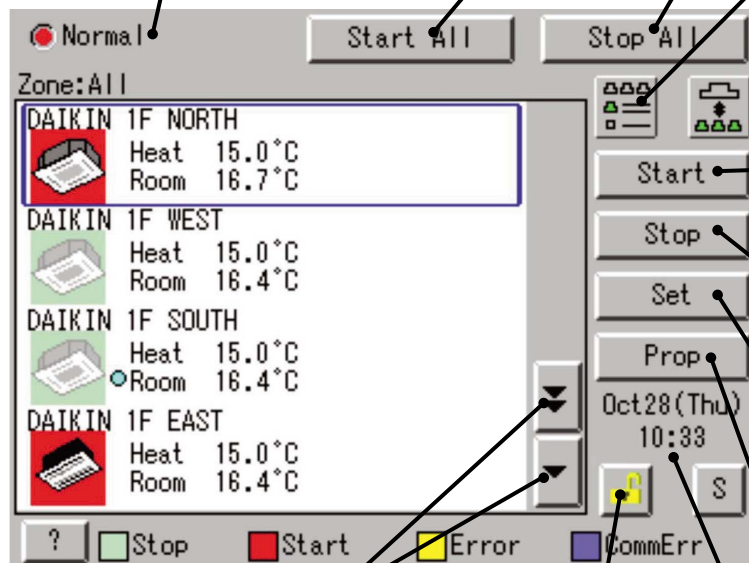

### Start All Button

Button to collectively start all the air conditioners connected to intelligent Touch Controller.

### Stop All Button

Button to collectively stop all the air conditioners connected to intelligent Touch Controller.

### Display Mode Selection

Select the mode among icon/list/detailed icon.  
(Displayed in List in the right figure.)  
List display is P7, 8.  
Icon display is P9, 10.

### Group/Zone Start Button

Button to start operation of the group/zone selected.

### Group/Zone Stop Button

Button to stop operation of the group/zone selected.

### Group/Zone Set Button

Makes settings (temperature setting, temperature control mode, etc.) and display of the group/zone selected.

### Group/Zone Prop Button

Detailed display of the group/zone selected

### Current Time Display

Shows the current date and time.

### Lock Setting/Cancel Button












Displays possibility of monitor operation.  
Expresses detailed information in P31, 32.

### Scroll Buttons







Up/Down scroll button used when monitoring zone/group which are not currently displayed.  
Left/Right scroll button used when monitoring temperature and errors etc.  
Which are not currently displayed.

Before use



















## Air Conditioner Operation

|   |   |   |
|---|---|---|
| To collectively start/stop the operation of all devices connected to the intelligent Touch Controller | ➔ | See page  15   |
| To start/stop the operation of devices by group   | ➔ | See page  16   |
| To start/stop the operation of devices by zone  | ➔ | See page  17   |
| To change the operation mode  | ➔ | See page  18   |
| To change the temperature setting   | ➔ | See page  19   |
| To reset the filter or element sign   | ➔ | See page  20   |
| To change the direction or fan speed  | ➔ | See page  21   |
| To change the range of operation allowed with remote control  | ➔ | See page  22   |
| To change the ventilation mode  | ➔ | See page  23   |
| To change the ventilation volume  | ➔ | See page  24  |
| To permit/prohibit the remote control at hand for ventilation   | ➔ | See page  25 |

## Air Conditioner Operation Monitoring


|  |   |  |
|--|---|--|
| To monitor by zone or by group                     | ➔ | See pages  26 to  27 |
| To monitor detailed information                    | ➔ | See pages  28 to  29 |
| To monitor the operation condition for ventilation | ➔ | See page  30  |
| To set / release the lock of screen operation      | ➔ | See page  31  |

## System Setup Menu


|   |   |  |
|---|---|--|
| To change the name of a group               | ➔ | See page  33  |
| To change the zone setup                    | ➔ | See page  33  |
| To change the schedule setup                | ➔ | See pages  35 to  36 |
| To change the change over settings          | ➔ | See pages  37 to  41 |
| To change the temperature limit settings    | ➔ | See pages  42 to  44 |
| To change the heating optimization settings | ➔ | See pages  45 to  46 |
| To calibrate the touch panel                | ➔ | See page  48  |
| To review the history of errors             | ➔ | See page  48  |
| To set the locale                           | ➔ | See page  34  |
| To set the icon color                       | ➔ | See page  34  |
| To set the network                          | ➔ | See page  34   |
| To set the license key                      | ➔ | See page  34  |
| To adjust the contrast of the screen        | ➔ | See page  81  |
| To set the e-mail                           | ➔ | See page  47  |

## Starting/Stopping Operation Collectively

Screen 1 Monitoring

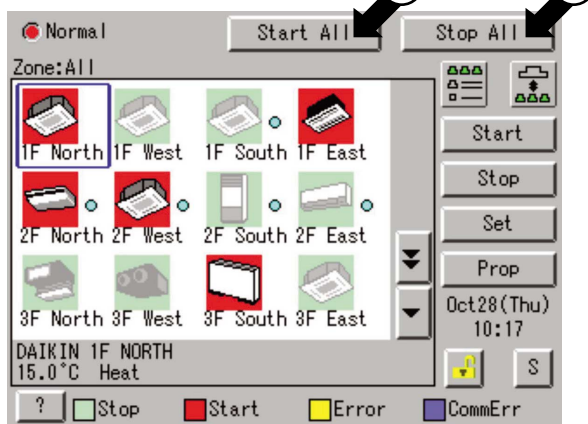

Screen 2 Confirm

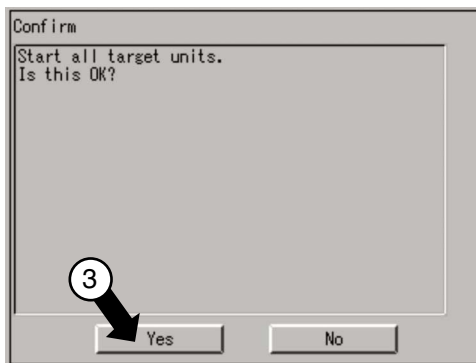

To start/stop the operation of all devices connected

Start or stop collectively the operation of devices connected.

On the Monitoring screen, operation is allowed with either Zone or Group as the display mode and with either Icon or List as the display type. In the example on the left, the display mode is Group in the collective mode and the display type is Icon.


### [Procedure]

1. On Screen 1 Monitoring, press the [Start All] button ① or [Stop All] button ②.
2. Screen 2 Confirm appears. Press the [OK] button ③.  
(To exit without activating collective start or stop, press the [Cancel] button.)




# Starting/Stopping Operation by the Group

Screen 1 Monitoring

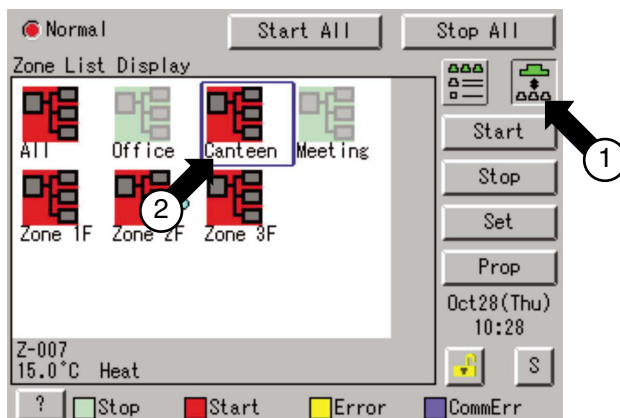

Screen 2 Monitoring (Group)

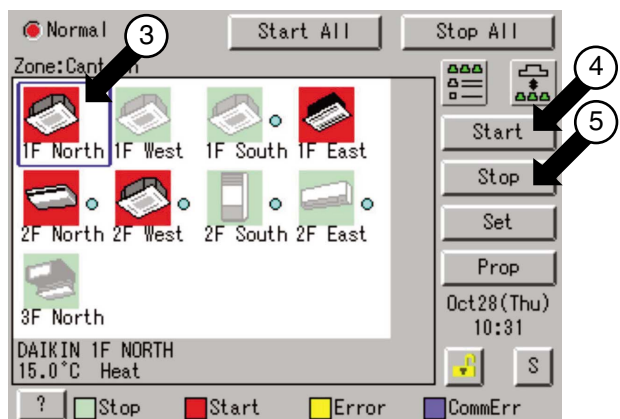


## To start/stop the operation of devices by group

Start or stop the operation of air conditioners by group.

The example on the left shows the screen for starting/stopping the operation of Group Name: 1F North registered for Zone Name: Canteen.

### Zone Name

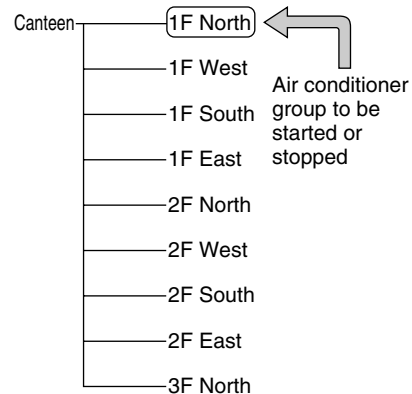


### [Procedure]

1. On Screen 1 Monitoring, select a zone from the button ①.
2. Select a zone that includes the group of which the operation is to be started or stopped ②.
3. Select a group from the button ①. Screen 2 Monitoring (Group) appears.
4. Select a group to be started or stopped as in ③ and press the [Start] button ④ or [Stop] button ⑤.

# Starting/Stopping Operation by the Zone


Screen 1 Monitoring

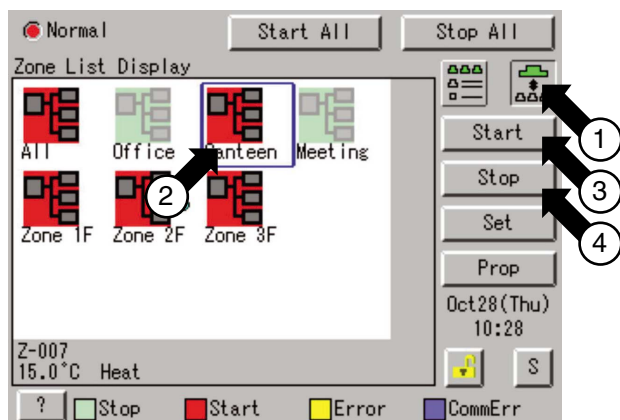

## To start/stop the operation of devices by group

Start or stop by zone the operation of groups of air conditioners set in zones.

The example on the left shows a screen for starting or stopping the operation of air conditioners in the canteen.

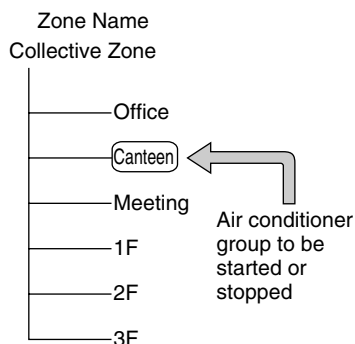


## [Procedure]


1. On Screen 1 Monitoring, select a zone from the button ①.
2. Select the zone of which the operation is to be started/stopped as shown in ②.
3. Press the [Start] button ③ or [Stop] button ④.

# Switching the Operation Mode

Screen 1 Monitoring

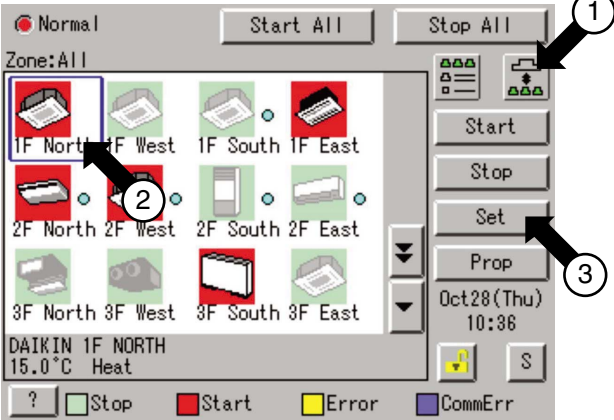

Screen 2 Operation

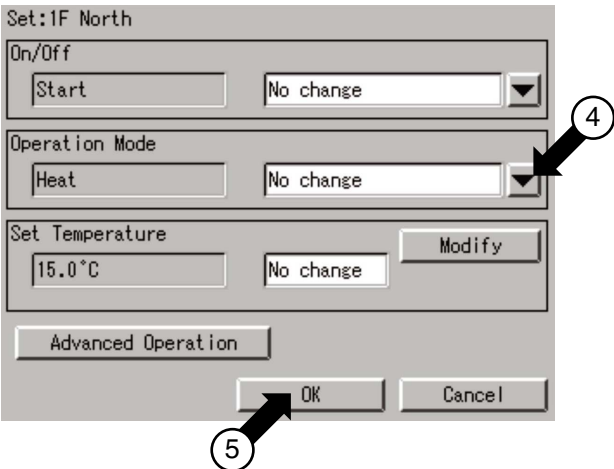

Switch the operation mode of the air conditioner.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.

The operation mode can be switched by zone or by group.

Selecting a zone and switching the operation mode switches the mode of all air conditioners in the zone. Selecting a group and switching the operation mode switches the mode of air conditioners in the group selected.

## [Procedure]


1. On Screen 1 Monitoring, select a zone or a group from the button ①.
2. Select with ② a zone or a group of which the operation mode is to be switched.
3. Press the [Set] button ③. Screen 2 Operation appears.
4. Select the operation mode to be set from the pull down menu ④.  
(On the menu, operation modes available for air conditioners in the zone are displayed if the switching is to be made by zone. See the example below.)
5. Press the [OK] button ⑤.  
(To cancel the setting, press the Cancel button.)

Ex.: For the following zone setting, the operation modes available are Fan, Cool, Heat and Auto.  
If Cool/Heat option is not available for any air conditioner in the zone, Fan and Set Point are the available operation modes.


| Zone name | Group name | Operation modes available |        |
|-----------|------------|---------------------------|--------|
| Canteen   | 1F North   | "Cool"                    | "Air"  |
|           | 1F West    | "Cool"                    | "Heat" |
|           |            | "Auto"                    | "Air"  |

# Changing the Temperature Setting

Screen 1 Monitoring

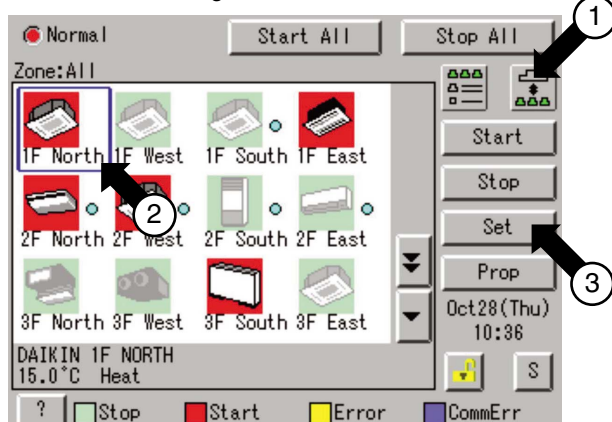

Screen 2 Operation

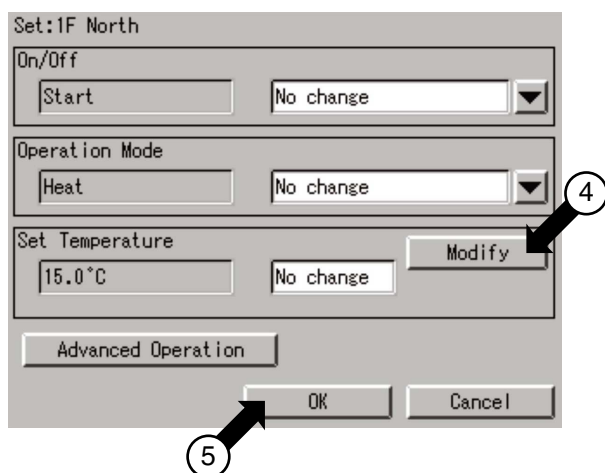

Change the temperature setting of air conditioners.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.

The temperature setting can be switched by zone or by group.

Selecting a zone and changing the temperature setting changes the setting of the air conditioner groups in Cool, Heat, Auto or Temp operation in the zone.

Selecting a group and changing the temperature setting changes the temperature setting of air conditioners in the group selected.

(If all of the air conditioners in the group selected are in Fan operation, temperature setting cannot be changed.)

## [Procedure]

1. On Screen 1 Monitoring, select a zone or a group from the button ①.
2. Select a zone or a group of which the temperature setting is to be changed ②.
3. Press the [Set] button ③.  
Screen 2 Operation appears.
4. For temperature setting, press the [Modify] button ④.  
Set Temperature dialog is displayed and input temperature for setting.  
(On the menu, temperature settings available for air conditioners in the zone are displayed if the setting is to be made by the zone. See the example below.)
5. Press the [OK] button ⑤.  
(To cancel the setting, press the [Cancel] button.)

Ex.: For the following zone setting, the temperature settings available are between 20°C and 30°C inclusive.

| Zone name | Group name | Range of temperature settings available (see Note) |
|-----------|------------|--|
| Canteen   | 1F North   | 25 to 30°C   |
|           | 1F West    | 20 to 25°C   |

When the temperature setting is 30°C, the actual temperature settings for air conditioners are as shown below:

| Group name | Temperature setting |
|------------|---------------------|
| 1F North   | 30°C                |
| 1F West    | 25°C                |


Note: Range of temperature settings available is the range specified in accordance with the following.

- Range of temperature setting inherent to the air conditioner main unit.
- Range of temperature as a result of the restriction by the temperature setting limit.


( See page 53 )

# Resetting the Filter/Element Sign


Screen 1 Monitoring

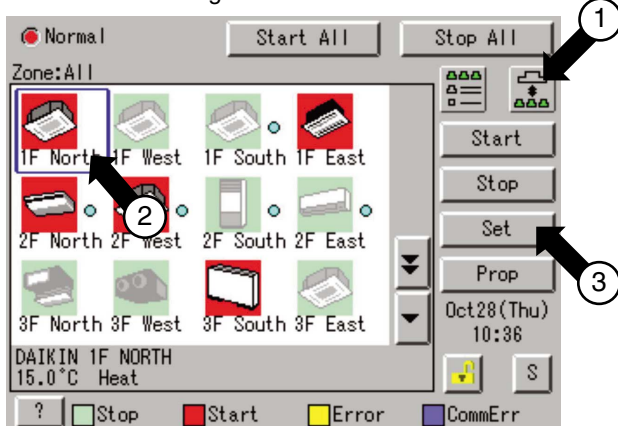

Screen 2 Operation

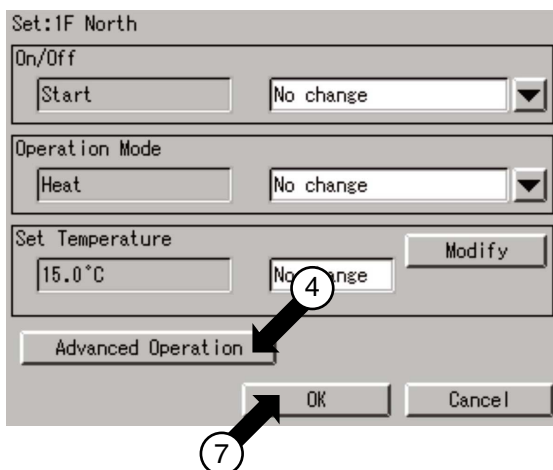

Screen 3 Advanced Operation

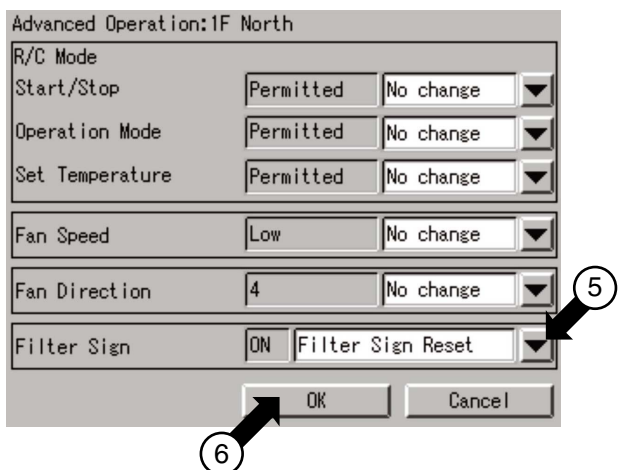

Reset the filter or element sign after cleaning any air conditioner showing the filter or element sign.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.


The filter or element sign can be reset by zone or by group.

## [Procedure]


1. On Screen 1 Monitoring, select a zone or a group from the button ①.
2. Select a zone or a group of which the filter or element sign is to be reset ②.
3. Press the [Set] button ③.  
Screen 2 Operation appears.
4. Press the [Advanced Operation] button ④.  
Screen 3 Advance Operation appears.
5. To reset the filter/element sign, select "Filter Sign Reset" in pull-down menu ⑤.  
Then press the [OK] button ⑥.  
(To cancel the setting, press the [Cancel] button.  
Screen 2 Operation reappears.
6. Then press the [OK] button ⑦ on Screen 2 Operation.  
(To cancel the setting, press the [Cancel] button.)

# Changing the Direction/Fan Speed


Screen 1 Monitoring

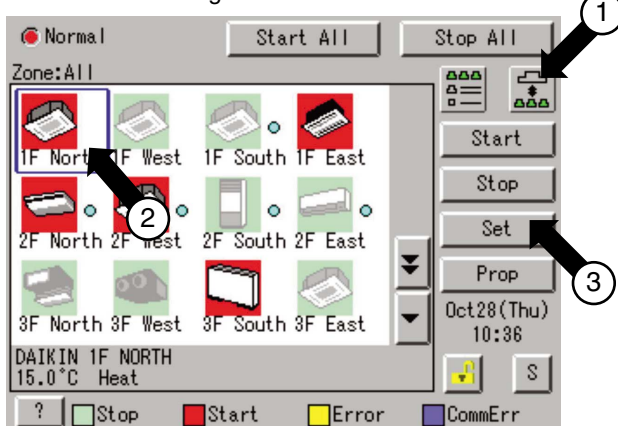

Screen 2 Operation

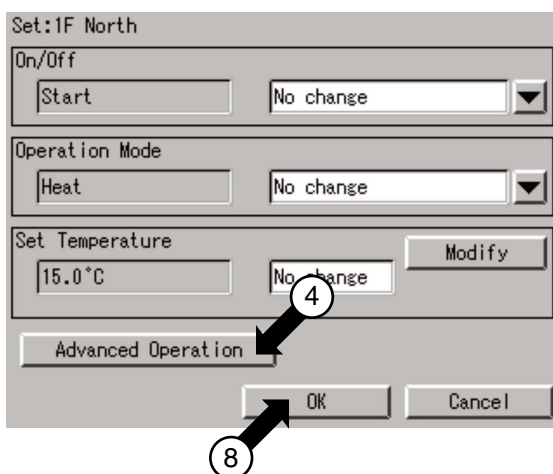

Screen 3 Advanced Operation

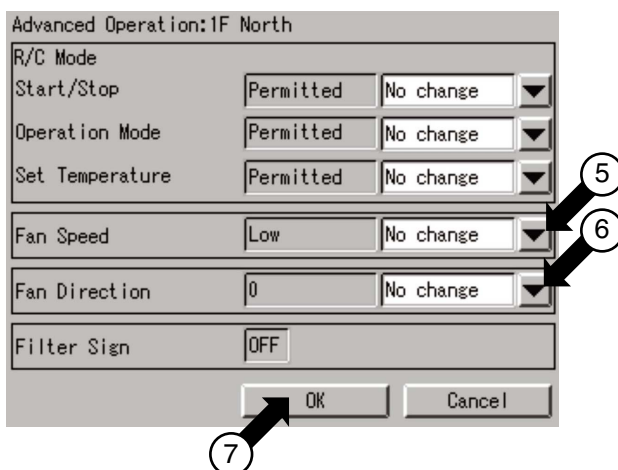

Change the fan direction or volume of air conditioners.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.


The fan direction or volume can be changed by zone or by group.

## [Procedure]

1. On Screen 1 Monitoring, select a zone or a group from the button ①.
2. Select a zone or a group of which the fan direction or volume is to be reset ②.
3. Press the [Set] button ③. Screen 2 Operation appears.
4. Press the [Advanced Operation] button ④. Screen 3 Advance Operation appears.
5. Set the direction with the pull-down menu ⑤.  
 (The larger the value for wind direction setting (0 - 6), the closer to vertical the direction becomes. The value 7 indicates automatic swing.  
 (Note: See the figure below.)  
 The description given above may not exactly apply depending on the model.  
 Check the wind direction sign on the remote control after operation.)  
 Select between High and Low with the pull-down menu ⑤.  
 Then press the [OK] button ⑦.  
 (To cancel the setting, press the [Cancel] button.)  
 Screen 2 Operation reappears.


6. Then press the [OK] button ⑧ on Screen 2 Operation.  
 (To cancel the setting, press the [Cancel] button.)

Note: Guidelines for wind direction value and actual direction

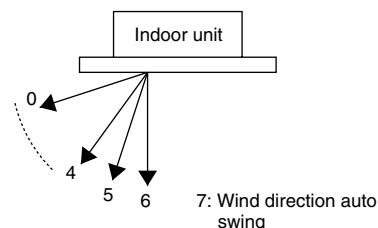


# Changing the Range of Operation Allowed with Remote Control


Screen 1 Monitoring

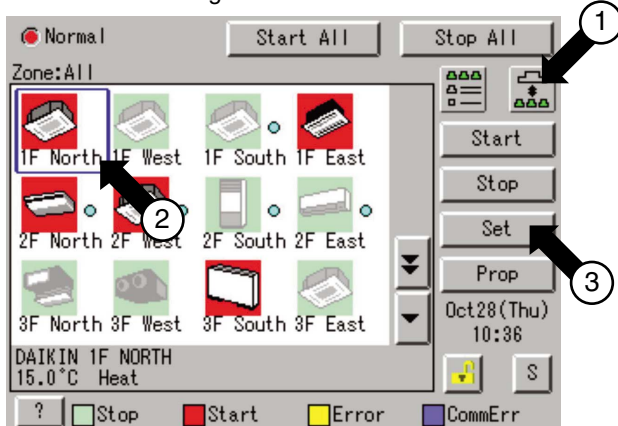

Screen 2 Operation

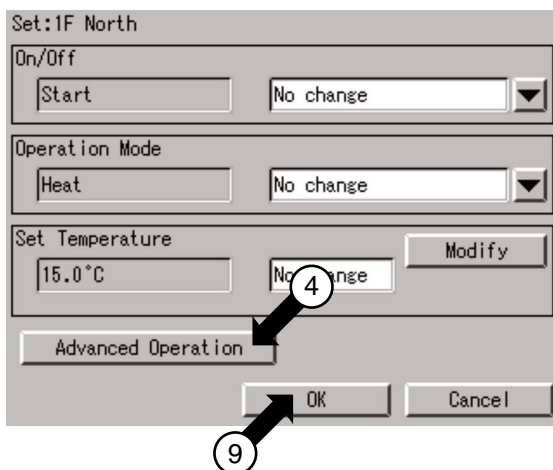

Screen 3 Advanced Operation

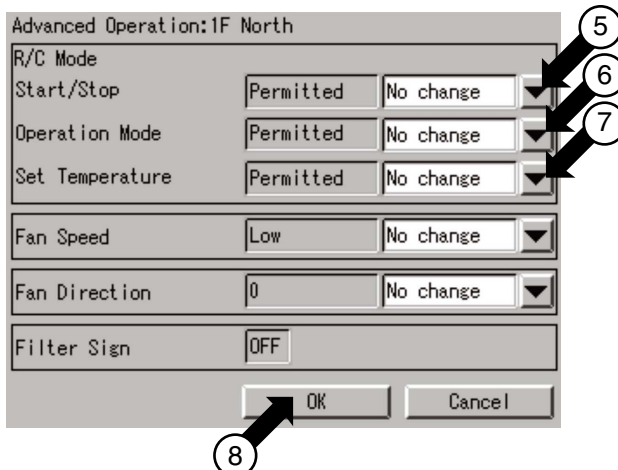

Change the setting of operation with the remote control of air conditioners between Permitted and Prohibited.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.

The setting between Permitted and Prohibited can be changed by zone or by group.

## [Procedure]

1. On Screen 1 Monitoring, select a zone or a group from button ①.
2. Select with ② a zone or a group for which the setting of the range of operation allowed with remote control is to be reset.
3. Press the [Set] button ③.  
Screen 2 Operation appears.
4. Press the [Advanced Operation] button ④.  
Screen 3 Advance Operation appears.
5. Then make setting with the pull-down menus ⑤ - ⑦.  
There are three settings as shown below:
  - ⑤ Start/Stop  
"Prohibited"  
"Stop Only"  
"Permitted"  
"No change"
  - ⑥ Operation Mode  
"Permitted or Prohibited"  
"No change"
  - ⑦ Set Point  
Permitted or Prohibited  
"No change"

Press the [OK] button ⑧ after setting ⑤ - ⑦.

(To cancel the setting, press the [Cancel] button.  
Screen 2 Operation reappears.

6. Then press the [OK] button ⑨ on Screen 2 Operation.  
(To cancel the setting, press the [Cancel] button.)


## [Details of Setting]

| Item           | Setting    | Meaning  |
|----------------|------------|--|
| Start/Stop     | Prohibited | The remote control cannot start or stop operation.   |
|                | Stop Only  | The remote control can stop the operation of air conditioners in operation but cannot start air conditioners not in operation. |
|                | Permitted  | The remote control can start or stop operation.  |
| Operation Mode | Permitted  | The remote control can change the operation mode.  |
|                | Prohibited | The remote control cannot change the operation mode.   |
| Set Point      | Permitted  | The remote control can change the temperature setting.   |
|                | Prohibited | The remote control cannot change the temperature setting.  |




# Set Ventilation Mode

Screen 1 Monitoring (Icon)

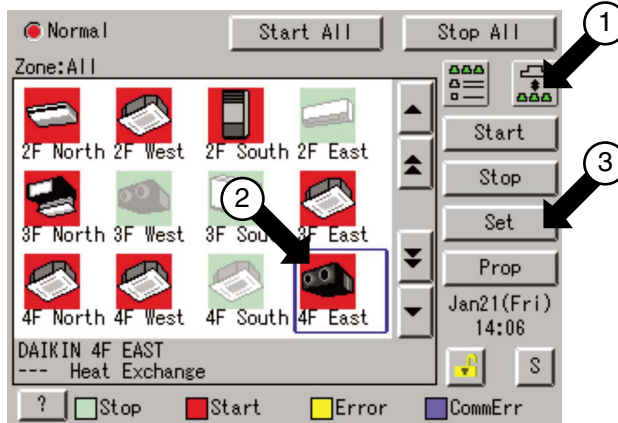

Screen 2 Set

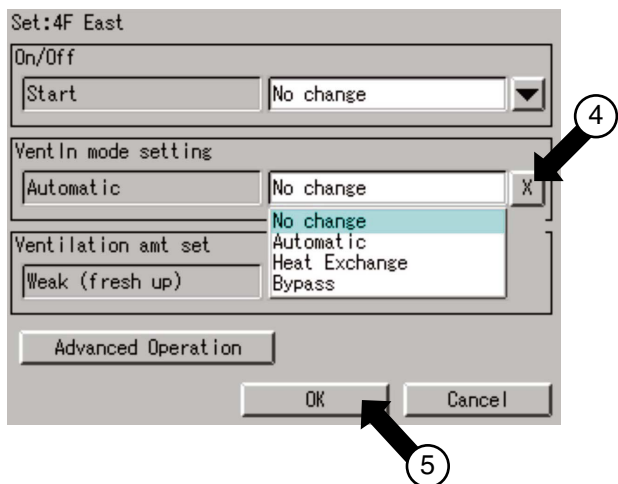

Perform the following procedure to switch the ventilation mode.

For this operation, you can select any of three display types, icon, detailed icon and list on the monitoring screen

When changing the ventilation modes of all the ventilation groups of a zone, select the zone and switch the ventilation mode.

When changing the ventilation mode of a group, select the group and switch the ventilation mode.

## [Procedure]


1. On Monitoring Screen Screen 1, select a zone or group by pushing the button ①.
2. To select a zone or group subject to ventilation mode switching, push the icon ②.
3. Push [Set] button ③ to display Set Screen Screen 2.
4. Select a desired ventilation mode on the pull-down menu ④.
5. Last, press [OK] button ⑤.  
(To cancel above settings, press [Cancel] button.)

Note that some models of ventilation systems permit you to make the above settings but the others don't.




# Set Ventilation Volume

Screen 1 Monitoring

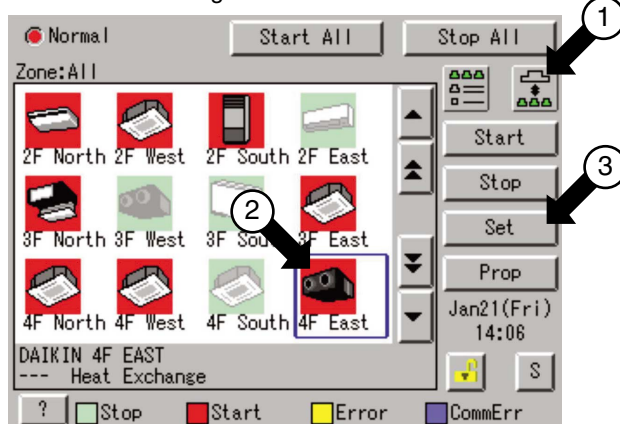

Screen 2 Set

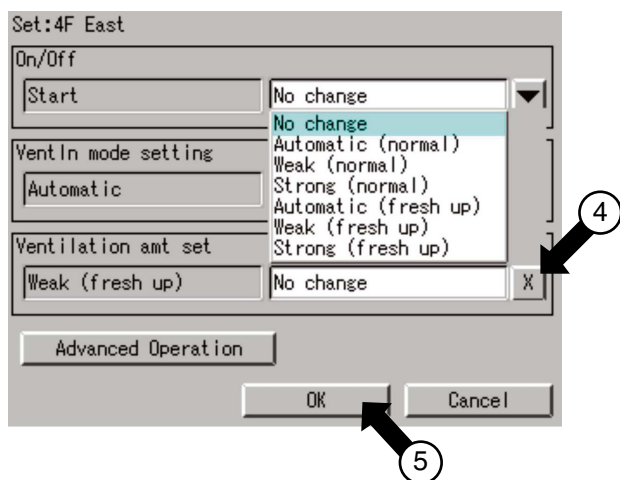

Perform the following procedure to change the ventilation volume.

For this operation, you can select any of three display types, icon, detailed icon and list on the monitoring screen.

When changing the ventilation volumes of all the ventilation groups of a zone, select the zone and switch the ventilation volume.

When changing the ventilation volume of a group, select the group and switch the ventilation volume.


## [Procedure]

1. On the Monitoring Screen Screen 1, select a zone or group by pushing the button ①.
2. To select a zone or group subject to ventilation volume switching, push the icon ②.
3. Push [Set] button ③ to display the Set Screen Screen 2.
4. Select a desired ventilation volume on the pull-down menu ④.
5. Lastly, push [OK] button ⑤.  
(To cancel above settings, press) [Cancel] button.


Note that some models of ventilation systems permit you to make the above settings but the others don't.

# Permit/Inhibit setting of Ventilation Remote Control Operations


Screen 1 Monitoring

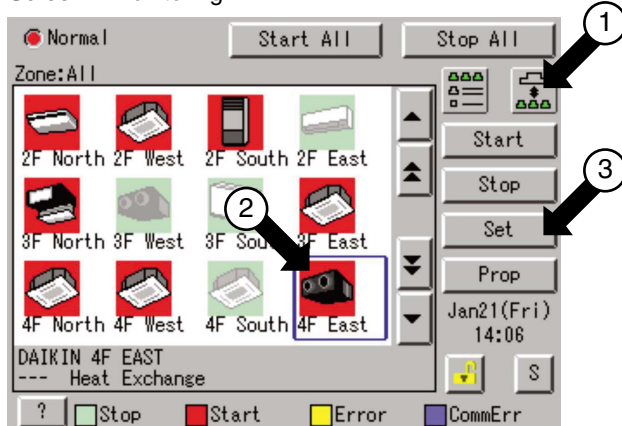

Screen 2 Set

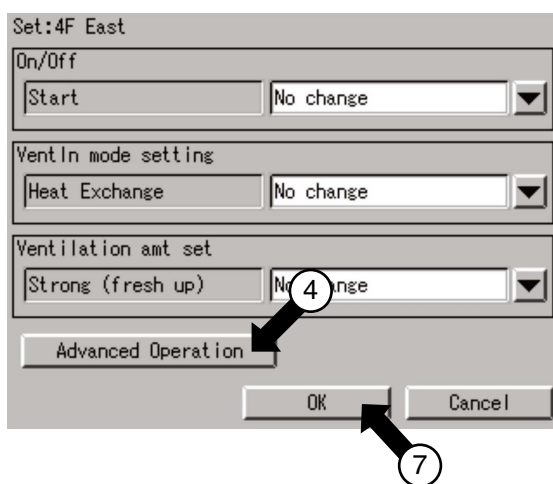

Screen 3 Advanced Operation

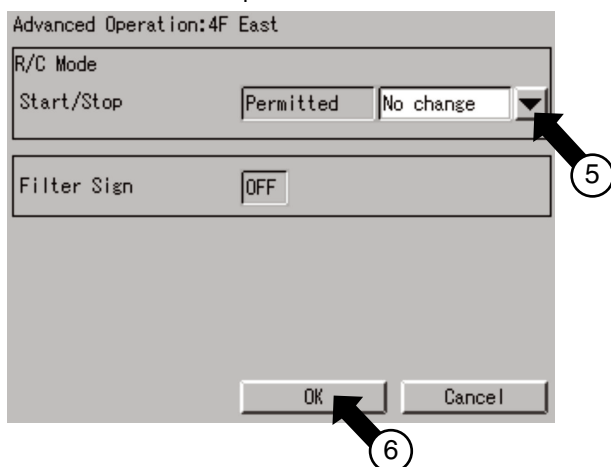

Perform the following procedure to enable or disable the ventilation remote control operations.

For this operation, you can select any of three display types, icon, detailed icon and list on the Monitoring Screen.

You may enable or disable the remote control operations in units of zones or groups.


## [Procedure]

1. On the Monitoring Screen Screen 1, select a zone or group by pushing the button ①.
2. To select a zone or group subject to ventilation volume switching, push the icon ②.
3. Push [Set] button ③ to display the Set Screen Screen 2.
4. Push [Advanced Operation] button ④ to display the Advanced Operation Screen Screen 3.
5. Make a desired setting on the pull-down menu ⑤.  
You can enable or disable the following setup items for remote control:  
Disabling remote control operations  
Enabling only stop operation  
Assigning priority to button pushed later  
After making the setting, push [OK] button ⑥ to display the Set Screen Screen 2 again.  
(To cancel above settings, push [Cancel] button.)
6. Lastly, push [OK] button ⑦ on the Set Screen.  
(To cancel above settings, push [Cancel] button.)


Note that some models of ventilation systems permit you to make the above settings but some models don't.

## Monitor Zone or Group Operation Status


Screen 1 Monitoring (Icon Display)

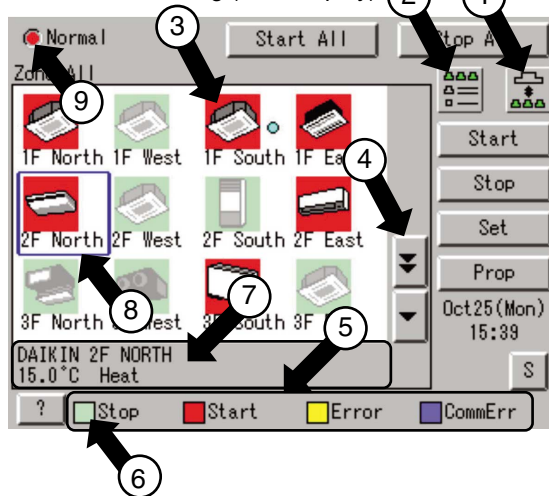

Screen 2 Monitoring (Detailed Icon Display)

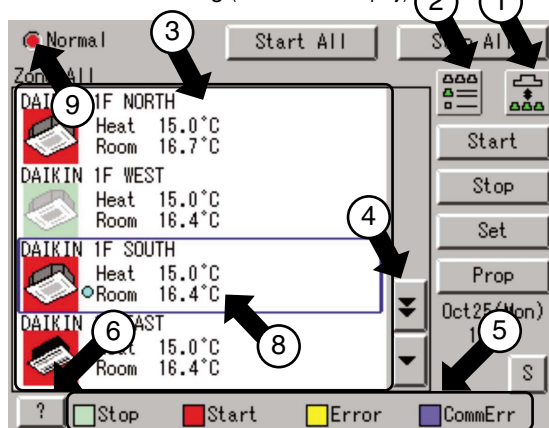

Screen 3 Monitoring (List Display)

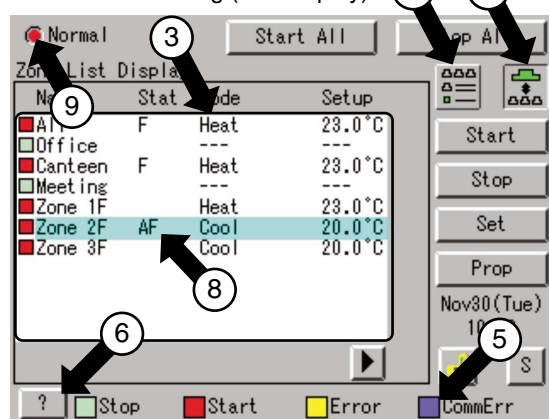

### Monitor Zone or Group Operation Status

To monitor the operation status, the monitoring screen permits you to choose any of three display types, icon, detailed icon or list.

Push the button ② to select a display type. (Display type selection takes place repeatedly in the order of icon, detailed icon and list.)

You may monitor the operation status in units of zones or groups. Examples of display types are shown in left figures.

|                       |                 |
|-----------------------|-----------------|
| Screen 1 Display type | : Icon          |
| Unit of monitoring    | : Group         |
| Screen 2 Display type | : Detailed icon |
| Unit of monitoring    | : Group         |
| Screen 3 Display type | : List          |
| Unit of monitoring    | : Zone          |

#### [Descriptions of Display Items on the Screen]

At ③ displays information concerning a zone or group, including the operation active or inactive status and the presence/absence of faults, automatic control settings, filters and element signs, etc.

Push the button ④ to change a display scope. (When the number of registered zones or groups is small and all the zones or groups can be displayed within one screen, this button does not appear. See Screen 3.)

Display of ⑤ indicates a legend. When requiring a more detailed legend, display the Legend Description Screen Screen 4 on the next page by pushing the [?] button ⑥.

To return to the previous screen, push Close button.


⑧ displays the current zone or group. You may select another zone or group by pushing the screen.

On Screen 1, ⑦ displays the settings of the zone or group selected at ⑧. (Icon display only) Display takes place in the following order:

- Upper : Detailed name for a zone or group
  - Lower left : Setting temperature (For a zone, this also indicates the temperature set for the representative machine. (Note).)
  - Lower right : Operation mode (For a zone, this also indicates the operation mode for the representative machine. (Note).)
- (When an error occurs, the corresponding error code is indicated in the lower area.)

# Monitor Zone or Group Operation Status

## Screen 4 Legend Description

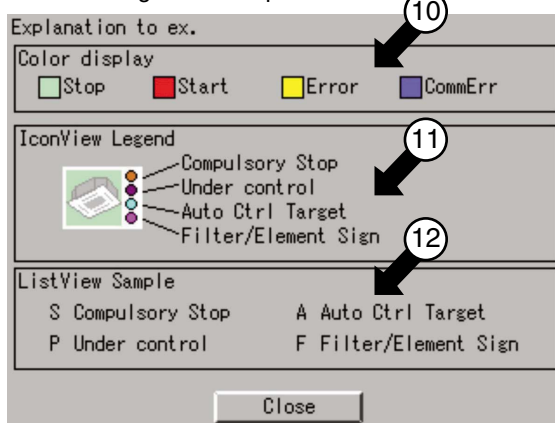

At ⑨, you can monitor at a glance the operation status of all air-conditioners connected to the Intelligent Touch Controller.

When no problem is found and one or more air-conditioners are operating : Display in red

When no problem is found and air-conditioners are not operating : Display in green

When one or more wrong air-conditioners are found : Display in yellow

When one or more air-conditions with communication errors are found : Display in blue

(You may change the colors indicating the operation active or inactive status through the use of Icon Color Setting on the System Setting menu.)

(See page 34 for Icon color setting.)

(Note) Representative zone

When monitoring takes place in units of groups on the Monitoring Screen, the following groups indicate the zone representative machines.

- When the display type is icon : Leftmost group on the top line
- When the display type is detailed icon or list: Groups on the top line.

⑩ displays the operation status of an air-conditioner.

For zone list display, display takes place as shown below.

- When no problem is found and one or more air-conditioners are operating : Display in red
- When no problem is found and no air-conditioner is operating : Display in green
- When one or more wrong air-conditioners are found : Display in yellow
- When one or more air-conditions with communication errors are found : Display in blue

(You may change the colors indicating the operation active or inactive status through the use of Icon Color Setting on the System Setting menu.)

(See P34 for Icon color setting.)

⑪ provides for icon or detailed icon display.


⑫ provides for list display.

(Machines subject to automatic control are displayed only when schedule settings are made.


They cannot be displayed when Heating Mode Optimization or Temperature Limit has been set.

# Monitoring Detailed Information


Screen 1 Monitoring (Icon Display)

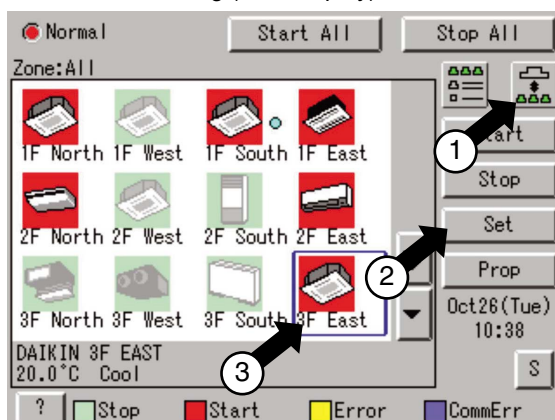

Screen 2 Operation Screen

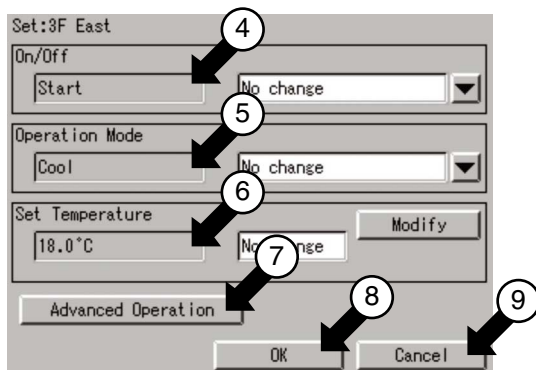

Screen 3 Advanced Operation Screen

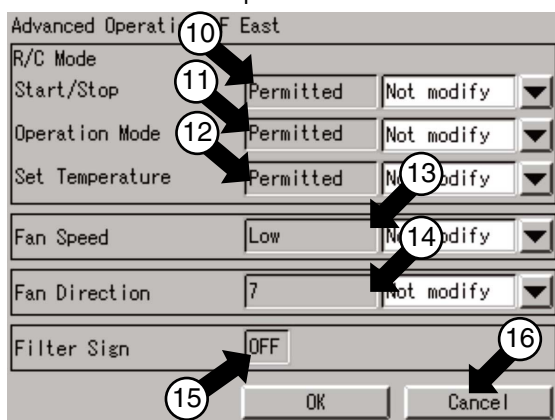

**Monitor Operation Status of a Zone or Group in Detail**  
(When monitoring the operation status in detail, you may choose any of three display types, icon, detailed icon and list.)

You may monitor the details of the operation status in units of zones or groups.

1. Select either Zone or Group by pushing the button ①.  
(Note that screens in the left-hand column are examples for group selection.)

2. Push [Set] button ② to display the Operation Screen 2.

When a zone is selected in the above operation, both ④ to ⑥ on Screen 2 and ⑩ to ⑭ on Screen 3 show the operation status of the representative machine in that zone. ⑮ displays ON so long as at least one of the filter signs or element signs is on in the zone or group.

The following describes in order the contents of display data on Screen 2.

The grayed characters in ④ to ⑥ indicate the current status of the selected zone or group. The meanings of screen data in the left-hand column are shown below.

Operation/stop status : Start  
Operation mode setting status : Cool  
Temperature setting status : 20.0°C

3. Push [Advanced Operation] button ⑦ to display the Advanced Operation Screen 3. To return to the Monitoring Screen Screen 1, push [Cancel] button ⑨.

The following describes in order the contents of display data on the Advanced Operation Screen Screen 3.


- ⑩ displays the settings made for start and stop remote control operations. Prohibited, Stop Only or Permitted is displayed.
- ⑪ displays the settings made for remote control operations to change the operation mode. Either Permitted or Prohibited is displayed.
- ⑫ displays the settings for remote control operations to change the setting temperature. Either Permitted or Prohibited is displayed.
- ⑬ displays the settings for remote control operations to change the setting temperature. Either Permitted or Prohibited is displayed.
- ⑭ displays the direction of wind. A value from 1 to 7 is displayed. Wind flows more vertically as the setting value becomes larger in a range from 0 to 6. When the setting value 7 is displayed, the direction of wind is swung automatically. Note that these descriptions may vary from model to model. Check for a wind direction displayed on the remote control.
- ⑮ displays a filter sign. Either ON and OFF is displayed.

Display data on Screens 2 and 3 is updated each time the respective screens are displayed. Once these screens are displayed, no data is updated unless they are closed and opened again.


4. Check the settings and push [Cancel] button ⑯.

# Monitoring Detailed Information


Screen 4 Monitoring Screen (Icon Display)

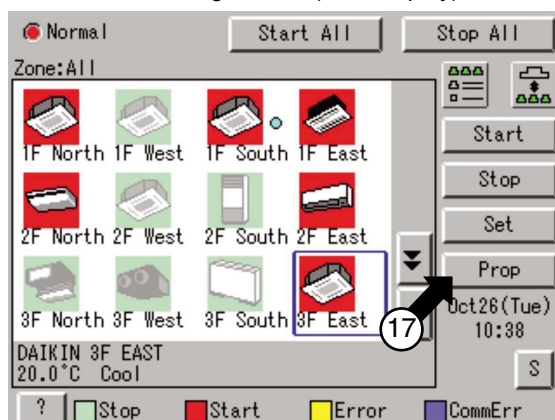

Screen 5 Detailed Information Screen

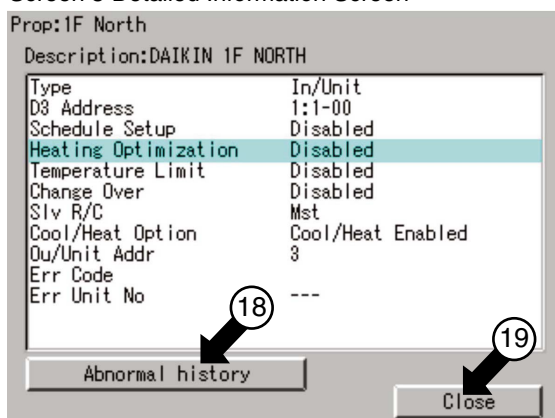

Screen 6 Fault History

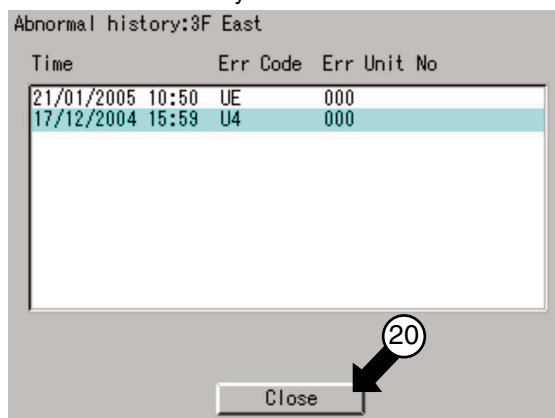

## 5. Push [Prop] button ⑰.

The following maintenance data is displayed on the Detailed Information Screen Screen 5.

(Note that screens in the left-hand column are examples for group selection.)

### [For group selection]

Name : Group name  
 Detailed name : Detailed group name  
 Type : Air-conditioner/ventilation/D3Dio/D3Di  
 D3 Address : 1:1-00 to 1:4-15  
 (When DIII-NET Plus adapter is enabled:)  
 1:1-00 to 2:4-15  
 Schedule Setup : Enabled or disabled  
 Heating Optimization : Enabled or disabled  
 Temperature Limit : Enabled or disabled  
 Change Over Settings : Enabled or disabled  
 Slv R/C : Parent or child  
 Cool/Heat Option  
 : Presence/Absence/Under Selection  
 Ou/Unit Addr : Outside unit address  
 Err Code : 2-digit error code in case of error occurrence  
 Err Unit No  
 : ' ' for no error or unit number for error

### [For zone selection]

Name : Zone name  
 Detailed name : Detailed zone name  
 Start1By1 : Enabled or disabled  
 Nb of Regist Grp : Number of groups registered in a zone  
 Schedule Setup : Enabled or disabled

## 6. Push [Abnormal history] button ⑱ to display the Abnormal History Screen (Screen 6).

The following data is displayed on the Abnormal History.

### [For group selection]

Name : group name  
 Detailed name : Detailed group name  
 Error log :  
 • Time: Error occurrence time  
 • Err Code: 2-digit error code  
 • Err Code No: Unit number

### [For zone selection]

Name : group name  
 Error log :  
 • Time : Error occurrence time  
 • Name : Error occurrence group name  
 • Err Code : 2-digit error code  
 • Err Code No : Unit number

Top 10 error logs are displayed, assigning the highest priority to the time of the latest error.


When the same error recurs, the error time is renewed.

Check for display data and push [Close] button ⑳ to return to the detailed information screen Screen 5. To return to the Monitoring Screen Screen 4, push [Close] button ⑲ on that screen.




# Monitoring Detailed Information


Screen 1 Monitoring (Icon)

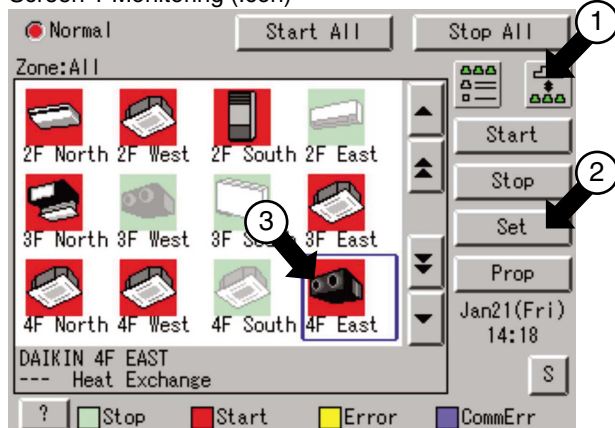

Screen 2 Set

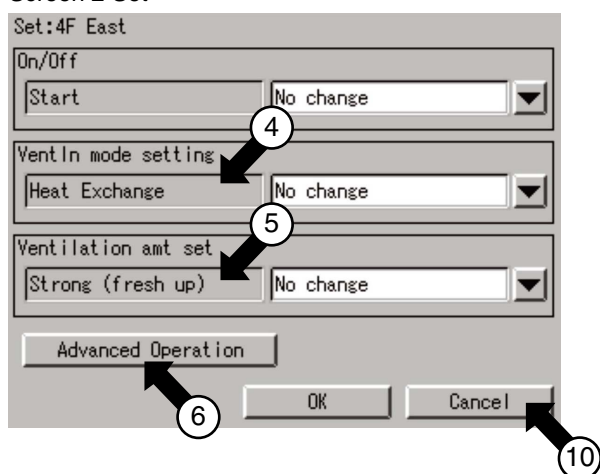

Screen 3 Advanced Operation

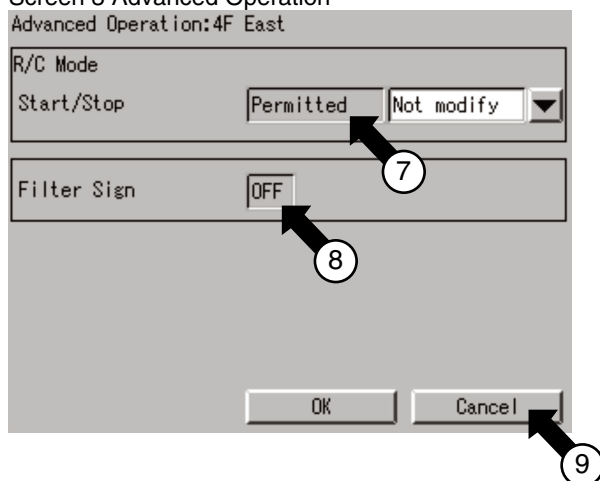

**Monitor Ventilation Status of a zone or group in Detail**  
(When monitoring the operation status in detail, you may choose any of three display types, icon, detailed icon and list.)

You may monitor the details of the operation status in units of zones or groups.

1. Select either Zone or Group by pushing the button ①.  
(Note that screens in the left-hand column are examples for group section.)

2. Push [Set] button ② to display the Operation Screen Screen 2.  
The following describes in order the contents of display data on Screen 2.  
The grayed characters ④ and ⑤ indicate the current status of the selected zone or group.

The following data is displayed on the screen of the left-hand column.

Ventilation mode : Heat Exchange  
Ventilation volume : Strong (Fresh up)

3. Push the [Advanced Operation] button ⑥ to display the Advanced Operation screen Screen 3.  
To return to the Monitoring Screen Screen 1, push [Cancel] button ⑩.

The following describes in order the contents of display data on the Advanced Operation screen Screen 3.

⑦ displays the settings made for start- or stop-related remote control operations.

Prohibited, Stop Only or Permitted is displayed.


⑧ displays a filter sign.  
ON or OFF is displayed.

Display data on Screens 2 and 3 is updated each time the respective screens are displayed. Once these screens are displayed, data is not updated unless they are closed and opened again.


4. Check for display data and push [Cancel] button ⑨.

# To set/release the lock of screen operation


Screen 1 Monitoring (Icon)

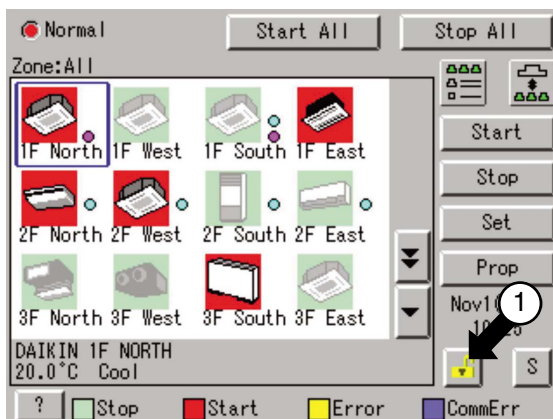

Screen 2 Confirm

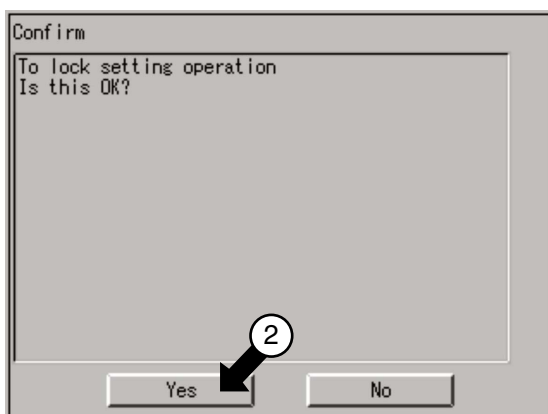

Screen 3 Password to release lock

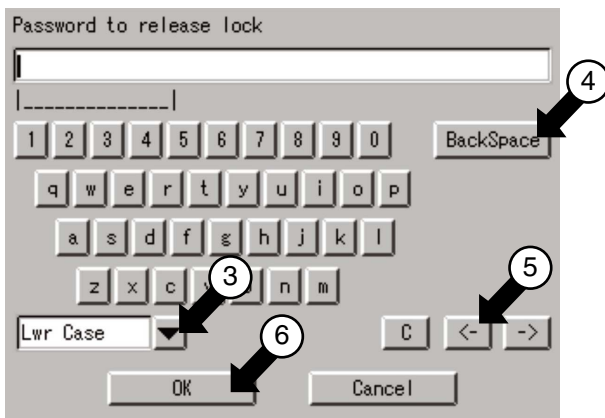

## Lock and Unlock Operations on the Screen

You may use a password to lock and unlock operations on the screen.

To make this lock/unlock setting, you have to assign an unlock password on P50 beforehand. The key mark in the following figure does not appear unless this setting is made.



Unlock icon

This icon indicates that operations on the screen have been unlocked.



Lock icon

This icon indicates that operations on the screen have been locked. In this state, you cannot manipulate the air-conditioner or the system.

### [Lock method]

1. While the unlock button is displayed, push the button ① to display the Confirmation Screen Screen 2.
2. Push Yes button ② to return to the Monitoring Screen Screen 1 with the operations locked.  
Push No button not to lock the operations.

### [Unlock method]

3. While the lock icon is displayed, push the button ①, Air-conditioner Operation button or System Operation button to display the Password to release lock Screen Screen 3.
4. Enter the password assigned for unlock password protection on P50.

#### [Lock method]

- ③: Toggle button for switching uppercase letters to lowercase letters
- ④: Correction button for characters entered by hitting the incorrect keys. When deleting one or more incorrect characters just immediate before the cursor, you must push this button as many times as necessary.
- ⑤: Button for moving the cursor. After entering the password, push OK button ⑥.

To cancel the entered password, push Cancel button and return to the Monitoring Screen Screen 1.







# System Setup Menu





The System Setup menu includes the following items:



- Password Setup
- Time Setup
- Backlight Setup
- Group Setup
- Zone Setup
- Schedule Setup
- Change Over Settings
- Temperature Limit Settings
- Heating Optimization Settings
- History Display
- Touch Panel Calibration
- Version Information








The following table describes the items mentioned above.


| System Setup Menu Item | Description  | Operation (Reference)     |
|------------------------|--|---------------------------|
| Setting a Password     | <p>You can set passwords to restrict persons responsible for control operations.</p> <ol style="list-style-type: none"> <li>1. Assigning administrator passwords<br/>You may assign administrator passwords to restrict system menu operations.</li> <li>2. Assigning unlock passwords<br/>You may assign unlock passwords to restrict air-conditioner and system menu operations.<br/>(When both passwords have been assigned, you have to reset them twice )<br/>to resume the system menu operations.</li> </ol> <p>Notes : When you forget the assigned passwords, you cannot perform any system operations. Don't forget the passwords.<br/>When you don't remember them, contact a dealer in your area.</p>  | <p>See page</p> <p>50</p> |
| Time Setup             | <p>Adjust the system clock (year, month, day, hour, minute and second).<br/>The clock is used for scheduled operation, saving history, power distribution (optional) and demand operation (optional).</p> <p>Note : Adjusting the clock may affect scheduled operation, power distribution or demand operation.<br/>( For the details of the influence, see the following. For power distribution and demand operation, see the respective instruction manual as well. )</p> <p>[Influence of changing the clock setting on scheduled operation]</p> <ul style="list-style-type: none"> <li>● The operation scheduled to run at a time passed by advancing the clock is not performed.<br/>( Ex.: When an air conditioner is scheduled to start at 10:00 (①):<br/>If the time is adjusted to 10:05 at 9:55, <u>the scheduled</u> operation (①) is not performed. )</li> <li>● The operation scheduled to run at a time reached again by turning back the clock is performed again.<br/>( Ex.: When an air conditioner is scheduled to start at 10:00 (①):<br/>If the time is adjusted to 9:55 at 10:05, <u>the scheduled</u> operation (①) is performed again at 10:00. )</li> </ul> | <p>See page</p> <p>51</p> |




| System Setup<br>Menu Item | Description   | Operation<br>(Reference)   |
|---------------------------|---|--|
| Backlight Setup           | <p>A backlight is used for the LCD of the intelligent Touch Controller. The backlight has its service life and the luminance of the backlight is reduced in proportion to the period of time it is illuminated. This setting is for preventing the luminance from being reduced in a short time by automatically turning the backlight OFF when the touch panel has been left untouched for a set period of time.<br/>           (If the backlight has been turned off automatically, touching the panel illuminates the backlight again.)</p> <p>Backlight setting includes the following two steps:</p> <ol style="list-style-type: none"> <li>1. Set the time before the backlight is automatically turned OFF.<br/>Range: 1 - 60 minutes in increments of one minute.</li> <li>2. Set whether the backlight should be automatically illuminated when any error is generated in the air conditioner while the backlight is turned OFF.<br/>Enable/Disable</li> </ol> <p>Note: If this setting is not made, the backlight generally requires replacement every 3 - 4 years.<br/>           The life of the backlight becomes even shorter if it is illuminated in a low temperature (10°C or lower) environment for a long time.<br/>           When using the intelligent Touch Controller in a low temperature environment, it is recommended that a shorter time is set for 1. above and Disabled for 2.</p> | <p>See page</p> <p> 52</p>  |
| Group Setup               | <p>Set the name, description, icons to be displayed and temperature setting limit (see Note) for the group.<br/>           If this registration is not made, addresses for central management of the group is used for the Name and Description. Operation is not affected if these settings are not made.<br/>           (Addresses for central management include up to 64 addresses 1-00, 1-01, ..... 1-15, 2-00, ..... 4-15.)</p> <p>During use of D plus adaptor, addresses are 128, 1:1-00 to 2:4-15.</p> <p>(Note): The temperature setting limit is a function to allow operation only within the preset temperature limit to prevent too much cooling or heating.<br/>           (The limit function above does not work when the operation mode of the air conditioners is Auto.)</p> <p>Ex.: Temperature setting limit: 25 - 35°C cooling<br/>           If the temperature is set to 20°C with the remote control, the intelligent Touch Controller automatically changes the temperature setting to 25°C.</p>  | <p>See page</p> <p> 53</p>  |
| Zone Setup                | <p>Set the name, description, icons to be displayed and sequential starting of the groups registered for a zone (see Note), and groups to be registered for the zone.<br/>           (The zone includes "Collective," for which all groups are registered in advance. This zone is made available for making the settings for all of the air conditioners connected to the intelligent Touch Controller. The name, description or registered groups cannot be changed for this Collective zone.)</p> <p>(Note): Setting sequential starting of groups registered for the zone</p> <p>When multiple groups are registered for a zone and operation is performed by the zone, air conditioner outdoor units start operation at one time. If many outdoor units start at the same time, a large amount of current is used momentarily, which may trip the breaker when the power capacity of the receiving device is not enough. This setting is a function to prevent such phenomenon by starting air conditioners one by one.</p> <p>(Memo 1): When power distribution (optional) is performed, the zone registered here becomes the unit for distribution (tenant). Register the zone setting by the tenant.</p> <p>(Memo 2): One group can be registered for more than one zone.</p>   | <p>See pages</p> <p> 54 to  55</p> |


| System Setup<br>Menu Item        | Description  | Operation<br>(Reference)   |
|----------------------------------|--|--|
| <b>Locale<br/>Setting</b>        | This menu permits you to select a language from the list displayed on the Intelligent Touch Controller.<br>By setting locale, you can display data in the selected language on the Intelligent Touch Controller.                                 | See page<br> 55 |
| <b>Network<br/>Setting</b>       | This menu permits you to set an IP address for the Intelligent Touch Controller.<br>(Remarks): When using a Web function (option), you have to set the IP address, subnet mask, etc. according to the environmental requirements of your system. | See page<br> 56 |
| <b>Icon Color<br/>Setting</b>    | This menu permits you to change the icon colors on the Intelligent Touch Controller.<br>Icons on the monitoring screen are displayed in the colors set on this menu.   | See page<br> 57 |
| <b>Input<br/>License<br/>Key</b> | You have to input the license key to use various options of the Intelligent Touch Controller.<br>If necessary, you can check the current license or add the new license.<br>This setting is usually done by sales engineer of our company.       | See page<br> 58 |

| System Setup Menu Item  | Description   | Operation (Reference)  |                                     |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
|---|---|--|-------------------------------------|---------|---------|--------|---------|---------|---------|--------|------------------------------|--|------------------------------|---------|---------------|---------------|---------------|-----------|------------------------------|---------------|---------------|----------|----------------------------|---------------|---------------|--------|----------------------------|---------------|---------------|----------|---------|---------|---------|-----------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|---|---------|---------|---------|-----------------|------------------------------|------------------------------|---------|---------------|-------------------------------|--|------------------------------|--|
| Setting Schedule Outline  | <p>This menu permits you to make settings for the scheduled operations in units of zones or groups. The scheduled operations are used to automatically start or stop an air-conditioner at the date and time (year, month, day, day of the week, hour and minute) previously set in the Intelligent Touch Controller according to the operating conditions of the air-conditioner.</p> <p>The following operations can be scheduled and controlled.</p> <ul style="list-style-type: none"><li>● Start/stop</li><li>● Remote control enabled/disabled</li><li>● Operation mode</li><li>● Temperature setting</li><li>● Ventilation mode ( )</li><li>● Ventilation volume ( )</li></ul> <p>Note that these settings cannot be made depending on the model in use.</p> <p>The following describes a procedure for setting the schedule.</p> <ul style="list-style-type: none"><li>● 17 kinds of dates can be registered including the weekly settings (Sunday to Saturday) and special settings (Ex1 to Ex10).<br/>These 17 kinds of dates are registered via following Setting Calendar menu. When registering them in setting calendar, you can register 11 kinds of dates including one weekly setting (because settings from Sunday to Saturday are used as a single setting) and 10 special settings (Ex1 to Ex10).</li><li>● Calendar settings, weekly settings and special settings can be made.<br/>(Example: The weekly settings are made for regular use and special settings are made for summer holiday.) These settings can be made for the coming 13 months.</li><li>● Lastly, concrete events can be registered on the respective 17 kinds of dates for which 7 weekly settings (Sunday to Saturday) and 10 special settings (Ex1 to Ex10) have been made.<br/>(Example: Setting for starting zone 1 at 9:00 and stopping it at 17:00)<br/>A maximum of 16 operations can be registered for each date.</li><li>● A maximum of 8 schedules can be registered when the above settings are handled as a single schedule.</li></ul> |  |                                     |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| The following describes how to make the settings, showing a few examples. |   |  |                                     |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Setting Zone  | <p>1. [Utilization of floors]</p> <p>1F: Reception Register "1F" as a zone name.<br/>2F: Office Register "2F" as a zone name.<br/>3F: Canteen Register "3F" as a zone name.</p>   | See page<br> 54     |                                     |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Schedule Setting Calendar   | <p>2. [Make the weekly and special settings on the setting calendar menu for the above zones]</p> <table><tr><th>Zone name<br/>Day of the week</th><th>Zone 1F</th><th>Zone 2F</th><th>Zone 3F</th></tr><tr><td>Sunday</td><td>Holiday</td><td>Holiday</td><td>Holiday</td></tr><tr><td>Monday</td><td>9:30 to 18:00: Working hours</td><td>8:30 to 17:00: Working hours<br/>12:00 to 13:00: Lunch hour<br/>17:00 to 22:00: Overtime<br/>22:00: Locking</td><td>9:30 to 14:30: Working hours</td></tr><tr><td>Tuesday</td><td>Same as above</td><td>Same as above</td><td>Same as above</td></tr><tr><td>Wednesday</td><td>9:30 to 17:00: Working hours</td><td>Same as above</td><td>Same as above</td></tr><tr><td>Thursday</td><td>Same setting as for Monday</td><td>Same as above</td><td>Same as above</td></tr><tr><td>Friday</td><td>Same setting as for Monday</td><td>Same as above</td><td>Same as above</td></tr><tr><td>Saturday</td><td>holiday</td><td>holiday</td><td>holiday</td></tr><tr><td>EX1 Third Saturday in every month</td><td>Handled as a weekday for attendance</td><td>Handled as a weekday for attendance</td><td>Handled as a weekday for attendance</td></tr><tr><td>EX2 August 1 to August 20<br/>December 29 to January 4</td><td>holiday</td><td>holiday</td><td>holiday</td></tr><tr><td>EX3 December 28</td><td>9:00 to 12:00: Working hours</td><td>9:00 to 12:00: Working hours</td><td>holiday</td></tr><tr><td>EX4 January 5</td><td>10:00 to 15:00: Working hours</td><td>9:00 to 12:00: Working hours<br/>12:00 to 13:00: Lunch hour</td><td>9:30 to 14:30: Working hours</td></tr></table>   | Zone name<br>Day of the week   | Zone 1F                             | Zone 2F | Zone 3F | Sunday | Holiday | Holiday | Holiday | Monday | 9:30 to 18:00: Working hours | 8:30 to 17:00: Working hours<br>12:00 to 13:00: Lunch hour<br>17:00 to 22:00: Overtime<br>22:00: Locking | 9:30 to 14:30: Working hours | Tuesday | Same as above | Same as above | Same as above | Wednesday | 9:30 to 17:00: Working hours | Same as above | Same as above | Thursday | Same setting as for Monday | Same as above | Same as above | Friday | Same setting as for Monday | Same as above | Same as above | Saturday | holiday | holiday | holiday | EX1 Third Saturday in every month | Handled as a weekday for attendance | Handled as a weekday for attendance | Handled as a weekday for attendance | EX2 August 1 to August 20<br>December 29 to January 4 | holiday | holiday | holiday | EX3 December 28 | 9:00 to 12:00: Working hours | 9:00 to 12:00: Working hours | holiday | EX4 January 5 | 10:00 to 15:00: Working hours | 9:00 to 12:00: Working hours<br>12:00 to 13:00: Lunch hour | 9:30 to 14:30: Working hours | See page<br> 59 |
| Zone name<br>Day of the week  | Zone 1F   | Zone 2F  | Zone 3F                             |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Sunday  | Holiday   | Holiday  | Holiday                             |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Monday  | 9:30 to 18:00: Working hours  | 8:30 to 17:00: Working hours<br>12:00 to 13:00: Lunch hour<br>17:00 to 22:00: Overtime<br>22:00: Locking | 9:30 to 14:30: Working hours        |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Tuesday   | Same as above   | Same as above  | Same as above                       |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Wednesday   | 9:30 to 17:00: Working hours  | Same as above  | Same as above                       |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Thursday  | Same setting as for Monday  | Same as above  | Same as above                       |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Friday  | Same setting as for Monday  | Same as above  | Same as above                       |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| Saturday  | holiday   | holiday  | holiday                             |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| EX1 Third Saturday in every month   | Handled as a weekday for attendance   | Handled as a weekday for attendance  | Handled as a weekday for attendance |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| EX2 August 1 to August 20<br>December 29 to January 4                     | holiday   | holiday  | holiday                             |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| EX3 December 28   | 9:00 to 12:00: Working hours  | 9:00 to 12:00: Working hours   | holiday                             |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |
| EX4 January 5   | 10:00 to 15:00: Working hours   | 9:00 to 12:00: Working hours<br>12:00 to 13:00: Lunch hour   | 9:30 to 14:30: Working hours        |         |         |        |         |         |         |        |                              |  |                              |         |               |               |               |           |                              |               |               |          |                            |               |               |        |                            |               |               |          |         |         |         |                                   |                                     |                                     |                                     |   |         |         |         |                 |                              |                              |         |               |                               |  |                              |  |


| System Setup Menu Item   | Description   | Operation (Reference)   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|--|---|---|----------------|---------------------|--|---------------------|-------------------------------------|---------------------|----------|----------|----------|--|----------|-------------------------------------|-------|----------|----------|-------------------------------------|----------|-------------------------------------|-------|----------|-------|--|----------|-------------------------------------|-------|----------|----------|-------------------------------|----------|-------------------------------|-------|---------|------|----------|----------|-------------------------------------|
| Setting Scheduled Event  | <b>3. [Set events for zone 2F.]</b><br>(Note) The following lists the events for reference.<br>Change the settings according to the actual use conditions.<br>Setting events for Monday to Friday   | See pages<br> <b>60</b> to  <b>62</b>     |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | <table><tr><th>Time</th><th>Target zone</th><th>Start/stop</th><th>Operation mode</th><th>Setting temperature</th><th>Remote control code</th></tr><tr><td>8:30</td><td>Zone 2F</td><td>Start</td><td>Disabled</td><td>Disabled</td><td>Assign priority to key pushed later</td></tr><tr><td>12:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Disabled</td></tr><tr><td>13:00</td><td>Zone 2F</td><td>Start</td><td>Disabled</td><td>Disabled</td><td>Assign priority to key pushed later</td></tr><tr><td>17:00</td><td>Zone 2F</td><td>Disabled</td><td>Disabled</td><td>Disabled</td><td>Only stop operation permitted</td></tr><tr><td>22:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Remote control operation prohibited</td></tr></table> |   | Time           | Target zone         | Start/stop   | Operation mode      | Setting temperature                 | Remote control code | 8:30     | Zone 2F  | Start    | Disabled   | Disabled | Assign priority to key pushed later | 12:00 | Zone 2F  | stop     | Disabled                            | Disabled | Disabled                            | 13:00 | Zone 2F  | Start | Disabled   | Disabled | Assign priority to key pushed later | 17:00 | Zone 2F  | Disabled | Disabled                      | Disabled | Only stop operation permitted | 22:00 | Zone 2F | stop | Disabled | Disabled | Remote control operation prohibited |
|  | Time  |   | Target zone    | Start/stop          | Operation mode   | Setting temperature | Remote control code                 |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | 8:30  |   | Zone 2F        | Start               | Disabled   | Disabled            | Assign priority to key pushed later |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | 12:00   |   | Zone 2F        | stop                | Disabled   | Disabled            | Disabled                            |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | 13:00   |   | Zone 2F        | Start               | Disabled   | Disabled            | Assign priority to key pushed later |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | 17:00   |   | Zone 2F        | Disabled            | Disabled   | Disabled            | Only stop operation permitted       |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | 22:00   |   | Zone 2F        | stop                | Disabled   | Disabled            | Remote control operation prohibited |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | Setting events for Saturday and Sunday  |   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | <table><tr><th>Time</th><th>Target zone</th><th>Start/stop</th><th>Operation mode</th><th>Setting temperature</th><th>Remote control code</th></tr><tr><td>8:30</td><td>Zone 2F</td><td>Start</td><td>Disabled</td><td>Disabled</td><td>Assign priority to key pushed later</td></tr><tr><td>12:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Remote control operation prohibited</td></tr></table>   |   | Time           | Target zone         | Start/stop   | Operation mode      | Setting temperature                 | Remote control code | 8:30     | Zone 2F  | Start    | Disabled   | Disabled | Assign priority to key pushed later | 12:00 | Zone 2F  | stop     | Disabled                            | Disabled | Remote control operation prohibited |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | Time  |   | Target zone    | Start/stop          | Operation mode   | Setting temperature | Remote control code                 |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | 8:30  |   | Zone 2F        | Start               | Disabled   | Disabled            | Assign priority to key pushed later |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | 12:00   |   | Zone 2F        | stop                | Disabled   | Disabled            | Remote control operation prohibited |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | Setting events for Ex1 (Third Saturday in every month)  |   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
|  | <table><tr><th>Time</th><th>Target zone</th><th>Start/stop</th><th>Operation mode</th><th>Setting temperature</th><th>Remote control code</th></tr><tr><td>8:30</td><td>Zone 2F</td><td>Start</td><td>Disabled</td><td>Disabled</td><td>Assign priority to key pushed later</td></tr><tr><td>12:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Disabled</td></tr><tr><td>13:00</td><td>Zone 2F</td><td>Start</td><td>Disabled</td><td>Disabled</td><td>Assign priority to key pushed later</td></tr><tr><td>17:00</td><td>Zone 2F</td><td>Disabled</td><td>Disabled</td><td>Disabled</td><td>Only stop operation permitted</td></tr><tr><td>22:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Remote control operation prohibited</td></tr></table> |   | Time           | Target zone         | Start/stop   | Operation mode      | Setting temperature                 | Remote control code | 8:30     | Zone 2F  | Start    | Disabled   | Disabled | Assign priority to key pushed later | 12:00 | Zone 2F  | stop     | Disabled                            | Disabled | Disabled                            | 13:00 | Zone 2F  | Start | Disabled   | Disabled | Assign priority to key pushed later | 17:00 | Zone 2F  | Disabled | Disabled                      | Disabled | Only stop operation permitted | 22:00 | Zone 2F | stop | Disabled | Disabled | Remote control operation prohibited |
| Time   | Target zone   | Start/stop  | Operation mode | Setting temperature | Remote control code  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 8:30   | Zone 2F   | Start   | Disabled       | Disabled            | Assign priority to key pushed later  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 12:00  | Zone 2F   | stop  | Disabled       | Disabled            | Disabled   |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 13:00  | Zone 2F   | Start   | Disabled       | Disabled            | Assign priority to key pushed later  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 17:00  | Zone 2F   | Disabled  | Disabled       | Disabled            | Only stop operation permitted  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 22:00  | Zone 2F   | stop  | Disabled       | Disabled            | Remote control operation prohibited  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Setting events for Ex2 (Summer holiday, etc.)  |   |   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| <table><tr><th>Time</th><th>Target zone</th><th>Start/stop</th><th>Operation mode</th><th>Setting temperature</th><th>Remote control code</th></tr><tr><td>9:00</td><td>Zone 2F</td><td>Disabled</td><td>Disabled</td><td>Disabled</td><td>Assign priority to key pushed later</td></tr><tr><td>17:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Remote control operation prohibited</td></tr></table>   | Time  | Target zone   | Start/stop     | Operation mode      | Setting temperature  | Remote control code | 9:00                                | Zone 2F             | Disabled | Disabled | Disabled | Assign priority to key pushed later  | 17:00    | Zone 2F                             | stop  | Disabled | Disabled | Remote control operation prohibited |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Time   | Target zone   | Start/stop  | Operation mode | Setting temperature | Remote control code  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 9:00   | Zone 2F   | Disabled  | Disabled       | Disabled            | Assign priority to key pushed later  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 17:00  | Zone 2F   | stop  | Disabled       | Disabled            | Remote control operation prohibited  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Setting events for Ex3 (December 28)   |   |   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| <table><tr><th>Time</th><th>Target zone</th><th>Start/stop</th><th>Operation mode</th><th>Setting temperature</th><th>Remote control code</th></tr><tr><td>12:00</td><td>Zone 2F</td><td>Start</td><td>Heating</td><td>25°C</td><td>Assign priority to key pushed later<br/>Temperature setting prohibited<br/>Operation mode prohibited</td></tr><tr><td>17:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Only stop operation permitted</td></tr></table>   | Time  | Target zone   | Start/stop     | Operation mode      | Setting temperature  | Remote control code | 12:00                               | Zone 2F             | Start    | Heating  | 25°C     | Assign priority to key pushed later<br>Temperature setting prohibited<br>Operation mode prohibited | 17:00    | Zone 2F                             | stop  | Disabled | Disabled | Only stop operation permitted       |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Time   | Target zone   | Start/stop  | Operation mode | Setting temperature | Remote control code  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 12:00  | Zone 2F   | Start   | Heating        | 25°C                | Assign priority to key pushed later<br>Temperature setting prohibited<br>Operation mode prohibited |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 17:00  | Zone 2F   | stop  | Disabled       | Disabled            | Only stop operation permitted  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Setting events for Ex3 (December 28)   |   |   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| <table><tr><th>Time</th><th>Target zone</th><th>Start/stop</th><th>Operation mode</th><th>Setting temperature</th><th>Remote control code</th></tr><tr><td>10:00</td><td>Zone 2F</td><td>Start</td><td>Heating</td><td>25°C</td><td>Assign priority to key pushed later<br/>Temperature setting prohibited<br/>Operation mode prohibited</td></tr><tr><td>12:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Only stop operation permitted</td></tr><tr><td>13:00</td><td>Zone 2F</td><td>Start</td><td>Disabled</td><td>25°C</td><td>Assign priority to key pushed later<br/>Temperature setting prohibited<br/>Operation mode prohibited</td></tr><tr><td>15:00</td><td>Zone 2F</td><td>stop</td><td>Disabled</td><td>Disabled</td><td>Only stop operation permitted</td></tr></table> | Time  | Target zone   | Start/stop     | Operation mode      | Setting temperature  | Remote control code | 10:00                               | Zone 2F             | Start    | Heating  | 25°C     | Assign priority to key pushed later<br>Temperature setting prohibited<br>Operation mode prohibited | 12:00    | Zone 2F                             | stop  | Disabled | Disabled | Only stop operation permitted       | 13:00    | Zone 2F                             | Start | Disabled | 25°C  | Assign priority to key pushed later<br>Temperature setting prohibited<br>Operation mode prohibited | 15:00    | Zone 2F                             | stop  | Disabled | Disabled | Only stop operation permitted |          |                               |       |         |      |          |          |                                     |
| Time   | Target zone   | Start/stop  | Operation mode | Setting temperature | Remote control code  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 10:00  | Zone 2F   | Start   | Heating        | 25°C                | Assign priority to key pushed later<br>Temperature setting prohibited<br>Operation mode prohibited |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 12:00  | Zone 2F   | stop  | Disabled       | Disabled            | Only stop operation permitted  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 13:00  | Zone 2F   | Start   | Disabled       | 25°C                | Assign priority to key pushed later<br>Temperature setting prohibited<br>Operation mode prohibited |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| 15:00  | Zone 2F   | stop  | Disabled       | Disabled            | Only stop operation permitted  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| The term "Disabled" means that the setting is not changed  |   |   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Change Schedule Name   | <b>4. [Change a schedule name.]</b><br>This function enables you to change the existing schedule name to an easy-to-understand schedule name.   | See page<br> <b>63</b>   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Change Special Date Name   | <b>5. [Change a special day name.]</b><br>This function enables you to change the existing special holiday name to an easy-to-understand holiday name.  | See page<br> <b>63</b>   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Enable or disable a schedule.  | <b>6. [Enable or disable a schedule.]</b><br>This function finally enables you to decide whether to enable or disable the setting made.   | See page<br> <b>63</b>   |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |
| Other Schedule Functions   | <b>7. [Convenient functions for setting a schedule]</b>   | See pages<br> <b>64</b> to  <b>65</b> |                |                     |  |                     |                                     |                     |          |          |          |  |          |                                     |       |          |          |                                     |          |                                     |       |          |       |  |          |                                     |       |          |          |                               |          |                               |       |         |      |          |          |                                     |


| System Setup<br>Menu Item  | Description  | Operation<br>(Reference)   |
|----------------------------|--|--|
| Change<br>Over<br>Settings | <p>This function allows the optimal room temperature to be maintained without the users having to change the operation mode by automatically switching the air conditioner's operation mode (cooling or heating) according to the room temperature for locations where the temperature difference during the day and at night is very large.</p> <p>&lt; Overview of Function &gt;</p> <p>This function automatically switches the air conditioner's operation mode and set temperature in units of one <b>(4) automatic cooling/heating switch group</b> according to the following 3 parameters: <b>(1) main set temperature, (2) main room temperature</b>, and the difference between the set temperatures when in cooling and in heating operation (listed hereafter as <b>(3) temperature difference</b>).</p> <p>[1] Control Method (How to determine the (1) Main Set Temperature and (2) Main Room Temperature)</p> <p>The 3 following methods exist for determining the above temperatures.</p> <p><b>1.Fixed Air Conditioner Method</b></p> <p>The first indoor unit (the one highest on the screen) among those registered in the automatic cooling/heating switch group is designated the main indoor unit and the set temperature and room temperature of that indoor unit are designated the main set temperature and main room temperature.</p> <p>Note, however that if the main indoor unit is in fan operation mode, its automatic cooling/heating switch group cannot be controlled.</p> <p><b>2.Operating Air Conditioner Selection Method</b></p> <p>Starting with the first indoor unit (the one highest on the screen) of those registered in the automatic cooling/heating switch group and working down, a search is performed to find an indoor unit which is both operating and in either cooling, heating, or automatic operation mode. The first one which satisfies both of these conditions is designated the main indoor unit and the set temperature and room temperature of that indoor unit are designated the main set temperature and main room temperature.</p> <p>If none is found which satisfies these conditions, the main set temperature and main room temperature are determined using the Fixed Air Conditioner Method shown above.</p> <p><b>3.Average Method</b></p> <p>All the indoor units which are registered in the automatic cooling/heating switch group, are operating, and are either in cooling, heating, or automatic mode are found, and the averages for their set temperatures and room temperatures are calculated and used as the main set temperature and main room temperature. (Decimals are rounded up.) Note, however, that if there no air conditioners among the registered air conditioners for the averages to be calculated, the main set temperature and main room temperature are determined using the Fixed Air Conditioner Method shown above.</p> <p>[2] (3) Temperature Difference</p> <p>The temperature difference is the difference between the set temperatures when automatically switching between cooling and heating when using this control. The temperature difference is set to between 1°C and 7°C in 1°C units. (When shipped from the factory, the setting is 2°C.)</p> <p>[3] (4) Automatic Cooling/Heating Switch Group</p> <ul style="list-style-type: none"> <li>• This control is performed using one automatic cooling/heating switch group as a unit.</li> <li>• Up to 128 indoor unit groups can be registered in one automatic cooling/heating switch group.</li> <li>• It is not possible to register the same indoor unit to multiple automatic cooling/heating switch groups.</li> <li>• Up to 128 automatic cooling/heating switch groups can be registered in this unit.</li> <li>• These controls can be enabled and disabled for each individual automatic cooling/heating switch group.<br/>(These controls only work for groups set as enabled.)</li> <li>• A mark indicating that the indoor unit is under automatic control will appear on the monitor screen.</li> </ul> | See page<br> 66 |
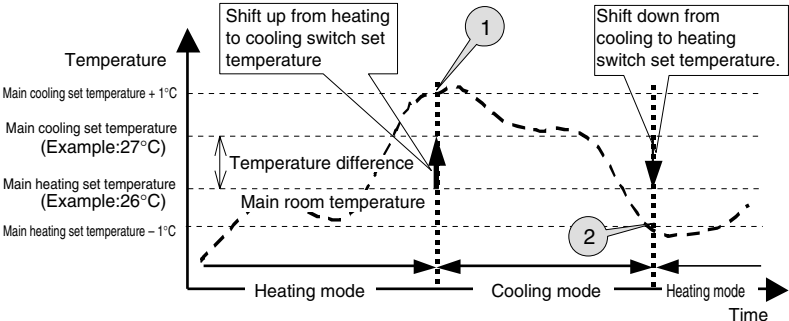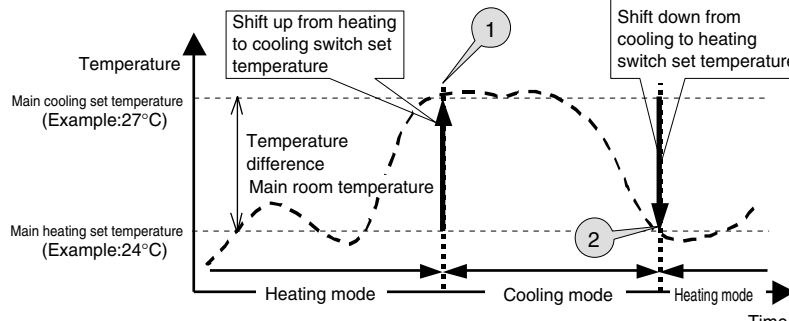
| System Setup<br>Menu Item          | Description   | Operation<br>(Reference)   |
|------------------------------------|---|--|
| <p><b>Change Over Settings</b></p> | <p><b>&lt; Control Implementation Conditions &gt;</b><br/> The relationship between the main room temperature, the main set temperature, and the operation mode is described below, with examples.<br/> (Two examples are given, as the operation differs for temperature differences 2°C and below and 3°C and above.)<br/> The controls are implemented when the control conditions are satisfied, every 5 minutes from the time the power is turned on.</p> <p><b>&lt; Implementation conditions when the temperature difference is 2°C or lower.&gt;</b><br/> (The figure below is for a temperature difference of 1°C)</p>  <p>① Conditions for switching from heating to cooling:<br/> Main room temperature &gt; main set temperature + temperature difference + 1°C<br/> (Example: 28.1°C &gt; 26°C + 1°C + 1°C)</p> <p>② Conditions for switching from cooling to heating:<br/> Main room temperature &lt; main set temperature – temperature difference – 1°C<br/> (Example: 24.9°C &lt; 27°C – 1°C – 1°C)</p> <p><b>&lt; Implementation conditions when the temperature difference is 3°C or higher.&gt;</b><br/> (The figure below is for a temperature difference of 3°C)</p>  <p>① Conditions for switching from heating to cooling:<br/> Main room temperature &gt; main set temperature + temperature difference<br/> (Example: 27.1°C &gt; 24°C + 3°C)</p> <p>② Conditions for switching from cooling to heating:<br/> Main room temperature &lt; main set temperature - temperature difference<br/> (Example: 23.9°C &lt; 27°C – 3°C)</p> <p>* See the next page for a detailed description of the instructions to the air conditioner.</p> | <p>See page  66</p> |


| System Setup Menu Item  | Description  | Operation (Reference)   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|---|--|---|--|--|--|--|--|---|--|----------------|-----------------|--|---------------------------|---------|--|---------------------------|---------|-------------------------------|---|--|--|--|--|--|---|--|----------------|-----------------|--|---------------------------|---------|--|---------------------------|---------|-------------------------------|---|--|--|--|--|--|---|--|----------------|-----------------|------------------------------------|---------------------------|---------|--|---------------------------|----------------|----------------|----------------------|---------|--|---|--|--|--|--|--|---|--|----------------|-----------------|------------------------------------|---------------------------|---------|--|---------------------------|----------------|----------------|----------------------|---------|--|---|
| Change Over Settings  | <p>The control instruction is sent to the indoor units registered in the automatic cooling/heating switch group when the control implementation conditions shown on the previous page are satisfied. The actual control instructions sent differ according to the control method setting (fixed air conditioner/operating air conditioner selection/average) and the satisfied conditions (switch from cooling to heating, etc.). The control instructions for each situation are shown below.</p> <p>&lt;Instructions sent to indoor units when control is implemented&gt;</p> <p>1.Fixed air conditioner/operating air conditioner selection methods</p> <p>The control instructions are determined by the operation mode of the main indoor unit and the main set temperature. Instructions regarding the operation mode and the set temperature, shown below, are sent to all the indoor units registered in the group once all the control implementation conditions on the previous page are satisfied.</p> <table><tr><td colspan="2">When conditions are met for switching from heating to cooling</td><td></td><td></td></tr><tr><td colspan="2" rowspan="2"></td><td colspan="2">Instructions to indoor units registered in the automatic cooling/heating switch group</td></tr><tr><td>Operation mode</td><td>Set temperature</td></tr><tr><td rowspan="2">Operation mode of the main indoor unit</td><td>Heating/Automatic heating</td><td>cooling</td><td>main unit setting temperature+temperature difference</td></tr><tr><td>Cooling/Automatic cooling</td><td>cooling</td><td>main unit setting temperature</td></tr><tr><td colspan="2">When conditions are met for switching from cooling to heating</td><td></td><td></td></tr><tr><td colspan="2" rowspan="2"></td><td colspan="2">Instructions to indoor units registered in the automatic cooling/heating switch group</td></tr><tr><td>Operation mode</td><td>Set temperature</td></tr><tr><td rowspan="2">Operation mode of the main indoor unit</td><td>Cooling/Automatic cooling</td><td>heating</td><td>main unit setting temperature-temperature difference</td></tr><tr><td>Heating/Automatic heating</td><td>heating</td><td>main unit setting temperature</td></tr></table> <p>For this control, when the operation mode of the main indoor unit is automatic, whether it is automatic cooling mode or automatic heating mode is checked when judging the control conditions. Once the instructions have been determined, either a cooling or a heating instruction is sent to indoor units in automatic operation mode. (They switch from automatic to cooling or heating.)</p> <p>2. Average Method</p> <p>Unlike the fixed air conditioner and operating air conditioner selection methods, the set temperature is decided based on considerations of the current set temperature for each individual unit, without sending the same instruction based on the main indoor unit to all the air conditioners. When implementing the control, the following operation modes and set temperature instructions are executed.</p> <table><tr><td colspan="2">When conditions are met for switching from heating to cooling</td><td></td><td></td></tr><tr><td colspan="2" rowspan="2"></td><td colspan="2">Instructions to indoor units registered in the automatic cooling/heating switch group</td></tr><tr><td>Operation mode</td><td>Set temperature</td></tr><tr><td rowspan="3">Current indoor unit operation mode</td><td>Heating/Automatic heating</td><td>cooling</td><td>Current set temperature+temperature difference</td></tr><tr><td>Cooling/Automatic cooling</td><td>No instruction</td><td>No instruction</td></tr><tr><td>Other than the above</td><td>cooling</td><td>main unit setting temperature+temperature difference</td></tr><tr><td colspan="2">When conditions are met for switching from cooling to heating</td><td></td><td></td></tr><tr><td colspan="2" rowspan="2"></td><td colspan="2">Instructions to indoor units registered in the automatic cooling/heating switch group</td></tr><tr><td>Operation mode</td><td>Set temperature</td></tr><tr><td rowspan="3">Current indoor unit operation mode</td><td>Cooling/Automatic cooling</td><td>heating</td><td>Current set temperature-temperature difference</td></tr><tr><td>Heating/Automatic heating</td><td>No instruction</td><td>No instruction</td></tr><tr><td>Other than the above</td><td>cooling</td><td>main unit setting temperature-temperature difference</td></tr></table> | When conditions are met for switching from heating to cooling                         |  |  |  |  |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  | Operation mode | Set temperature | Operation mode of the main indoor unit | Heating/Automatic heating | cooling | main unit setting temperature+temperature difference | Cooling/Automatic cooling | cooling | main unit setting temperature | When conditions are met for switching from cooling to heating |  |  |  |  |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  | Operation mode | Set temperature | Operation mode of the main indoor unit | Cooling/Automatic cooling | heating | main unit setting temperature-temperature difference | Heating/Automatic heating | heating | main unit setting temperature | When conditions are met for switching from heating to cooling |  |  |  |  |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  | Operation mode | Set temperature | Current indoor unit operation mode | Heating/Automatic heating | cooling | Current set temperature+temperature difference | Cooling/Automatic cooling | No instruction | No instruction | Other than the above | cooling | main unit setting temperature+temperature difference | When conditions are met for switching from cooling to heating |  |  |  |  |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  | Operation mode | Set temperature | Current indoor unit operation mode | Cooling/Automatic cooling | heating | Current set temperature-temperature difference | Heating/Automatic heating | No instruction | No instruction | Other than the above | cooling | main unit setting temperature-temperature difference | See page<br> |
| When conditions are met for switching from heating to cooling |  |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   |  | Operation mode  | Set temperature                                      |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
| Operation mode of the main indoor unit                        | Heating/Automatic heating  | cooling   | main unit setting temperature+temperature difference |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   | Cooling/Automatic cooling  | cooling   | main unit setting temperature                        |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
| When conditions are met for switching from cooling to heating |  |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   |  | Operation mode  | Set temperature                                      |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
| Operation mode of the main indoor unit                        | Cooling/Automatic cooling  | heating   | main unit setting temperature-temperature difference |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   | Heating/Automatic heating  | heating   | main unit setting temperature                        |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
| When conditions are met for switching from heating to cooling |  |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   |  | Operation mode  | Set temperature                                      |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
| Current indoor unit operation mode                            | Heating/Automatic heating  | cooling   | Current set temperature+temperature difference       |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   | Cooling/Automatic cooling  | No instruction  | No instruction                                       |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   | Other than the above   | cooling   | main unit setting temperature+temperature difference |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
| When conditions are met for switching from cooling to heating |  |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   |  | Operation mode  | Set temperature                                      |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
| Current indoor unit operation mode                            | Cooling/Automatic cooling  | heating   | Current set temperature-temperature difference       |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   | Heating/Automatic heating  | No instruction  | No instruction                                       |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |
|   | Other than the above   | cooling   | main unit setting temperature-temperature difference |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |  |                           |         |  |                           |         |                               |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |  |  |  |  |  |   |  |                |                 |                                    |                           |         |  |                           |                |                |                      |         |  |   |





| System Setup Menu Item                  | Description  | Operation (Reference)   |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
|---|--|---|----------------------|--|--|--|--|---|--|----------------|-----------------|---|--|--|--|----------------|---------------------------|---------|----------------------|-------------|--|--|--|------------------------------|--|--|--|--|--|---|--|----------------|-----------------|---|--|--|--|----------------|---------------------------|---------|----------------------|-------------|--|--|--|--|
| Change Over Settings                    | <p>&lt;Precautions when using this control&gt;</p> <p>1.Do not use the set temperature restriction function in indoor units which are subject to control.<br/>If it is used, operation modes will be switched and the set temperature will be changed repeatedly, <b>possibly causing the air conditioners to break down.</b> <b>Caution</b></p> <p>(See P44 for how to set the set temperature restriction function.)</p> <p>2.The following will happen if a communication error (the icon on the screen is blue) occurs in the air conditioner being controlled.</p> <p>2-1.Fixed air conditioner<br/>If the main unit experiences a communication error, the automatic cooling/heating switch group control will not happen.</p> <p>2-2.Operating Air Conditioner Selection Method<br/>Remove the air conditioner experiencing the communication error from selection as the main unit, and select an air conditioner with normal communication.</p> <p>2-3.Average Method<br/>Remove the air conditioner experiencing the communication error from the calculation for the average, and only use air conditioners with normal communication for calculating the average.</p> <p>3.Control which matches the main unit's operation mode<br/>(Control for when the operation mode of the main unit does not represent the automatic cooling/heating switch group.)<br/>It is possible that only the operation mode for the main unit is changed when control using this function is done based on the main group unit (when the control method is fixed air conditioner or operating air conditioner). The following control is performed because it is possible that the operation mode of air conditioners other than the main unit in the group might be in violation of the purpose of control and not automatically switch if the conditions for implementing control using this function are not satisfied.</p> <p>[Example] Heating Mode-Matched Control<br/>When the main unit is already operating in heating mode, whether or not the conditions for implementing a switch from cooling to heating (main room temperature &lt; main set temperature – temperature difference) depends on the state (environment) of the main unit. (If only the main unit is in heating operation, it is possible that the room temperature might not rise because of the indoor units other than the main unit which are in cooling operation, and the above control conditions might not be satisfied.)<br/>Therefore, only when control is performed based on the main group unit is the control below performed depending on the operation mode of the main group unit.</p> <table><tr><th colspan="4">Cooling Mode-Matched Control</th></tr><tr><td colspan="2" rowspan="2"></td><td colspan="2">Instructions to indoor units registered in the automatic cooling/heating switch group</td></tr><tr><td>Operation mode</td><td>Set temperature</td></tr><tr><td colspan="4">State of main unit (control conditions)</td></tr><tr><td>Operation mode</td><td>Cooling/Automatic cooling</td><td>Cooling</td><td>main set temperature</td></tr><tr><td>Temperature</td><td>Main room temperature&gt;main set temperature</td><td></td><td></td></tr><tr><th colspan="4">Heating Mode-Matched Control</th></tr><tr><td colspan="2" rowspan="2"></td><td colspan="2">Instructions to indoor units registered in the automatic cooling/heating switch group</td></tr><tr><td>Operation mode</td><td>Set temperature</td></tr><tr><td colspan="4">State of main unit (control conditions)</td></tr><tr><td>Operation mode</td><td>Heating/Automatic heating</td><td>Heating</td><td>main set temperature</td></tr><tr><td>Temperature</td><td>Main room temperature&lt;main set temperature</td><td></td><td></td></tr></table> | Cooling Mode-Matched Control  |                      |  |  |  |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  | Operation mode | Set temperature | State of main unit (control conditions) |  |  |  | Operation mode | Cooling/Automatic cooling | Cooling | main set temperature | Temperature | Main room temperature>main set temperature |  |  | Heating Mode-Matched Control |  |  |  |  |  | Instructions to indoor units registered in the automatic cooling/heating switch group |  | Operation mode | Set temperature | State of main unit (control conditions) |  |  |  | Operation mode | Heating/Automatic heating | Heating | main set temperature | Temperature | Main room temperature<main set temperature |  |  | See page<br> 66 |
| Cooling Mode-Matched Control            |  |   |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
|   |  | Instructions to indoor units registered in the automatic cooling/heating switch group |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
|   |  | Operation mode  | Set temperature      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
| State of main unit (control conditions) |  |   |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
| Operation mode                          | Cooling/Automatic cooling  | Cooling   | main set temperature |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
| Temperature                             | Main room temperature>main set temperature   |   |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
| Heating Mode-Matched Control            |  |   |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
|   |  | Instructions to indoor units registered in the automatic cooling/heating switch group |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
|   |  | Operation mode  | Set temperature      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
| State of main unit (control conditions) |  |   |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
| Operation mode                          | Heating/Automatic heating  | Heating   | main set temperature |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |
| Temperature                             | Main room temperature<main set temperature   |   |                      |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |                              |  |  |  |  |  |   |  |                |                 |   |  |  |  |                |                           |         |                      |             |  |  |  |  |

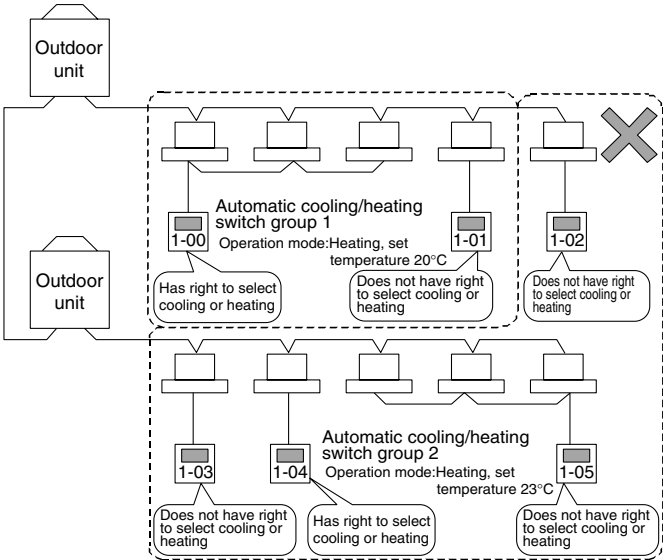

| System Setup<br>Menu Item  | Description   | Operation<br>(Reference)  |
|----------------------------|---|---|
| Change<br>Over<br>Settings | <p data-bbox="405 282 1225 407">4. Because this control automatically switches the operation mode, if the air conditioner is not a cooling/heating free unit, <u>always register indoor units which have the right to select cooling or heating for the same cooling system to the same automatic cooling/heating switch group, when controlling indoor units which do not have such rights.</u></p> <p data-bbox="405 442 1214 504">Unexpected things may happen if control is done using the following incorrect automatic cooling/heating switch group settings.</p>  <p data-bbox="405 1126 1214 1201">If indoor units (address 1-02) which do not have the right to select cooling or heating for the same cooling system are not registered to the same automatic cooling/heating switch group, address 1-02 will behave in the following way.</p> <p data-bbox="405 1228 740 1250">[Actions related to operation mode]</p> <p data-bbox="405 1253 1182 1325">If the room temperature of Group 1 rises, <u>group 1 will switch to cooling as per this control and the set temperature will become 25°C (if the temperature difference is 5°C).</u></p> <p data-bbox="405 1329 1177 1402">When this happens, the set temperature of the indoor unit at 1-02 will continue at 23°C although only the operation mode will change to cooling, i.e. in a different operation mode from the other indoor units in Group 2.</p> <p data-bbox="405 1406 919 1427">→ <u>The operation mode will be determined by Group 1.</u></p> <p data-bbox="405 1456 743 1477">[Actions regarding set temperature]</p> <p data-bbox="405 1481 1182 1553">If the room temperature of Group 2 rises, <u>group 2 will switch to cooling as per this control and the set temperature will become 28°C (if the temperature difference is 5°C).</u></p> <p data-bbox="405 1557 1209 1628">When this happens, the operation mode of the indoor unit at 1-02 will continue in heating and only the set temperature will change to 28°C, i.e. in a different operation mode from the other indoor units in Group 2.</p> <p data-bbox="405 1632 919 1653">→ <u>The set temperature will be determined by Group 2.</u></p> | <p data-bbox="1254 278 1350 299">See page</p> <p data-bbox="1289 318 1350 369">66</p> |

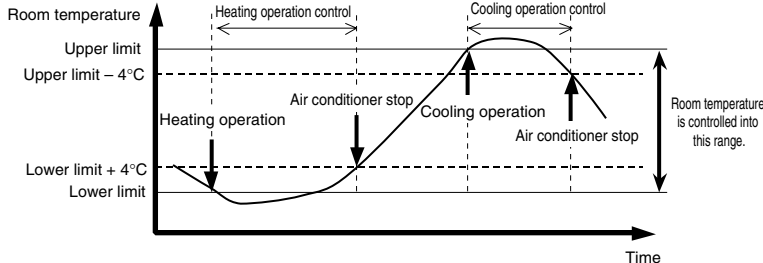

| System Setup<br>Menu Item        | Description  | Operation<br>(Reference) |
|----------------------------------|--|--------------------------|
| Temperature<br>Limit<br>Settings | <p>This function automatically starts and stops air conditioners in order to prevent the room temperature of unmanned rooms from getting too high or too low. For example, This has the following advantages.</p> <ul style="list-style-type: none"> <li>• It prevents overheating of or condensation from forming on equipment which needs to be temperature controlled in unmanned rooms.</li> <li>• It can also help buildings and not just individual rooms to preserve heat by preventing unmanned rooms from reaching extremes of temperature at night.</li> </ul> <p>&lt;Overview of Function&gt;</p> <p>This function performs automatic control by monitoring the relationship between the set upper and lower limits and the room temperature (the air conditioner intake temperature) to prevent the set room temperature from exceeding those limits. This function starts and stops the air conditioners and changes the operation mode.</p> <ul style="list-style-type: none"> <li>• <b>Cooling operation control (and stop control)</b><br/>Cooling operation is automatically started when the room temperature rises above the set upper temperature limit.<br/>The air conditioner is stopped once the room temperature falls sufficiently far below the upper temperature limit (upper temperature limit – 4°C or more) during cooling due to this control.</li> <li>• <b>Heating operation control (and stop control)</b><br/>Heating operation is automatically started when the room temperature falls below the set lower temperature limit.<br/>The air conditioner is stopped once the room temperature rises sufficiently far above the lower temperature limit (lower temperature limit + 4°C or more) during heating due to this control.</li> </ul> <p>①:Controlled air conditioners</p> <ul style="list-style-type: none"> <li>• This controls auto-start and auto-stop for each air conditioner based on the temperature set for each room temperature limit control group.</li> <li>• This control is not applicable to air conditioners which are already operating, even if they are registered to the room temperature limit control group. (It is only applicable to stopped air conditioners.)</li> <li>• Up to 128 indoor groups can be registered in one room temperature limit control group.</li> <li>• It is not possible to register the same indoor unit to multiple room temperature limit control groups.</li> <li>• Up to 8 room temperature limit control groups can be registered in this unit.</li> <li>• These controls can be enabled and disabled for each individual room temperature limit control group.<br/>(These controls only work for groups set as enabled.)</li> <li>• A mark indicating that the indoor unit is under automatic control will appear on the monitor screen.</li> </ul> <p>②:Upper room temperature limit</p> <ul style="list-style-type: none"> <li>• <b>Upper and lower room temperature limit</b><br/>The upper and lower room temperature limits desired for automatic control. The settable range of upper and lower limits is as follows.</li> </ul> <p><b>Upper limit</b> : 34°C to 50°C in 1°C units. (The default is 36°C.)<br/> <b>Lower limit</b> : 2°C to 14°C in 1°C units. (The default is 14°C.)</p> <p>The temperature different between the upper or lower limit and the room temperature when the air conditioner under cooling (heating) operation control using this function (to prevent hunting) is 4°C.</p> | <p>See page<br/>67</p>   |
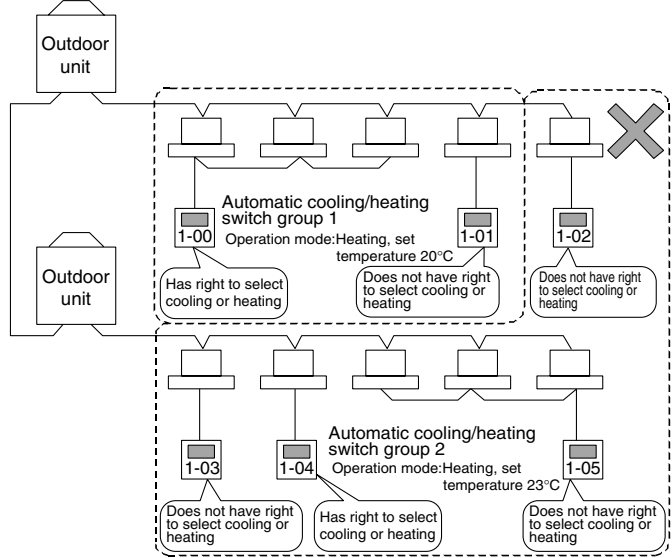
| System Setup<br>Menu Item        | Description   | Operation<br>(Reference)  |
|----------------------------------|---|---------------------------|
| Temperature<br>Limit<br>Settings | <p>③:Control Implementation Conditions</p> <p>The relationship between room temperature, upper/lower limit, and operation mode is shown below.</p> <p>The controls are implemented when the control conditions are satisfied, every 5 minutes from the time the power is turned on.</p>  <p>This function performs stop control for cooling/heating operation and other operation controls to prevent excessive increase or decrease of the room temperature. The set values of room temperature upper/lower limit control group are used for the upper/lower limit values and other factors of this control. This control is not performed for the group of air conditioners to which this control is set invalid. The set temperatures of the air conditioners are not changed by this control.</p> <p>① <b>Start condition of cooling operation:</b><br/> <u>Cooling operation is controlled when the room temperature is higher than the upper limit of room temperature and the unit is stopped.</u></p> <p>② <b>Start condition of heating operation:</b><br/> <u>Heating operation is controlled when the room temperature is lower than the lower limit of room temperature and the unit is stopped.</u></p> <p>③ <b>Stop condition:</b><br/> The air conditioners under cooling/heating control by this function stop when any of the following conditions are met.</p> <ul style="list-style-type: none"> <li>● <b>During cooling operation</b><br/> “Room temperature is lower than the upper limit of room temperature – 4°C”<br/> or “Room temperature is lower than the cooling set temperature”</li> <li>● <b>During heating operation</b><br/> “Room temperature is higher than the lower limit of room temperature + 4°C”<br/> or “Room temperature is higher than the heating set temperature”</li> </ul> | <p>See page</p> <p>67</p> |

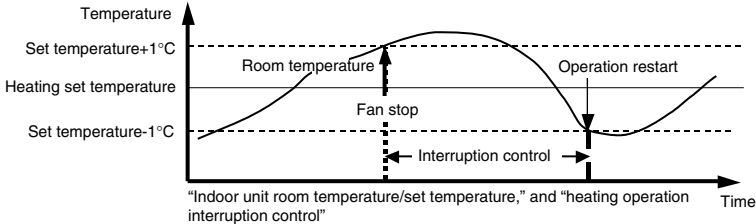


| System Setup<br>Menu Item        | Description   | Operation<br>(Reference)  |
|----------------------------------|---|---------------------------|
| Temperature<br>Limit<br>Settings | <p>④:Precautions for the use of this control</p> <p>The operation modes are switched over automatically with this control. Therefore, if the air conditioners are not cooling/heating-free machines, and <u>when an indoor unit without cooling/heating selection right is to be controlled, be sure to register an indoor unit with cooling/heating selection right in the same cooling system into the same room temperature upper/lower limit group.</u></p> <p>If the control is performed with <u>a wrong setting of room temperature upper/lower limit control group</u> as shown in the figure below, the following unexpected control will be performed.</p>  <p>As shown in the figure above, if an indoor unit (address 1-02) not having the cooling/heating selection right is not registered into the same room temperature upper/lower limit control group with an indoor unit having cooling/heating selection right in the same cooling system, the operation of the address 1-02 will be as follows.</p> <p>[Actions related to operation mode]</p> <p><u>When the room temperature of the group 1 rises, the operation mode of the group 1 is switched to cooling operation by this control, and the automatic operation continues.</u></p> <p><u>At this time, only the operation mode of the indoor unit 1-02 changes into cooling mode, and operates in the mode different from other indoor units.</u></p> <p>→<u>The operation mode will be determined by Group 1.</u></p> | <p>See page</p> <p>67</p> |

| System Setup<br>Menu Item          | Description   | Operation<br>(Reference)  |
|------------------------------------|---|---|
| Heating<br>Optimization<br>Setting | <p>With the air conditioners made by Daikin (Buil-Mul or Building multi indoor unit), when the thermo-switch is turned off (the compressor is off) during heating operation, the fan does not stop. (It continues to run at the minimum speed, or at the speed set in the heating mode.) Also, because a slight amount of coolant continues to circulate at this time, the room temperature may rise slightly by the fan operation described above.</p> <p>Therefore, this function starts/stops the air conditioner based on the room temperature (intake air temperature) and the set temperature during heating operation to prevent the temperature rise.</p> <p>&lt;Overview of Function&gt;</p> <ul style="list-style-type: none"> <li> <b>● Operation interruption control</b><br/> When the room temperature for the air conditioner in heating operation becomes higher than the set temperature + 1°C, the air conditioner is stopped. However, because the stop control (operation interruption) by this function is the optimum control for turning off of the thermo-switch during heating operation, the system regards this status as in operation, and the screen display on the unit remains “In-operation.”<br/> *After the unit is interrupted by this function, it restarts when the specified conditions are met. Therefore the user’s explicit stop command is effective. </li> <li> <b>● Operation restart control</b><br/> When the room temperature for the air conditioner under the stop control by this function (during heating operation interruption) becomes lower than the set temperature – 1°C, the air conditioner is restarted. </li> </ul> <p>①:Controlled air conditioners</p> <ul style="list-style-type: none"> <li>● This control is performed for each individual air conditioner. This function can be set to enabled/disabled for each air conditioner.</li> <li>● Only the air conditioners with this function set to enabled becomes the subject for the control.</li> <li>● For the indoor units under this control, a mark showing the automatic control is displayed on the monitoring screen.</li> </ul> | <p>See page</p> <p> 68</p> |

| System Setup<br>Menu Item    | Description  | Operation<br>(Reference)  |
|------------------------------|--|---|
| Heating Optimization Setting | <p>②:Control execution condition</p> <p>The relationship between room temperature, set temperature, and operation/stop status is shown in the figure below.</p> <p>The operation period of the control is every 5 minutes after the system power is turned on, and the operation is executed when the control conditions are met at each timing.</p>  <p>This function performs start/stop control based on the relationship between the set temperature and the room temperature (intake air temperature) of the air conditioner in heating operation. The control conditions are described below.</p> <p><b>Operation interruption control in heating mode (Stop control)</b></p> <p>When the room temperature for the air conditioner in heating operation becomes higher than the set temperature + 1°C, the air conditioner is stopped. The stoppage (operation interruption) by this control is processed as “in-operation of the air conditioner” on the monitoring screen of the unit.</p> <p><b>Operation restart control in heating mode (start control)</b></p> <p>When the room temperature for the air conditioner in interruption becomes lower than the set temperature – 1°C by this function, the air conditioner is restarted.</p> <p><b>Enabled-to-disabled change over control (start control)</b></p> <p>When the setting of this function for the air conditioner is changed from enabled to disabled during operation interruption, the operation is restarted.</p> <p><b>Operation mode change over control (Start control)</b></p> <p>When the operation mode of the air conditioner in interruption is changed by this function, the air conditioner is restarted.</p> <p>③:Precautions for the use of this control</p> <ol style="list-style-type: none"> <li>1.The stoppage (operation interruption) by this control is processed as “in-operation of the air conditioner” on the monitoring screen of the unit. As a result, this status is indicated as “Stop” on the remote controller of the air conditioner, and as “In-operation” on the monitoring screen of the unit.</li> <li>2.As explained above (item 1), because the display on the remote controller during operation interruption by this control is “Stop,” the user may not perform the stop operation even at the scheduled time of system stoppage, resulting in forget-to-stop error. Therefore, it is recommended that a measure against forget-to-stop error be executed by the scheduled control of the unit or other appropriate methods.</li> </ol> | See page<br> |


| System Setup<br>Menu Item                       | Description  | Operation<br>(Reference)  |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|---|--|---|--|-------------|---|--|--|-------------|---------------------|---|-------------------------|--|---|--|---|--------------------|--|------------------------|---|-------------|--------------------------------|--------------|---------------------------------|------------------------|--------------------|---|-----------------------|---|-------------------------|--|-----------------|---------------------------|---|--|
| E-Mail<br>Setting                               | <p>The e-mail function (option) comes standard with the Web function.</p> <p>When an air-conditioner fault has been detected in the Intelligent Touch Controller, this option can send e-mail to up to three destinations of the registered administrator to inform the status of the fault (date and time of error occurrence and error code).</p> <ul style="list-style-type: none"><li>The following equipment is required to use the e-mail function.<ul style="list-style-type: none"><li>SMTP (Simple Mail Transfer Protocol) server<ul style="list-style-type: none"><li>This server is capable of sending e-mail conforming to RFC821.</li></ul></li><li>Electronic mail receiving terminal<ul style="list-style-type: none"><li>This server is capable of transferring e-mail conforming to RFC822.</li></ul></li></ul></li></ul> <p>This setting is made for items listed in the following table.</p> <table><tr><th colspan="2">Setting item</th><th>Description</th></tr><tr><td colspan="2">Enabling/disabling the electronic mail function</td><td>When this mail function has been disabled, no e-mail transmission takes place.</td></tr><tr><td rowspan="7">SMTP server</td><td>SMTP server address</td><td>Specifies a URL (IP address) for the SMTP server.</td></tr><tr><td>SMTP server port number</td><td>Specifies a port number for the SMTP server.</td></tr><tr><td>Enabling/disabling the POP before SMTP function</td><td>Specifies whether to access the specified POP server before mail transmission.</td></tr><tr><td rowspan="4">Setup items for enabling/disabling the POP before SMTP function</td><td>POP server address</td><td>Specifies a URL (IP address) for the POP server.</td></tr><tr><td>POP server port number</td><td>Specifies a port number for the POP server.</td></tr><tr><td>POP user ID</td><td>User ID for POP authentication</td></tr><tr><td>POP password</td><td>Password for POP authentication</td></tr><tr><td rowspan="3">Transmission condition</td><td>Transmission group</td><td>Specifies a group to which e-mail transmission takes place at error occurrence.</td></tr><tr><td>Transmission interval</td><td>Retransmits e-mail at the specified time when the error remains. (Retransmission can take place in units of hours within a setting range from 1 to 72).</td></tr><tr><td>ITO identification name</td><td>Specifies a character string to be displayed as the subject at mail reception.</td></tr><tr><td>Electronic mail</td><td>Mail addresses 1, 2 and 3</td><td>Specifies up to three mail addresses.<br/>This address specification may be omitted.</td></tr></table> <ul style="list-style-type: none"><li>E-mail transmission timing<ul style="list-style-type: none"><li>When an error has been found, e-mail is transmitted to a registered group 3 minutes later.</li></ul></li><li>Operation at e-mail transmission error<ul style="list-style-type: none"><li>When an e-mail transmission error has been found, e-mail is transmitted three times at intervals of 2 minutes. However, no e-mail transmission takes place in the following cases:<ul style="list-style-type: none"><li>— The POP server returns an error at the time of user authentication.</li><li>— The SMTP server makes a permanent error response.</li><li>— Test e-mail transmission takes place.</li></ul></li></ul></li><li>E-mail transmission log<ul style="list-style-type: none"><li>A maximum of 300 e-mail logs can be saved for successful or unsuccessful transmission.</li></ul></li></ul> <p>For details on e-mail logs, refer to “Log Display” on P69.</p> | Setting item  |  | Description | Enabling/disabling the electronic mail function |  | When this mail function has been disabled, no e-mail transmission takes place. | SMTP server | SMTP server address | Specifies a URL (IP address) for the SMTP server. | SMTP server port number | Specifies a port number for the SMTP server. | Enabling/disabling the POP before SMTP function | Specifies whether to access the specified POP server before mail transmission. | Setup items for enabling/disabling the POP before SMTP function | POP server address | Specifies a URL (IP address) for the POP server. | POP server port number | Specifies a port number for the POP server. | POP user ID | User ID for POP authentication | POP password | Password for POP authentication | Transmission condition | Transmission group | Specifies a group to which e-mail transmission takes place at error occurrence. | Transmission interval | Retransmits e-mail at the specified time when the error remains. (Retransmission can take place in units of hours within a setting range from 1 to 72). | ITO identification name | Specifies a character string to be displayed as the subject at mail reception. | Electronic mail | Mail addresses 1, 2 and 3 | Specifies up to three mail addresses.<br>This address specification may be omitted. | See pages<br> 70  71 |
| Setting item                                    |  | Description   |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
| Enabling/disabling the electronic mail function |  | When this mail function has been disabled, no e-mail transmission takes place.  |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
| SMTP server                                     | SMTP server address  | Specifies a URL (IP address) for the SMTP server.   |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|   | SMTP server port number  | Specifies a port number for the SMTP server.  |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|   | Enabling/disabling the POP before SMTP function  | Specifies whether to access the specified POP server before mail transmission.  |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|   | Setup items for enabling/disabling the POP before SMTP function  | POP server address  | Specifies a URL (IP address) for the POP server. |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|   |  | POP server port number  | Specifies a port number for the POP server.      |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|   |  | POP user ID   | User ID for POP authentication                   |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|   |  | POP password  | Password for POP authentication                  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
| Transmission condition                          | Transmission group   | Specifies a group to which e-mail transmission takes place at error occurrence.   |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|   | Transmission interval  | Retransmits e-mail at the specified time when the error remains. (Retransmission can take place in units of hours within a setting range from 1 to 72). |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
|   | ITO identification name  | Specifies a character string to be displayed as the subject at mail reception.  |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |
| Electronic mail                                 | Mail addresses 1, 2 and 3  | Specifies up to three mail addresses.<br>This address specification may be omitted.   |  |             |   |  |  |             |                     |   |                         |  |   |  |   |                    |  |                        |   |             |                                |              |                                 |                        |                    |   |                       |   |                         |  |                 |                           |   |  |




| System Setup<br>Menu Item  | Description   | Operation<br>(Reference)  |
|----------------------------|---|---|
| History<br>Display         | <p>This menu shows the time when record is made in addition to the following. Use this to see if the scheduled operation set is properly performed or if errors are generated often in any specific air conditioner.</p> <ol style="list-style-type: none"> <li>1. Generation and resetting of an error in air conditioners</li> <li>2. Generation and resetting of an error in the system.</li> <li>3. History concerning scheduled operation</li> <li>4. History concerning zone registration</li> <li>5. History concerning change of clock setting</li> <li>6. History concerning the time at which the intelligent Touch Controller is turned ON.</li> <li>6. History concerning power distribution (optional)</li> </ol> <p>Up to 300 records can be made altogether.</p> | <p>See page</p> <p> 69</p> |
| Touch Panel<br>Calibration | <p>Menu for adjusting the positions of buttons on the touch panel used as the screen of the intelligent Touch Controller.</p> <p>If a phenomenon such as “the intelligent Touch Controller does not recognize the pressing on the button shown on the screen” repeatedly occurs, use this menu to calibrate the touch panel.</p>  | <p>See page</p> <p> 70</p> |
| Version<br>information     | <p>This provides maintenance information. The menu shows the version number of the software for the intelligent Touch Controller currently used.</p>  | <p>See page</p> <p> 72</p> |

# System Setup Menu Operation

Screen 1 Monitoring Screen

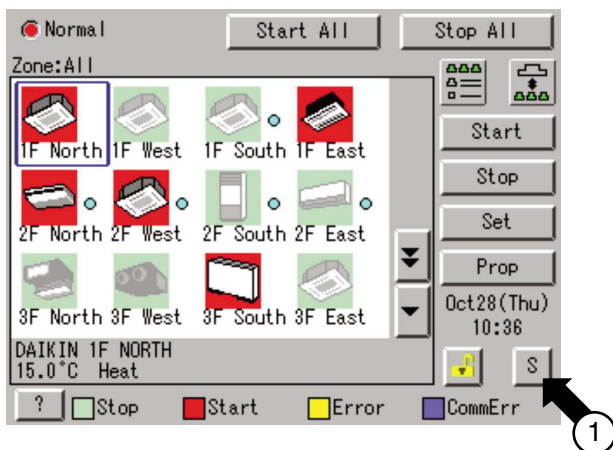

Screen 2 System Setup Menu

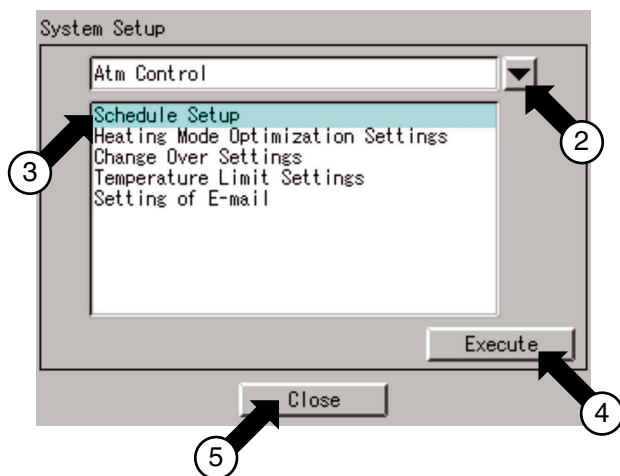


## 【Viewing the System Setup Menu Screen】

1. Press the [S] button ① on Screen 1 Monitoring.
2. Screen 2 System Setup Menu (see lower left) appears.  
(If a password is set, the screen does not appear unless the password is entered.)
3. Select an item from the System Setup Menu.
  - 3-1. Select an item from pull-down menu ②.
  - 3-2. Click the item to be set ③, and press the [Execute] button ④.  
(The example on the left shows the appearance of the screen for password setup.)
  - 3-3. The setting screen selected appears.
  - 3-4. When the setting has been made on the setting screen, press Exit (OK) or cancel.  
(Detailed operation is described in the following items.)
  - 3-5. Screen 2 reappears. The setting selected is complete.
  - 3-6. If another item is to be set, repeat the operation in 3-1 - 3-5.  
If there is no more item to be set, press the [Close] button ⑤. Screen 1 Monitoring screen reappears.


The following pages describe the System Setup operation in order.

# System Setup Menu Operation


## Screen 1 Password Setup

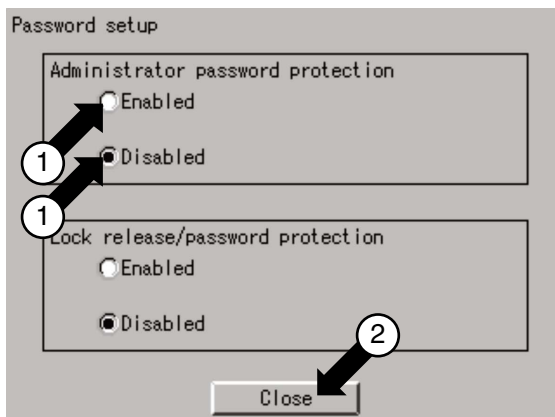

## Screen 2 Enter Password

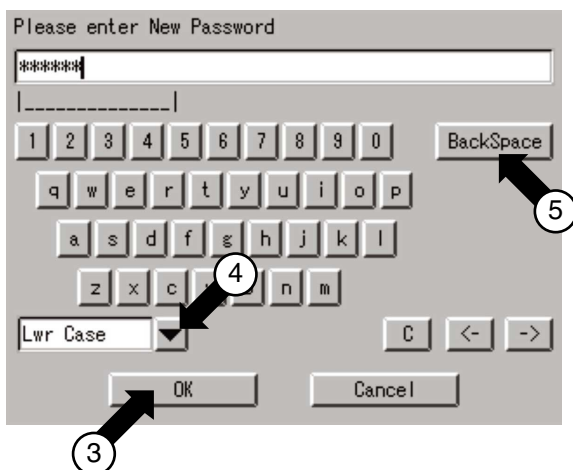

## Screen 3

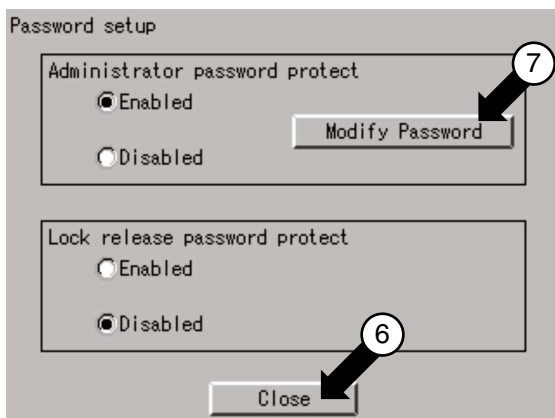

## Password setup

1. Select Password Setup as described on page 49.
  2. Screen 1 Password Setup, which is shown on the left, appears.
  3. Select Enable or Disable for password Protection ①.  
If Disable is selected, press the [Close] button ②. The setting is completed.  
If Enable is selected, Screen 2 Enter Password appears.  
Perform following operation in 4 to 7.
  4. Use the keyboard on the panel to enter the password.  
Note: Password is case-sensitive (see ④). Use caution and enter the exact password.  
A password can be as long as 32 characters.  
When a wrong character is entered by mistake, press the [Back Space] button ⑤.
  5. When the setting has been made, press the [OK] button ③.  
(Pressing the [Cancel] button is equal to setting Disable for Password Protection.)
  6. For confirmation, Please reenter Password screen appears. Enter the password as described in 4. Screen 3 appears.
  7. Pressing the [Close] button ⑥ completes the setting.
- (Memo): To change the password, press the [Modify Password] button ⑦ and repeat the operation in 4 - 7 above.

Password setting is possible in the same way both in Administrator password protect and Lock release password protect.

# System Setup Menu Operation

Screen 1 Time Setup

Time Setup

28/10/2004 14:59

28/10/2004 14:57:54 Modify

OK Cancel

Screen 2

Max: 31/12/2037 23:59:59  
Min: 01/01/2004 00:00:00

28 / 10 / 2004 14 : 57 : 54

<< >>

7 8 9 BACK  
4 5 6 C  
1 2 3 AC  
0

OK Cancel

Screen 3 Confirmation

Confirm

Changing Time will impact the functions below.  
Do you want to apply the update ?  
Schedule Ctrl


Yes No

## Time setup

1. Select Time Setup as described on page 49.
2. Screen 1 Time Setup, which is shown on the left, appears. Press the [Modify] button ①. Time setting dialog in Screen2 is displayed.
3. Press the number key button to set the year, month, day, hour, minute and second.
4. When the setting has been made, press the [OK] button ③. Screen 3 Confirmation appears.
5. See the Note on page 25. If changing the time setting causes no problem, press the [OK] button ④. Time setup is complete. To cancel setting, press the [Cancel] button.

# System Setup Menu Operation

## Screen 1 Backlight Setup

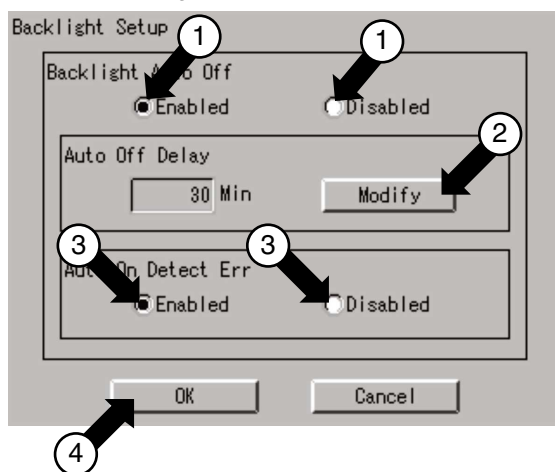

## Backlight setup

1. Select Backlight Setup as described on page 49.
2. Screen 1 Backlight Setup, which is shown on the left, appears.
3. Press Enable or Disable for Backlight Auto Off ①.  
If you select Disabled, go to step 6.

### ⚠ Caution

For longer service life of the backlight, select Enable whenever the backlight does not need to be illuminated all the time. The backlight once turned OFF is illuminated again when the panel is touched or automatically activated by any error generated in the air conditioner if Enable is selected for 5. Auto On Detect Err.

4. Press the [Modify] button ②.  
Input dialog is displayed.  
Set the time for automatic OFF.
5. Set whether the backlight should be automatically turned ON when any error is generated in air conditioners by selecting Enable or Disable ③.
6. Press the [OK] button ④.  
(To cancel the setting, press the [Cancel] button.)

# System Setup Menu Operation

Screen 1 Group Setup

Zone/group list

Member

Canddt list

Buttons: Add, Setup, OK, Cancel

Screen 2 Group Setup

Group Setup

Name: 1F North

Description: DAIKIN 1F NORTH

Icon: [Icon]

Type: In/Unit

Temp Limit

Buttons: Modify, Modify, OK, Cancel

Screen 3 Enter Group Name

1F North

Keyboard layout with buttons: 4, 7, 5, 6, 9, 8

Screen 4 Temp Limit

Temp Limit

Group: 1F North

Enabled ☒ Disabled ☐

Cooling(Lower): 20 °C

Cooling(Upper): 35 °C

Heating(Lower): 15 °C

Heating(Upper): 30 °C


Buttons: Modify, OK, Cancel

## Group setup


1. Select Group Setup as described on page 49.
2. Screen 1 Group [Setup], which is shown on the left, appears.
3. Select the group to be set with ①. Press the [Setup] button ②. Group setup in Screen 2 is displayed.
4. Press the [Modify] button ③. Screen 2 Enter Group Name appears. Use the keyboard on the panel to enter the name in such a way that it is contained in the area ④.  
(If it is not contained in the area, reduce the number of characters and reenter.)  
[How to use the keyboard]  
⑥: Button to select between uppercase and lowercase.  
⑦: Button to correct wrong entries made. Pressing one time deletes one character leftward starting at the cursor.  
⑧: Button to move the cursor.  
⑨: Candidates for input are displayed. Words presumed to be input for Name has already been involed.  
When all entries have been made, press the [OK] button ⑤. To cancel, press the [Cancel] button. Screen 2 Group Setup reappears.
5. Press the [Modify] button ⑩ and enter the name as shown in step 4 above.
6. Press the [▲] or [▼] button ⑪ to select an icon.  
(The selection of icon does not affect the operation of the group.)
7. Press the [Temp Limit] button ⑫. Screen 4 Temp Limit appears. Select Enabled or Disabled ⑬ for Limits Setup for the group currently selected. If you select Yes, set the limits by press the [OK] button ⑮. Press the [Modify] button ⑭ and set the restriction range. Screen 2 Group Setup reappears.
8. Select the position with the [Down] or [Up] button ⑰ for showing the group currently selected within the zone.
9. Press the [OK] button ⑱.  
(To cancel the setting, press the [Cancel] button.)

# System Setup Menu Operation


Screen 1 Zone Setup

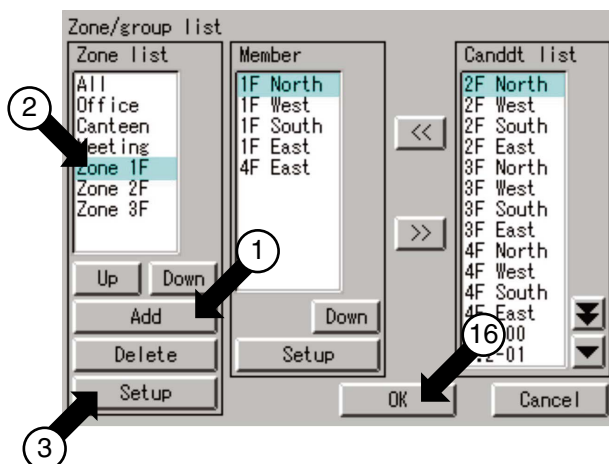

Screen 2 Zone Setup

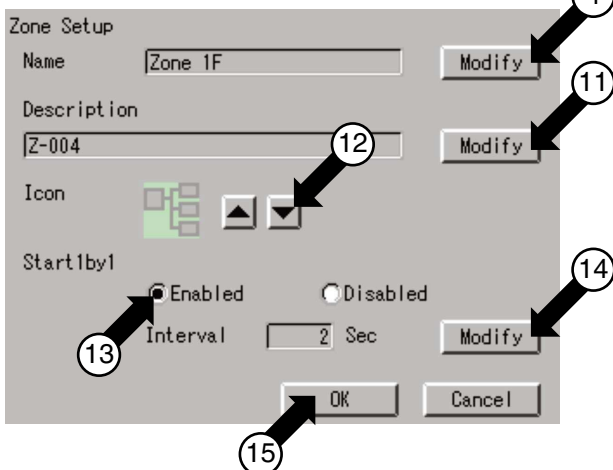

Screen 3 Enter Group Name

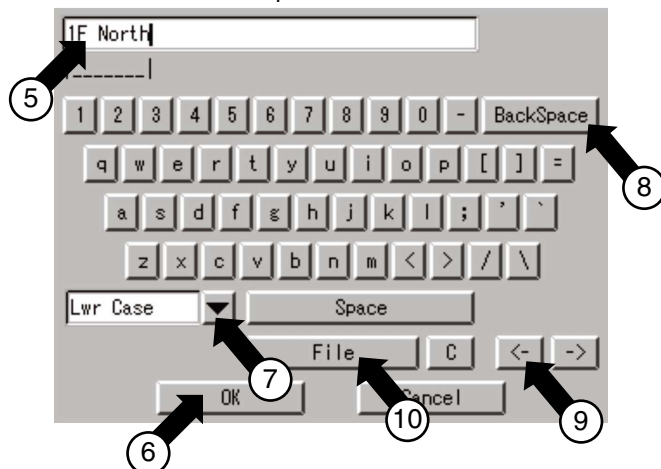


## Zone setup

1. Select Zone Setup as described on page 49.
2. Screen 1 Zone Setup, which is shown on the left, appears.
3. To add a zone, press the [Add] button (1). A zone is added with the name Z-000. To modify the zone, select with (2) the zone to be modified. Press the Setup button. Zone setup in screen2 is displayed.
4. Press the [Modify] button (4). Screen 3 Enter Group Name appears. Use the keyboard on the panel to enter the name in such a way that it is contained in the area (5).  
(If it is not contained in the area, reduce the number of characters and reenter.)  
[How to use the keyboard]  
(7): Button to select between uppercase and lowercase.  
(8): Button to correct wrong entries made. Pressing one time deletes one character leftward starting at the cursor.  
(9): Button to move the cursor.  
(10): Candidates for input are displayed. Words presumed to be input for Name has already been involed. When all entries have been made, press the [OK] button (6). To cancel, press the Cancel button. Screen 2 Group Setup reappears.
5. Press the [Modify] button (11) and enter the name as shown in step 4 above.
6. Press the [▲] or [▼] button (12) to select an icon.  
(The selection of icon does not affect the operation of the group.)
7. For operation by the zone, to start the groups in the zone one by one rather than at one time, press the Enable button for Interval Start (13). To start the groups at one time, press Disable. If you select Enable, press the [Modify] button (14) and set the interval time for group sequential start.

(Note) For the zone Collective, the factory setting is Enable for Interval Start and 2 (seconds) for Interval.

# System Setup Menu Operation

Screen 3 Registered Groups Edit

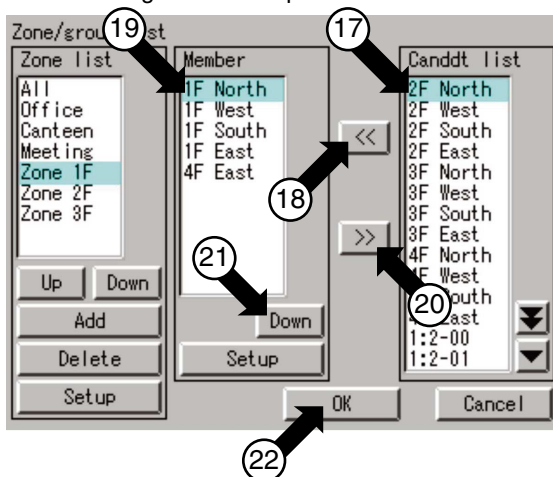

## Zone setup 2

8. Set the groups to be registered for the zone currently selected.

To add a group to the zone, select the group to be added with 17 and press the [<<] button 18.

To delete a group registered for a zone, select the group to be deleted with 19 and press the [>>] button 20.


The [Up] or [Down] button 21 allows changing the order in display of groups in the zone currently selected on the Monitoring screen.

The group shown on the top is the representative unit for the zone.  
(In the example of Screen 3 shown on the left, 1F Lobby is the representative unit for the zone 1F.)

When all editing has been completed, press the [OK] button 22.

To cancel the setting, press the [Cancel] button.

Screen 1 Locale setting

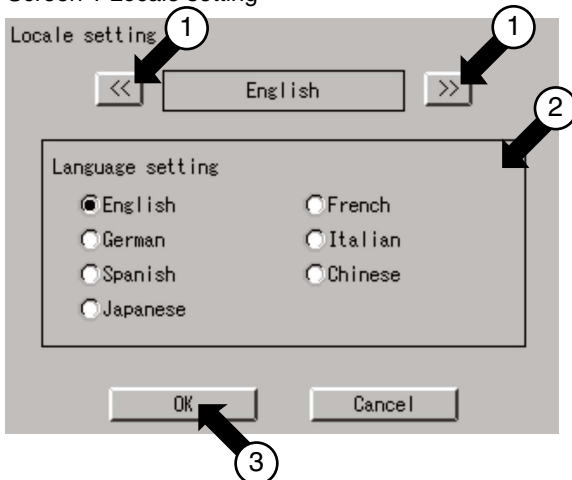

## Locale Setting

1. Select "Locale Setting" according to the operating procedure shown in page 49.
2. Confirm that the Locale setting screen Screen 1 will be displayed in the left-hand column.
3. Select a language by pushing [<<], [>>] button 1 on the Locale setting screen. (The details of settings remain unchanged.)
4. Select a language via the Language setting radio button 2.
5. Last, push [OK] button 3.  
(To cancel the settings made, push [Cancel] button.)



# System Setup Menu Operation

Screen 1 Network Setting

The screenshot shows the 'Network setting' screen with the following fields and buttons:


- Host name: daikin [Modify] (Arrow 1)
- IP address: 192.168. 0. 1 [Modify] (Arrow 2)
- Subnet mask: 255.255.255. 0 [Modify] (Arrow 3)
- Default gateway: 0. 0. 0. 0 [Modify] (Arrow 4)
- Primary DNS: 0. 0. 0. 0 [Modify] (Arrow 5)
- Secondary DNS: 0. 0. 0. 0 [Modify] (Arrow 6)
- [OK] (Arrow 7)
- [Cancel]

## Network Setting

1. Select "Network Setting" according to the operating procedure shown in page 49.
2. Confirm that the Network setting screen Screen 1 will be displayed as shown in the left-hand column.
3. Push the [Modify] button ① and enter a Host name on the resulting input screen.
4. Push the [Modify] button ② and enter an IP address on the resulting input screen.
5. Push the [Modify] button ③ and enter a Subnet mask on the resulting input screen.
6. Push the [Modify] button ④ and enter a Default gateway on the resulting input screen.
7. Push the [Modify] button ⑤ and enter a Primary DNS on the resulting input screen.
8. Push the [Modify] button ⑥ and enter a Secondary DNS on the resulting input screen.
9. After making the settings, push the [OK] button ⑦.  
To cancel the settings made, push the [Cancel] button.

# System Setup Menu Operation

## Screen 1 Setting of icon color

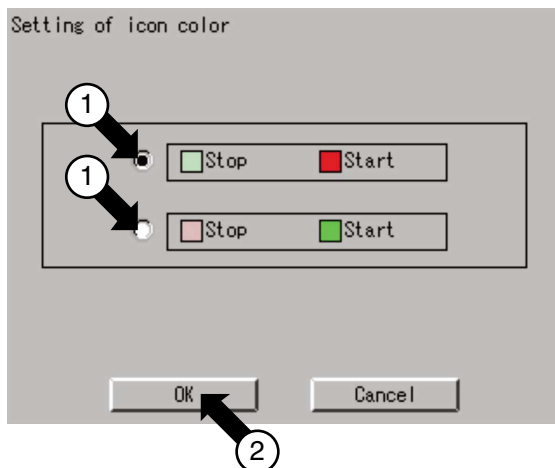


## Icon Color Setting


1. Select "Setting of icon color" according to the operating procedure shown in page 49.
2. Confirm that the Setting of icon color screen Screen 1 will be displayed as shown in the left-hand column.
3. Select a desired color via the radio button ① to change the start/stop icon color on the Monitoring screen. Note that the stop icon color is light green and the start icon color red at factory setting. and the start icon color red at factory setting.
4. Push the [OK] button ②.  
To cancel the settings made, push the Cancel button.

# System Setup Menu Operation

Screen 1 License key input

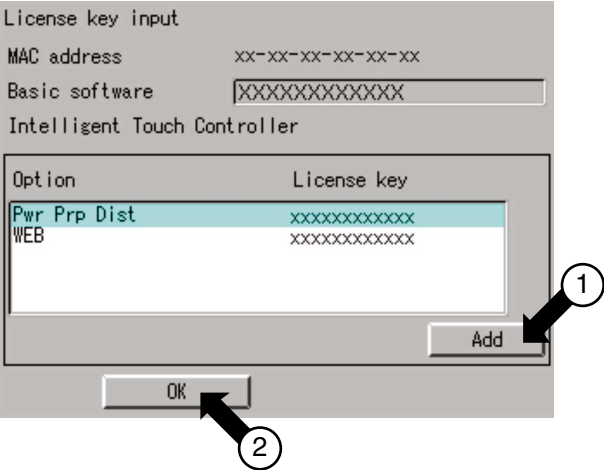

Screen 2 Input Screen

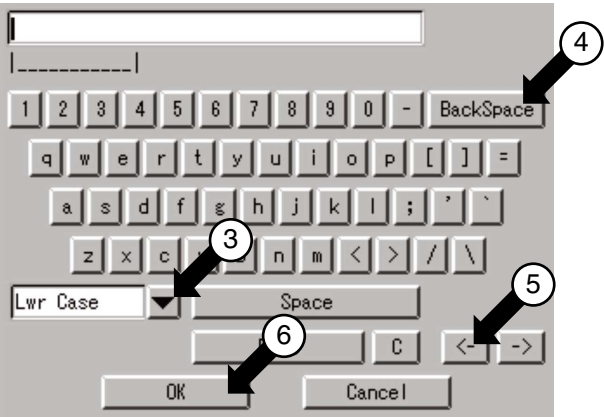

## License Key Input


1. Select "License key input" according to the operating procedure shown in page 49.
2. Confirm that the License key input screen Screen 1 will be displayed as shown in the left-hand column.
3. Push the [Add] button ① and input an option software license key on the resulting keyboard dialog.  
(In this case, care should be taken for key input because the license key cannot be registered so long as it contains incorrect uppercase or lowercase letters.)

### [How to use the keyboard]


- ③ : Button for switch uppercase to lowercase and vice versa
  - ④ : Button for deleting a character input by pressing the incorrect character key You can delete any number of characters from the cursor position to the left by pushing this button as many times as necessary.
  - ⑤ : Button for moving the cursor  
After making the necessary settings, push the [OK] button ⑥.  
To cancel the settings made, push the [Cancel] button and return to the License key input screen Screen 1.
4. After adding the option, push the [OK] button ② to determine the input license key. Then, push the [OK] button on the restart confirmation screen to restart the Intelligent Touch Controller.

# System Setup Menu Operation

Screen 1 Schedule Setup

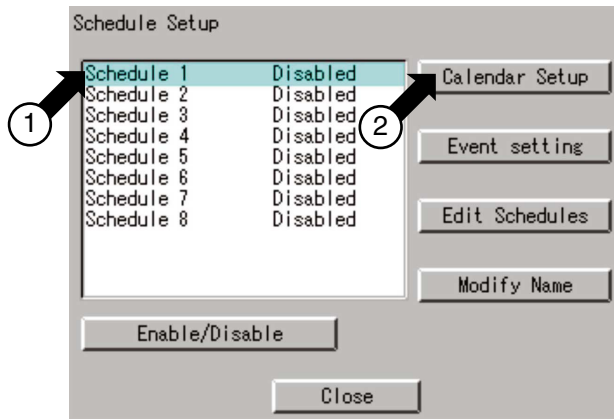

Screen 2 Calendar Setup

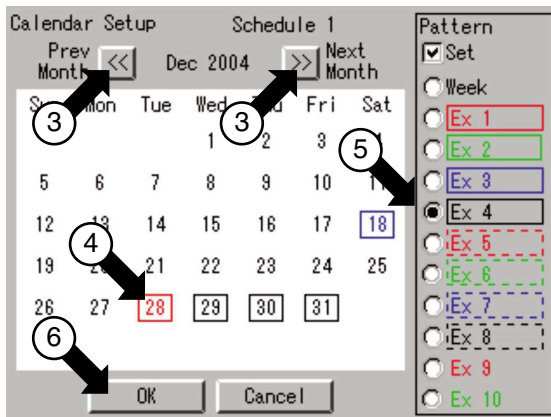

## Set Schedule and Calendar


Before setting a calendar, refer to page 35 to consider what kind of schedule is to be set and perform the following operations. (The following shows an example of setting made referring to zone 2 in page 35.)

This example shows the setting that determines which days in the year schedule to use for special days (such as the summer holidays) requiring air-conditioner control different from that in the regular weekly schedule.


1. Select "Schedule setting" according to the operating procedure shown in page 49.
2. Confirm that the Schedule setting screen Screen 1 will be displayed as shown in the left-hand column.
3. Select a schedule from ① to set or change the calendar.
4. Push the [Calendar Setup] button ② to display the calendar setup screen Screen 2. Initially, the weekly settings are made. Select a month for change at ③ and a day for change at ④. Then, select a pattern for the selected day from ⑤.  
Check a Set checkbox to display a radio button for each pattern.  
(This setting can be made for the coming 13 months.)
5. After making the necessary settings, push the [OK] button ⑥ and return to the Schedule setup screen Screen 1.

# System Setup Menu Operation

Screen 1 Schedule Setup

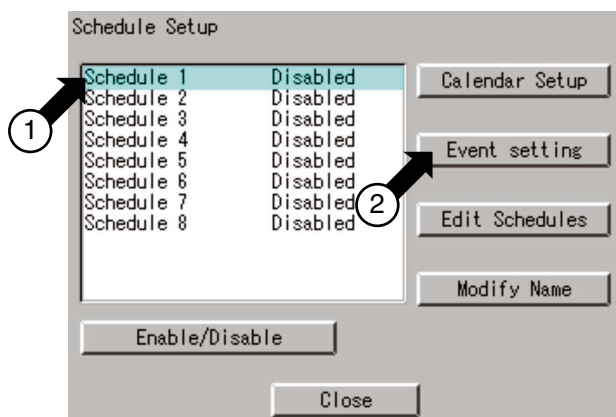

Screen 2 Event List

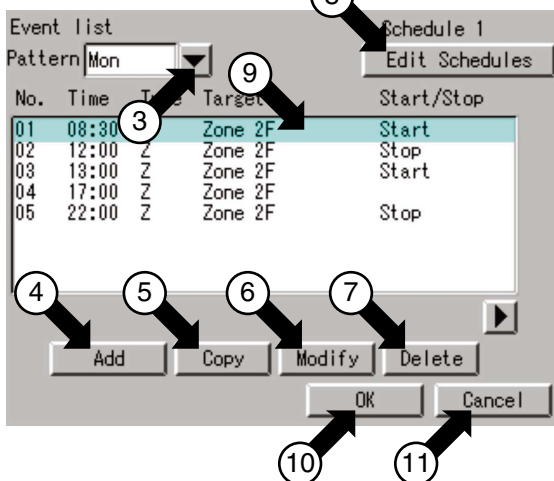


## Set Schedule and Event

Before setting an event, refer to page 36 to determine what kind of event is to be set and perform the following operations.  
(The following shows an example of setting made referring to page 36.)

1. Select "Schedule Setup" according to the operating procedure shown in page 49.
2. Confirm that the Schedule setup screen Screen 1 will be displayed as shown in the left-hand column.
3. Select a schedule from ① to set or change the event(s).
4. Push the [Event setting] button ② to display an event list (Screen 2).  
Here, actual schedule operations are set for each of 17 kinds of days (Sunday to Saturday, Ex1 to Ex10). First, use the pull-down menu ③ to determine a day of the 17 kinds of days for which events are to be set. Screen 2 indicates that Mon has been selected.
5. The following describes in order the functions of buttons ④ to ⑧.
  - ④ Add :  
Use this button to add the new event. Pushing this button causes the Event setup screen Screen 3 on the next page to be displayed.  
(For details on event setup operation, refer to the descriptions given on the next page.)
  - ⑤ Copy :  
Use this button to make the same setting as for the previously set event. Select the previously set event from ⑨. Push the copy button ⑤ to copy the event.  
(Push the [Modify] button ⑥ (described below) to modify the copy event.)
  - ⑥ Modify :  
Use this button to change the previously registered event. Select the event to be changed from ⑨ and push the [Modify] button ⑥.
  - ⑦ Delete :  
Use this button to delete the previously registered event. Select the event to be deleted from ⑨ and push the [Delete] button ⑦.
  - ⑧ Edit Schedules :  
This button provides the functions similar to those of the above copy button. This button can be used to copy the events set for a set of days (Sunday to Saturday and Ex1 to Ex10) to another set of days (Sunday to Saturday and Ex1 to Ex10). (For details on Edit Schedules, refer to page 64 "Convenient Functions.")

# System Setup Menu Operation

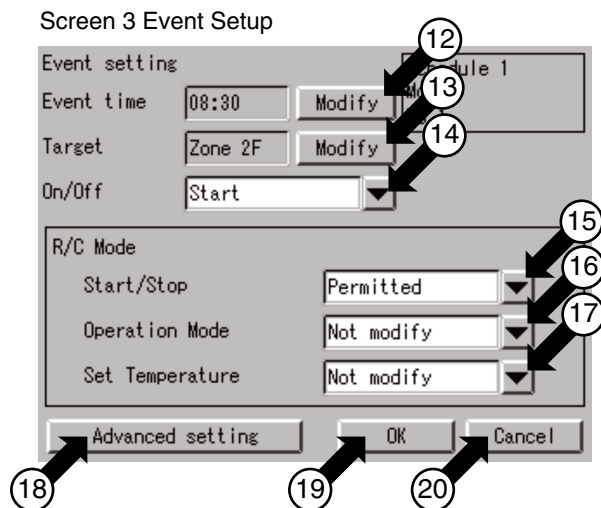

A full description of each button has been given above.

The following discusses how to make the actual settings.

To define the new operation, push the [Add] button ④. To change the previously set operation, push the [Modify] button ⑥.

6. Push the Add button or Modify button on the previous page, and the Event setup screen Screen 3 will be displayed. The current settings of events are shown at the left side of the buttons ⑫ to ⑰. The following describes in order the settings of events that can be made.

- Event time:  
Refers to the event setting time. Display a keyboard for registering the time by pushing the [Modify] button ⑫ and enter the time.
- Target:  
Refers to the zone or group of the air-conditioner to be controlled. Push the [Modify] button ⑬ to select a zone or group for which schedule operations should be performed.
- On/Off:  
Sets Start, Stop or No change. Use the pull-down menu ⑭ for this selection.

[How to make the setting for the remote control at hand]

- Start/Stop:  
Select Permitted, Stop Only, Prohibited or No change from the pull-down menu ⑮
- Operation Mode:  
Select Permitted, Prohibited or No change from the pull-down menu ⑯.
- Set Temperature:  
Select Permitted, Prohibited or No change from the pull-down menu ⑰.
- Advanced setting:  
Push the button ⑱ to display an advanced setting screen Screen 4.  
(The descriptions of the advanced setting are shown on the next page.)

After setting the operation and making the advanced setting on the next page, push the [OK] button ⑲. To cancel the settings made, push the [Cancel] button ⑳ to return to Screen 2 on the previous page. When making additional settings, repeat the operations shown in steps 5 and 6. After making the necessary settings, push the [OK] button on Screen 2 of the previous page.

# System Setup Menu Operation

Screen 4 Advanced Setup

7. Push the [Advanced setting] button ⑮ on the Event setup screen Screen 3 to display an advanced setup screen Screen 4. The current settings of events are shown at the left side of the buttons ⑰ to ⑳.

- Operation Mode :

Refers to the operation mode for a zone or group. Select Cool, Heat, Auto, Fan, Set Point or No change. Note that only three modes (Set Point, Fan and No change) are available when a target zone or group (being subject to mode selection) does not provide you with an option for selecting "heating" or "cooling." In this case, you may select one of the modes from the pull-down menu ⑰.

(Temperature adjustment :  
Refers to cooling or heating. When "cooling" or "heating" has been set in an air-conditioner (providing you with an option for selecting "heating" or "cooling"), the air-conditioner works according the selected cooling or heating operation mode.)

- Set Temperature :

Set the temperature of a zone or group. Push the [Modify] or [Disabled] button ⑱ according to purpose. When displaying a keyboard to register a temperature and entering a desired temperature on that keyboard, push the [Modify] button. The Disabled button is displayed only when the [Modify] button is pushed once and the desired temperature is set. Push the [Disabled] button to cancel the temperature set through the [Modify] button.

When ventilation is to be scheduled, the following settings can be made.

Though this setting menu is displayed regardless of ventilation, no ventilation control takes place even if the setting is made.

- Ventilation mode :

Set the ventilation mode. You can select Auto, Normal, All heat exchange or No change from the pull-down menu ⑲.


- Ventilation amount :

Set the volume of ventilation. You can select Auto (Normal), Weak (Normal), Strong (Normal), Auto (Freshen up), Weak (Freshen up), Strong (Freshen up) or No change from the pull-down menu ⑳.

After making the advanced settings, push the [OK] button ㉑ to return to Screen 3 on the previous page.

# System Setup Menu Operation


Screen 1 Schedule Setup

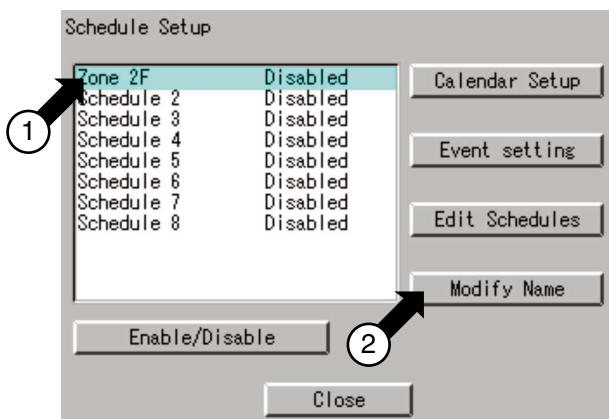

## Change Schedule Name

1. Select "Schedule Setup" according to the operating procedure shown in page 49.
2. Confirm that the Schedule setup screen Screen 1 will be displayed as shown in the left-hand column.
3. Select a schedule from the list ① to change the name.
4. Display a keyboard screen by pushing the [Modify Name] button ② and enter a desired schedule name on that keyboard. (A schedule name can be entered in up to 16 characters.)


Screen 2 Event List

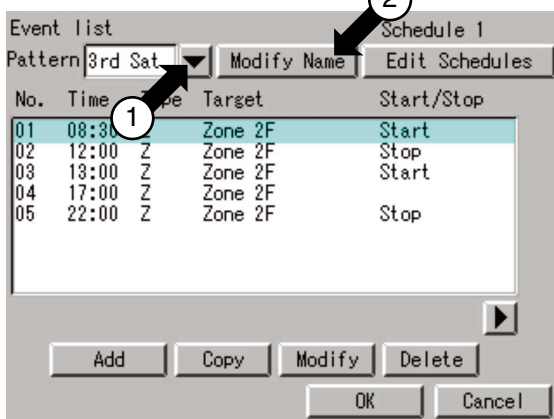

## Change Special Day Name

1. Select a specify day from the pull-down menu ① on the event list screen to change the name.
2. Confirm that the [Modify Name] button ② will be displayed for the selected special day.
3. Display a keyboard screen by pushing the [Modify Name] button ② and enter a desired special day name. (A special day name can be entered in up to 8 characters.)

Screen 3 Schedule Setup

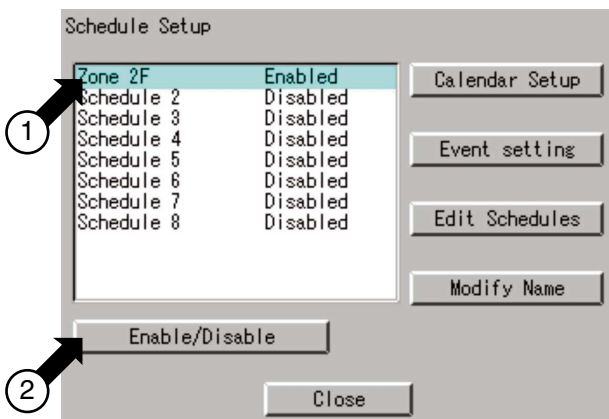

## Enable or Disable Schedule


1. Last, enable or disable a schedule. Perform the following operations on the schedule setup screen Screen 3. Select a schedule from the list ① and enable or disable the schedule at ②. On the confirmation screen, push the [Yes] button to enable the schedule and the [No] button to disable it. Then, check to see the display "Enabled" or "Disabled" in right side of ① to confirm that the schedule has been enabled or disabled successfully.

Even if the calendar or event is set, no schedule function works unless the schedule is enabled.




# System Setup Menu Operation

Screen 1 Schedule Setup

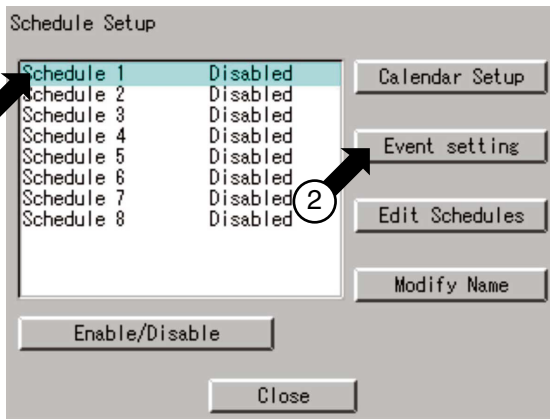

Screen 1 Schedule Setup interface. It features a list of schedules (Schedule 1 to Schedule 8) with a status column (all Disabled). Numbered callouts: 1 points to the schedule list, 2 points to the 'Event setting' button. Other buttons include 'Calendar Setup', 'Edit Schedules', 'Modify Name', 'Enable/Disable', and 'Close'.


Screen 2 Event List

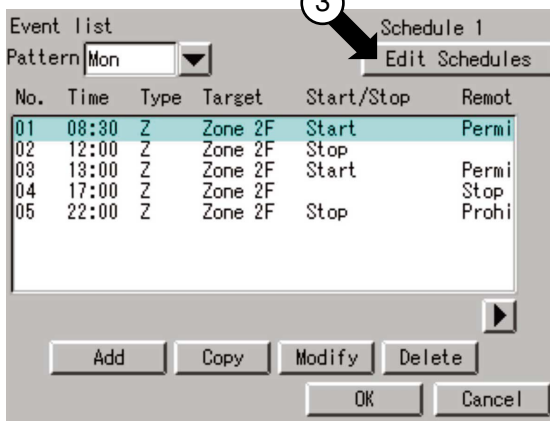

Screen 2 Event List interface. It shows a table of events with columns: No., Time, Type, Target, Start/Stop, and Remot. Numbered callouts: 3 points to the 'Edit Schedules' button. Other buttons include 'Add', 'Copy', 'Modify', 'Delete', 'OK', and 'Cancel'.

| No. | Time  | Type | Target  | Start/Stop | Remot |
|-----|-------|------|---------|------------|-------|
| 01  | 08:30 | Z    | Zone 2F | Start      | Permi |
| 02  | 12:00 | Z    | Zone 2F | Stop       |       |
| 03  | 13:00 | Z    | Zone 2F | Start      | Permi |
| 04  | 17:00 | Z    | Zone 2F | Stop       | Stop  |
| 05  | 22:00 | Z    | Zone 2F | Stop       | Prohi |

Screen 3 Event Manipulation

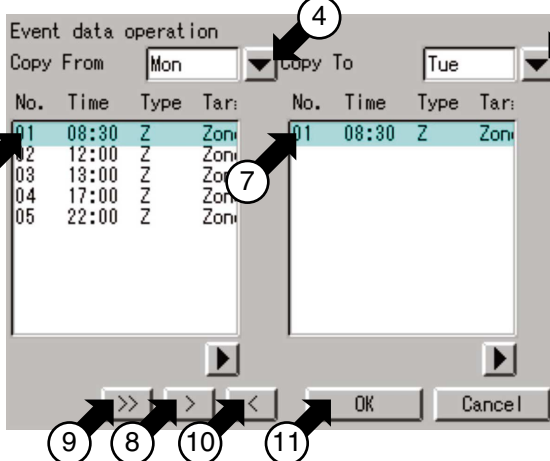

Screen 3 Event Manipulation interface. It shows two event lists side-by-side. Numbered callouts: 4 points to 'Copy From' (Mon), 5 points to 'Copy To' (Tue), 6 points to the first event in the left list, 7 points to the first event in the right list, 8 points to the '>>' button, 9 points to the '>' button, 10 points to the '<' button, and 11 points to the 'OK' button. Other buttons include 'Add', 'Copy', 'Modify', 'Delete', 'OK', and 'Cancel'.

## Convenient Function 1 Copy in Units of Events

When it is necessary to reuse an event set for a day of the week, this function greatly helps you copy the event to the other day of the week.

(Example: When using the same schedule for Monday to Friday, set an event for Monday, then copy it for Tuesday to Friday to eliminate the efforts required for making the setting for each day of the week.)

1. Select "Schedule Setup" according to the operating procedure shown in page 49.
2. Confirm that the schedule setup screen Screen 1 will be displayed as shown in the left-hand column.
3. Select a schedule from ① to copy the event.
4. Push the [Event setting] button ② to display the event setup screen Screen 2.
5. Push the [Event Schedules] button ③ to display the event manipulation screen Screen 3.

The following describes in order the functions of buttons ④ to ⑩.

Select a day of the week for a copy source at ④ and that for a copy destination at ⑤. In an example of the left-hand column, "Mon" is selected as a day of the week for the copy source and "Tues" as that for the day of the copy destination.


Then, select the event to be copied at ⑥ and push the [>] button ⑧ to copy the event No. 01 from Monday to Thursday.

Push the [>>] button ⑨ to copy all the events from Monday to Thursday.


Push the [<] button ⑩ once to delete the event copied incorrectly from ⑦. You must push the [<] button ⑩ as many times as necessary to delete multiple incorrect events. After making the necessary settings, push the [OK] button ⑪ to return to the event list screen Screen 2.

# System Setup Menu Operation

Screen 1 Schedule Setup

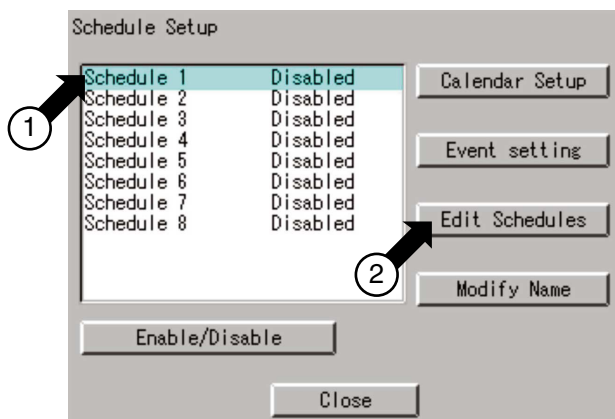

Screen 2 Data Manipulation

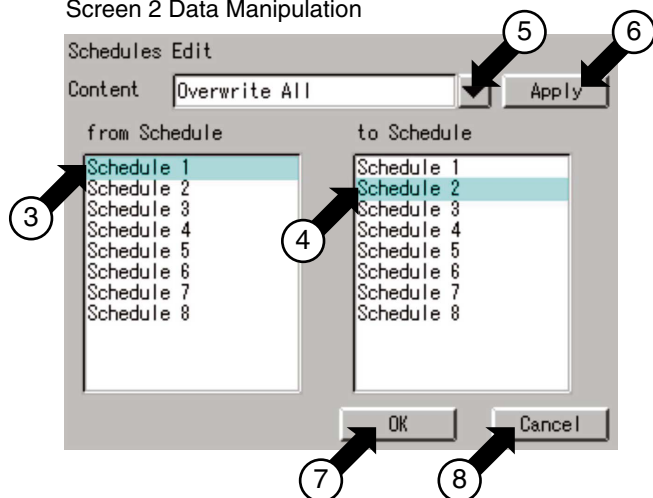

## Convenient Function 2

### Copy or Delete in Units of Schedules

When it is necessary to resume a calendar setting made for schedule 1, this function greatly helps you copy the calendar setting to the other schedule(s).

(Example:

When reusing the same calendar setting (such as the summer holiday) for the other schedule, make the calendar setting for schedule 1, then copy it for the other schedule to eliminate the efforts required for making the same setting for each of the other schedules.

1. Select "Schedule Setup" according to the operating procedure shown in page 49.
2. Confirm that the schedule setup screen Screen 1 will be displayed as shown in the left-hand column.
3. Push the [Edit Schedules] button ② to display the data manipulation screen Screen 2.

(For setup item copy)

Select a schedule for a copy source at ③ and that for a copy destination at ④. In an example of the left-hand column, the schedule of the copy source is schedule 1 and that of the copy destination schedule 2. Next, select the setup item (to be copied) of schedule 1 from the pull-down menu ⑤. The following setup items can be selected.

- Overwriting all setup items
  - Overwriting only the calendar setup item
- After selecting either of the above items, push the [Apply] button ⑥. Last, push the [OK] button ⑦ to terminate the copy procedure. To cancel the settings made, push the [Cancel] button ⑧ and return to the schedule setup screen Screen 1.

(For setup item deletion)


Select the schedule to be deleted at ④. Next, select the setup item to be deleted from the pull-down menu ⑤. The following setup items can be selected.

- Delete all the setup items
- Delete only the calendar setup item


After selecting either of the above setup items, push the [Apply] button ⑥. Last, push the [OK] button ⑦. To cancel the settings made, push the [Cancel] button ⑧ and return to the schedule setup screen Screen 1.

# System Setup Menu Operation


Screen 1 Change Over Settings

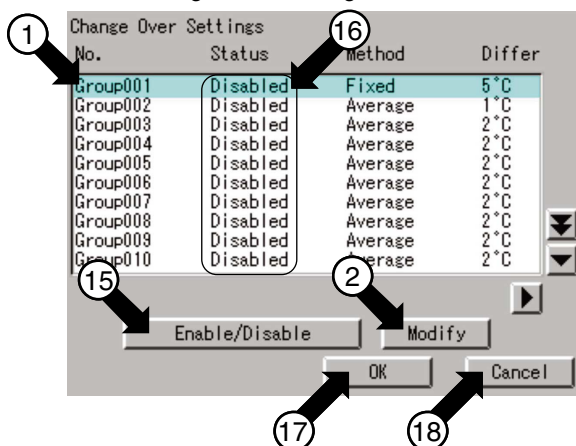

Screen 2 Cooling/Heating Automatic Change Over Group Settings

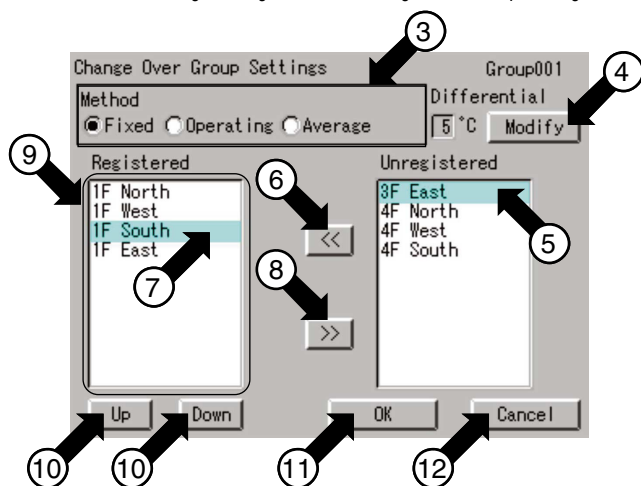

Screen 3 Confirmation

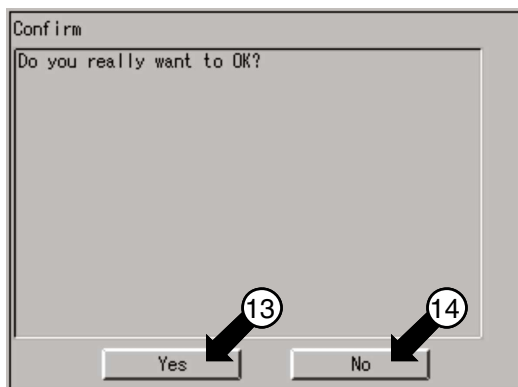


## Operation of Change Over Settings

Before performing Change Over Settings, read thoroughly the section Change Over Settings on page 37, and perform the following procedure.


1. See page 49 and select Change Over Settings.
2. Screen 1 Change Over Settings, which is shown on the left, appears.  
(This screen shows current status (enabled/disabled) of each cooling/heating automatic change over group, control method, set value of temperature difference, and the number of the registered indoor unit groups.)
3. Touch a cooling/heating automatic change over group to be set or changed as shown by ①, and press the [Modify] button ②.
4. Screen 2 Cooling/Heating Automatic Change Over Group Settings, which is shown on the left, appears. First, select a control method at ③. The following three control methods are available.  
• Fixed • Operating • Average  
For details of each control method, see page 37.
5. Set a temperature difference value for cooling/heating automatic change over with the [modify] button ④.  
(Setting range: 1°C - 7°C)
6. At ⑤, select an indoor unit to be added to the cooling/heating automatic change over group which is currently selected, and press the button ⑥ to add.  
To delete an indoor unit from the cooling/heating automatic change over group, select it at ⑦, and press the button ⑧.
7. To change the order of the registered indoor group ⑨, select an indoor unit to be changed at ⑦, and move it with the Up button or the Down button ⑩.  
Memo: When the control method "Fixed" is selected, the indoor unit displayed on the top in the box ⑨ becomes the representative one. When the operation method "Operating" is selected, a search for representative unit is performed starting from the top.
8. When all settings for this cooling/heating automatic change over group (control method, temperature difference, indoor unit registration) are completed, press the [OK] button ⑪.  
(To cancel, press the [Cancel] button ⑫.)  
Screen 3 Confirmation Display appears. When there is no problem in setting change, press the [Yes] button ⑬.  
Screen 1, which is shown on the top on this page, appears. (To add or change the settings in the cooling/heating automatic change over group mentioned above, press the [No] button ⑭. Screen 2 appears.)
9. On the screen 1, select the cooling/heating automatic change over group to be enabled at ①, and press the button ⑮ to enable. (Confirm the group status (enabled/disabled) displayed on ⑯.) Only the cooling/heating automatic change over group set to enabled is controlled automatically.
10. Lastly, when all the setting changes are correct, press the [OK] button ⑰. (To cancel, press the Cancel button ⑱.) When the [OK] button ⑰ is pressed, the screen 3 Confirmation Display appears. When there is no problem in setting change, press the [Yes] button ⑬. This menu is ended, and System Setup Menu appears. (When the [No] button ⑭ is pressed, the screen 1 appears.)

# System Setup Menu Operation


Screen 1 Temperature Limit Settings

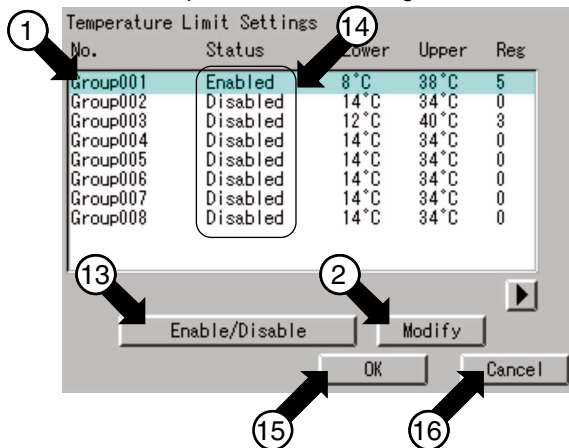

Screen 2 Room Temperature Upper/Lower Limit Control Group Settings

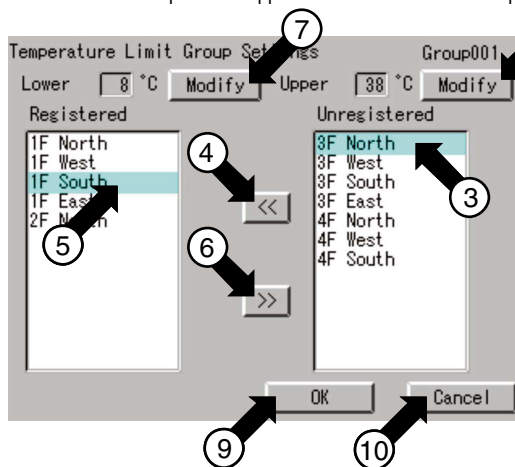

Screen 3 Confirmation

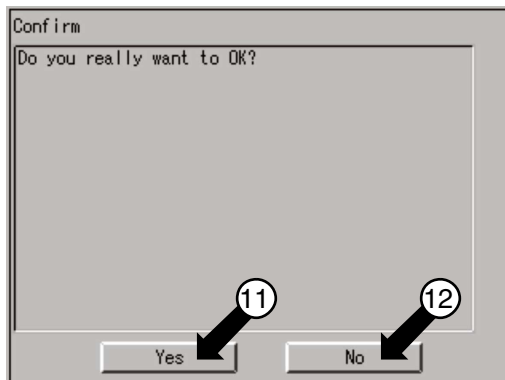


## Operation of Temperature Limit Settings

Before performing Temperature Limit Settings, read thoroughly the section Temperature Limit Settings on page 42, and perform the following procedure.


1. See page 49 and select Temperature Limit Settings
2. Screen 1 Temperature Limit Settings, which is shown on the left, appears.  
(This screen shows current status (enabled/disabled) of room temperature upper/lower limit control group, and setting status of lower temperature limit, upper temperature limit, and the number of registered indoor unit groups.)
3. Touch a room temperature upper/lower limit control group to be set or changed as shown by ①, and press the [Modify] button ②.
4. Screen 2 Room Temperature Upper/Lower Limit Control Group Settings, which is shown on the left, appears. First, at ③, select the indoor unit to be added to the room temperature upper/lower limit control group which is currently selected, and press the button ④ to add. To delete an indoor unit from the group, select it at ⑤, and press the button ⑥.
5. Set a lower limit of room temperature with the [Modify] button ⑦, and an upper limit of room temperature with the [Modify] button ⑧.  
(Setting range: 2°C - 14°C for lower limit, 34°C - 50°C for upper limit)
6. When all settings for this room temperature upper/lower limit control group (indoor unit registration, settings of upper limit and lower limit) are completed, press the [OK] button ⑨. (To cancel, press the [Cancel] button ⑩.) Screen 3 Confirmation Display appears. When there is no problem in setting change, press the [Yes] button ⑪. Screen 1, which is shown on the top on this page, appears.  
(To add or change the settings in the room temperature upper/lower limit control group mentioned above, press the [No] button ⑫.) Screen 2 appears.
7. On the screen 1, select a room temperature upper/lower limit control group to be enabled at ①, and press the button ⑬ to enable.  
(Confirm the group status (enabled/disabled) displayed on ⑭.) Only the room temperature upper/lower limit control group set to enabled is controlled automatically.
8. Lastly, when all the setting changes are correct, press the [OK] button ⑮. (To cancel, press the [Cancel] button ⑯.) When the [OK] button ⑮ is pressed, the screen 3 Confirmation Display appears. When there is no problem in setting change, press the [Yes] button ⑪. This menu is ended, and System Setup Menu appears. (When the [No] button ⑫ is pressed, the screen 1 appears.)

# System Setup Menu Operation

Screen 1 Heating Optimization Settings

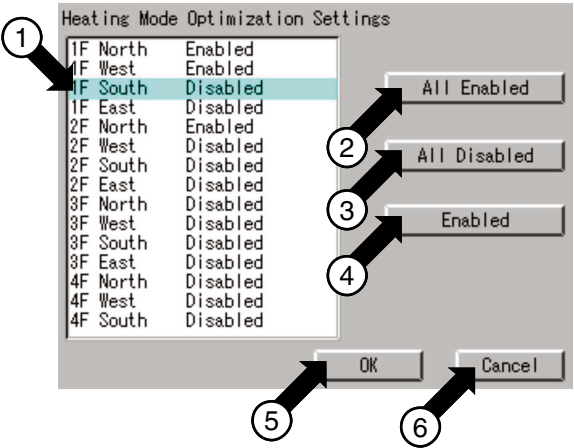

Screen 2 Confirmation

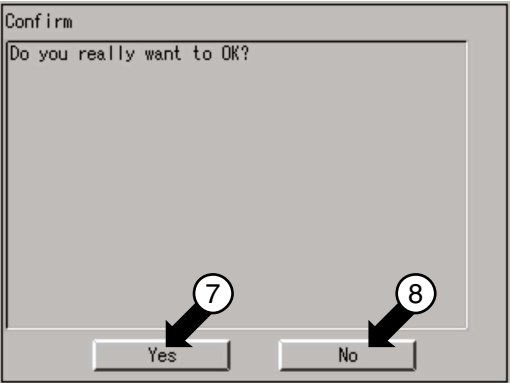


## Operation of Heating Optimization Settings

Before performing Heating Optimization Settings, read thoroughly the section Heating Optimization Settings on page 45, and perform the following procedure.


1. See page 49 and select Heating Optimization Settings.
2. Screen 1 Heating Optimization Settings, which is shown on the left, appears.  
(This screen shows current registration status of Heating Optimization Settings.)
3. Touch an indoor unit to be added as shown by ①, and press the button ② to add.  
To deactivate this control, select an indoor unit at ③, and press the button ④.
4. Lastly, when all indoor units are registered, press the [OK] button ⑤.  
(To cancel, press the [Cancel] button ⑥.)  
Screen 2 Confirmation Display appears.  
When there is no problem in setting change, press the [Yes] button ⑦. This menu is ended, and System Setup Menu appears.  
(To continue the change, press the [No] button ⑧. The screen 1 appears.)

# System Setup Menu Operation


Screen 1 History

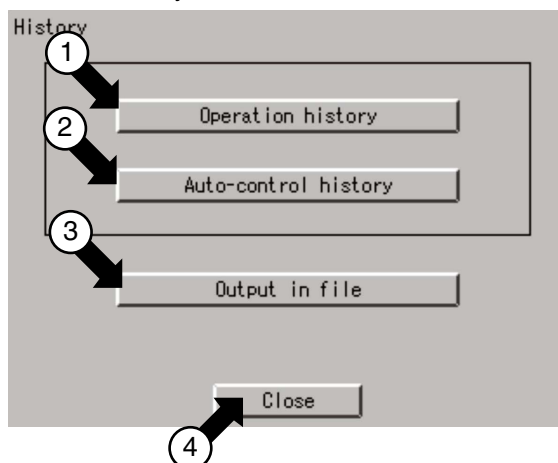

Screen 2 Operation History

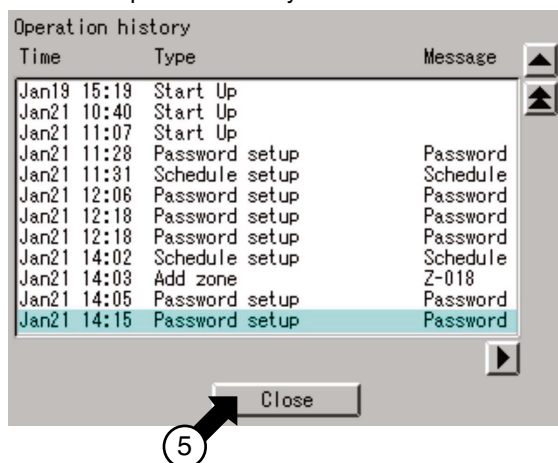

Screen 3 Automatic control history

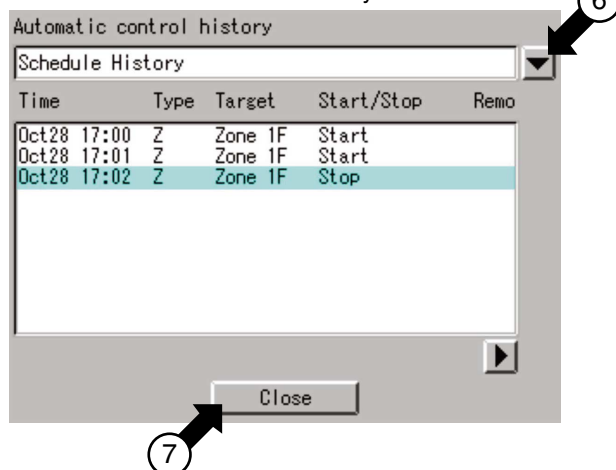


## Check for History

1. Select "History" by using the operation method described on page 49.
2. The History screen Screen 1 appears as shown in the left-hand column.
3. When checking for the history of system setup operations, touch the [Operation History] button ① to confirm that the Operation history screen Screen 2 is displayed. The system setup operations recorded in the controller are displayed in the order where they have been performed.
4. To return to the History screen, touch the [Close] button ⑤.
5. When checking for the history of automatic control operations, touch the [Auto-control history] button ② to confirm that the Automatic control history screen Screen 3 is displayed.
6. Use the pull-down menu ⑥ to display the following items on the related screens:
  - Schedule History  
Use this item to display log records on schedule execution.
  - Heating opt. Cntl. History  
Use this item to display log records on optimal stop control during heating.
  - Temp. limit func. History  
Use this item to display log records on upper-/lower-limit control for the room temperature.  
When purchasing option soft, items shown below are displayed in the pull-down menu ⑥ in addition to those shown above.
  - Power prop. division History
  - E-mail History  
4 items shown above except the item "Power prop. division History" disappear when turning off the power of the controller.
7. To return to the History screen Screen 1, touch the [Close] button ⑦.
8. When saving the stored log records in a memory card, insert a commercially available PCMCIA flash memory card into a slot provided at the left side of the controller and touch the [Output in file] button ③.  
Care should be taken for memory card insertion. Be sure to insert a memory card in such a way that the rear side of the card (not provided with a label for the manufacturer name and model name) should face upwards.  
**When the memory card has been forcibly inserted in wrong direction, the controller may be damaged.**  
Then, touch the [OK] button to save the log records in the memory card.
9. After checking the log record, touch the [Close] button ④.



# System Setup Menu Operation


## Screen 1 Touch Panel Calibration

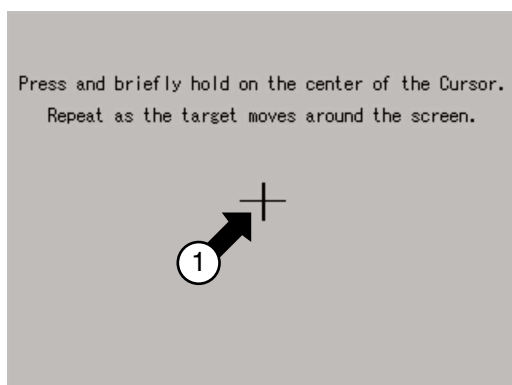

## Touch Panel Calibration

1. See page 49 and select Touch Panel Calibration.
2. Screen 1 Touch Panel Calibration, which is shown on the left, appears.
3. Follow the instruction shown on the screen and press the intersection of the crosshairs ① and keep it pressed for about 1 second.
4. The crosshairs are moved. Repeat the operation described in step 3 on a total of five points.  
When calibration is finished, the System Setup automatically appears within 30 seconds.

## Screen 1 Setting of E-mail

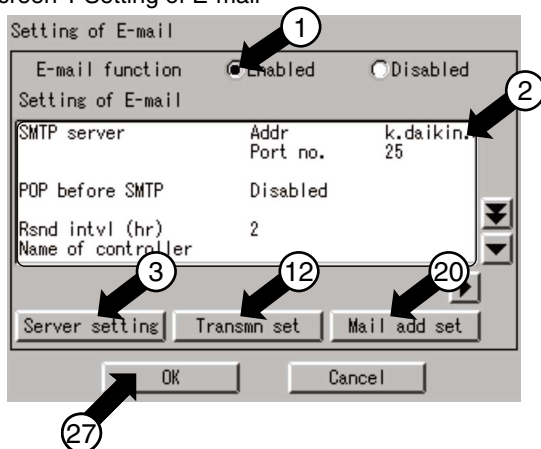


## Setting of E-mail

The e-mail function (option) comes standard with the Web function.


1. Select "Setting of E-mail" according to the operating procedure shown in page 49.
2. Confirm that the Setting of Email screen Screen 1 will be displayed as shown in the left-hand column.
3. Select "Enable" or "Disabled" for the e-mail function ①. When "Disabled" has been selected, there is no additional setup operation for the e-mail function. To continue the setup operation, be sure to select the [OK] button ②.
4. You can monitor the current setting in the display area ②.
5. Push the [Server Setting] button ③ to display the Setting of E-mail server screen Screen 2 will be displayed as shown in the left-hand column.
6. Push the [Modify] button ④ and enter an SMTP server address on the input screen.
7. Push the [Modify] button ⑤ and enter an SMTP server port number on the input screen.
8. Select "Enabled" or "Disabled" for the POP server ⑥.
9. Push the [Modify] button ⑦ and enter a POP server address on the input screen.
10. Push the [Modify] button ⑧ and enter a POP server port number on the input screen.
11. Push the [Modify] button ⑨ and enter a POP server user ID on the input screen.
12. Push the [Modify Password] button ⑩ and enter a POP server password on the input screen.
13. Last, push the [OK] button ⑪ to return to the Setting of E-mail screen Screen 1.  
(To cancel the settings made, push the [Cancel] button.)
14. Push the [Transmn Set] button ⑫ to display the Setting of E-mail transmission screen on the next page Screen 3.

## Screen 2 Setting of E-mail server

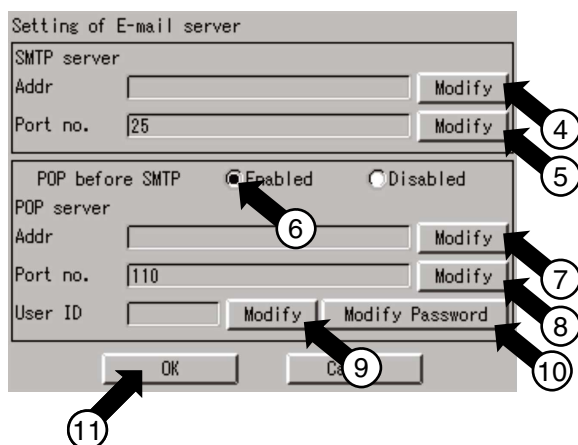


# System Setup Menu Operation

Screen 3 Setting of E-mail transmission

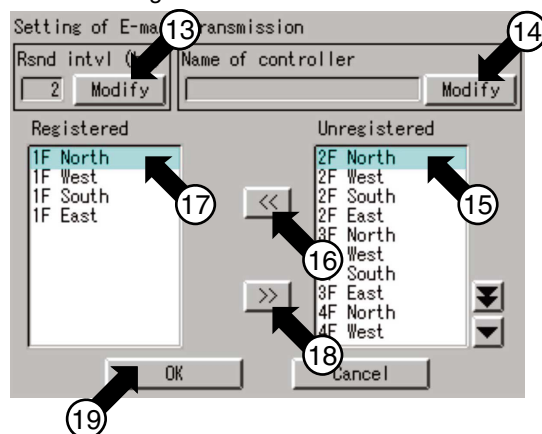

Screen 4 Setting of E-mail address

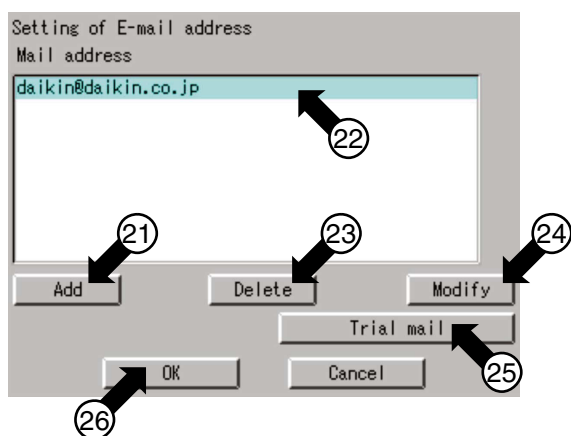

15. Push the [Modify] button ⑬ and enter a retransmission interval on the input screen.  
(The retransmission interval is an e-mail retransmission interval when faults occur consecutively with the equipment. This interval time (hour) must be a value from 1 to 72. Initially, it is set to 2 hours.)
16. Push the [Modify] button ⑭ and enter an ITC identifier on the input screen. The name specified here is displayed in the Subject field during e-mail transmission.
17. When adding an air-conditioner for fault confirmation by e-mail, select the air-conditioner at ⑮ and push the [<<] button ⑯.  
When deleting an air-conditioner for fault confirmation by e-mail, select the air-conditioner at ⑰ and push the [<<] button ⑱.  
After finishing the necessary edit operations, push the [OK] button ⑲ to return to the Setting of E-mail screen on the previous page Screen 1.  
(To cancel the settings made, push the [Cancel] button.)
18. Push the [Mail add. Set] button ⑳ on the previous page to display the Setting of E-mail address screen Screen 4.
19. When adding an e-mail address for fault notification by e-mail, push the [Add] button ㉑ and enter the e-mail address on the input screen.  
(Note that a maximum of 3 e-mail addresses can be registered.)  
When deleting an e-mail address, select the address at ㉒ and push the [Delete] button ㉓.  
In addition, when changing the registered e-mail address, select the address at ㉔ and push the [Modify] button ㉕.
20. When sending test e-mail, select a destination e-mail address at ㉒ and push the [Trial mail] button ㉖.
21. After making the necessary settings, push the [OK] button ㉗ to return to the Setting of E-mail screen on the previous page Screen 1.  
(To cancel the settings made, push the [Cancel] button.)
22. After finishing the necessary setting for e-mail, push the [OK] button ㉘.  
(To cancel the settings made, push the [Cancel] button.)



# System Setup Menu Operation

## Screen 1 Version Information



## Version Information

This is a menu for checking the version number of the software for the intelligent Touch Controller currently used. Generally it is not necessary to check.

1. See page 49 and select Version Information.
2. Screen 1 Version Information, which is shown on the left, appears.  
(The figure on the left shows an example. It may be different from the actual version.)
3. When the version number has been checked, press the [Close] button ①.

# Precautions

## Internal Battery Enable(ON)/Disable(OFF)Switch


The intelligent Touch Controller is equipped with internal batteries in order to run the clock during blackouts as well as to save data during blackouts when using the optional Power Proportional Distribution. The batteries can be enabled and disabled using the switches shown in the figure below.

**The clock and Power Proportional Distribution will not function properly when a blackout occurs if this switch is turned to 「OFF」.**

**The switches are turned to 「ON」 when the unit is installed. Do not touch them unless the power has been turned off for a long time. (See the next page for details on what to do if the power has been off for long periods of time.)**

### <Location and Setting of Switches>

As shown in the figure, set the battery switch on the left side of this controller to “OFF” (switch knob upper side) or “ON” (switch knob lower side), using a precision minus(-) screwdriver. (Turning this switch OFF does not erase the settings for groups, zones or schedule.)

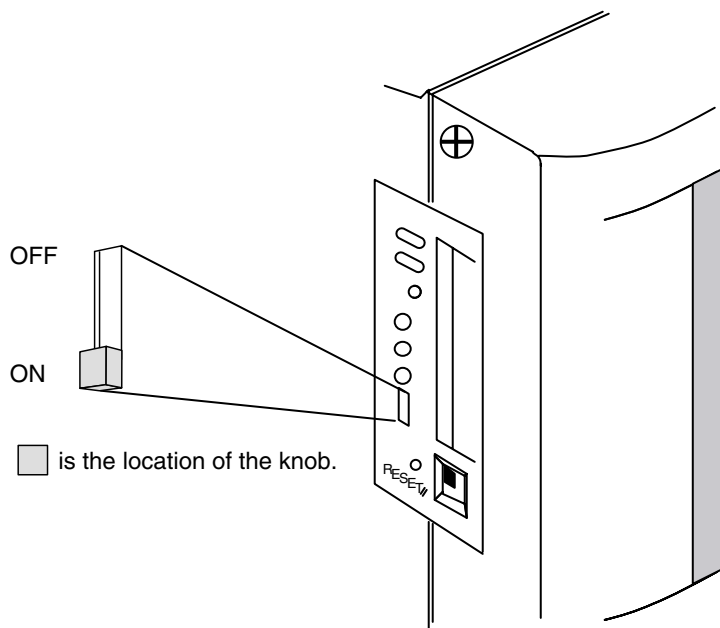

### Note

- Do not touch other switches.
- Avoid turning the switch ON and OFF with excessive force; otherwise such operation may lead to parts damage and failure.

## LCD Maintenance

- When the surface of the LCD or the main unit of the intelligent Touch Controller is soiled, wipe the soil off with a piece of cloth soaked in a diluted neutral detergent and wrung sufficiently.

### Note

- Do not use thinner, organic solvent, strongly acid solution, etc.  
The print may fade or wear out and discolor.
- Forced rubbing with hard cloth may cause damage to the liquid crystal display unit.  
Remove stains, always using a soft waste cloth.
- If the unit is stored with water droplets and stains sticking to the liquid crystal display unit, a blot may be made and the coating may come off.


## When Leaving the Product Turned OFF for a Long Time

When you leave the intelligent Touch Controller turned OFF for a long time (6 months or longer), turn the switch OFF to maintain the battery.

- The intelligent Touch Controller has a built-in battery for operating the clock in power failure.  
The battery mentioned above is for power failure only and it may be completely discharged if no power is provided for a long time.  
(The capacity is worth about 2 years of in total if no power is supplied.)
- To use the intelligent Touch Controller again, turn the switch ON.

### [Setting the switch]

As shown in the figure, set the battery switch on the left side of this controller to “OFF” (switch knob upper side) or “ON” (switch knob lower side), using a precision minus(-) screwdriver.  
(Turning this switch OFF does not erase the settings for groups, zones or schedule.)

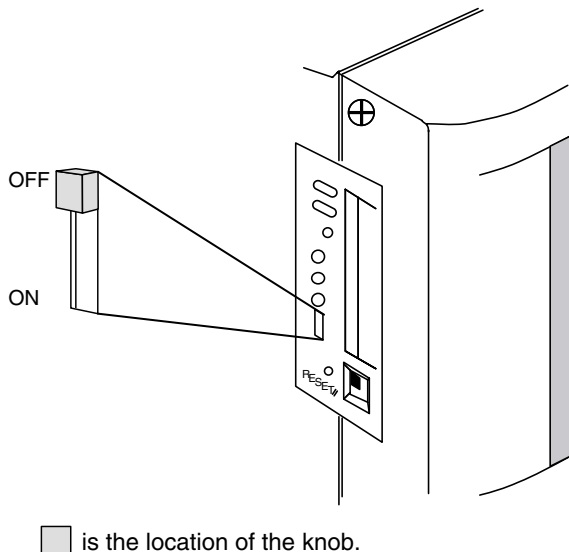

### Note


- Do not touch other switches.
- Avoid turning the switch ON and OFF with excessive force; otherwise such operation may lead to parts damage and failure.

### ⚠ Caution

If electric components in the intelligent Touch Controller are charged with static electricity, it may cause failure.  
Be sure to discharge the static electricity accumulated in your body before attempting any operation.  
To discharge yourself, touch a grounded metal object (control panel, etc.).

# Troubleshooting


## Before Having the Product Serviced
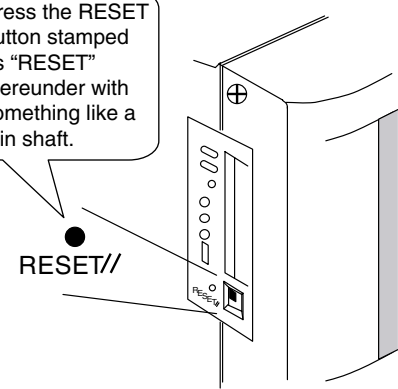
| Item  | Description and Corrective Action  |
|---|--|
| The display of the intelligent Touch Controller has gone out.                       | When Backlight Auto OFF is set for Backlight Setup of the intelligent Touch Controller, the light goes out if the screen is left untouched for a certain time.<br>Touch the screen with the pen provided. The display comes back on.   |
| The backlight does not go out when Backlight auto OFF is set.                       | Backlight Auto OFF is a function to automatically turn the backlight OFF if it is left untouched for a certain time.<br>If the display is Set/Prop, System Setup, etc., the light does not go out automatically.   |
| The intelligent Touch Controller cannot be operated or monitoring is not available. | <p>Press and hold down the reset button on the left screen of the intelligent Touch controller for 5 seconds.<br/>Pressing this switch initialize the intelligent Touch Controller.<br/>(Pressing this switch does not erase the settings for groups, zones or schedule.)</p> <div data-bbox="686 772 877 946"> <p>Press the RESET button stamped as "RESET" thereunder with something like a thin shaft.</p> </div>  <p>RESET//</p> <p>intelligent Touch Controller</p> <div data-bbox="1181 888 1372 1197"> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Do not touch other switches.</li> <li>• Avoid turning the switch ON and OFF with excessive force; otherwise such operation may lead to parts damage and failure.</li> </ul> </div> <div data-bbox="686 1236 1356 1468"> <p><b>Caution</b></p> <p>If electric components in the intelligent Touch Controller are charged with static electricity, it may cause failure. Be sure to discharge the static electricity accumulated in your body before attempting any operation. To discharge yourself, touch a grounded metal object (control panel, etc.).</p> </div> |

## Before Having the Product Serviced

| Item   | Description and Corrective Action  |
|--|--|
| On the Monitoring screen, buzzer sounds when an area not allocated for a button for operation is pressed.  | The intelligent Touch Controller is designed in such a way that the buzzer sounds when any part of the screen is pressed. It is normal.  |
| The screen flickers at a regular interval.   | While the Monitoring screen is shown, the screen is updated every 3 seconds to show the latest status of air conditioners. The screen may look flickering when the update is made. It is normal.   |
| Touching the screen of the intelligent Touch Controller does not change the display soon.  | Updating of the display may take some time depending on the communication status with the air conditioners connected. Update is completed in a few seconds.  |
| LCD  | There may be found some dots that are never illuminated or always illuminated on a certain part of the LCD of the intelligent Touch Controller. It is normal.<br>The LCD may inherently generate unevenness due to change of temperature, which is normal.   |
| On the Zone Monitoring screen of the intelligent Touch Controller, a filter or element sign was shown for a certain zone. Cleaning the filter or element of air conditioners and resetting the cleaning sign with a remote control does not turn out the filter or element sign. | On the Zone Monitoring screen, the filter or element sign shown is not turned out unless the filter or element signs for all of the air conditioners in the zone are reset.<br>Check for any air conditioner showing cleaning sign apart from the air conditioners cleaned in the zone.                  |
| Pressing an operation button on the screen of the intelligent Touch Controller sounds the buzzer but operation is not accepted.  | The positions of buttons on the touch panel may be shifted over time. See page 69 and perform touch panel calibration.   |
| The intelligent Touch Controller does not allow setting of Permitted/Inhibited of the remote control.  | When iPU, BAC net Gateway is connected, Permitted/Inhibited setting of the remote control cannot be made with the intelligent Touch Controller. When double intelligent Touch Controller control is performed, one of the two intelligent Touch Controllers cannot make Permitted/Inhibited setting.     |
| An air conditioner to be connected to the intelligent Touch Controller has been added but the added air conditioner cannot be monitored on the Monitoring screen of the intelligent Touch Controller.  | When adding an air conditioner to be connected to the intelligent Touch Controller, trial running of the intelligent Touch Controller, as well as of the air conditioner, is required.<br>( When trial running of the intelligent Touch Controller has not been performed, contact our representative. ) |

Before Having the Product Serviced

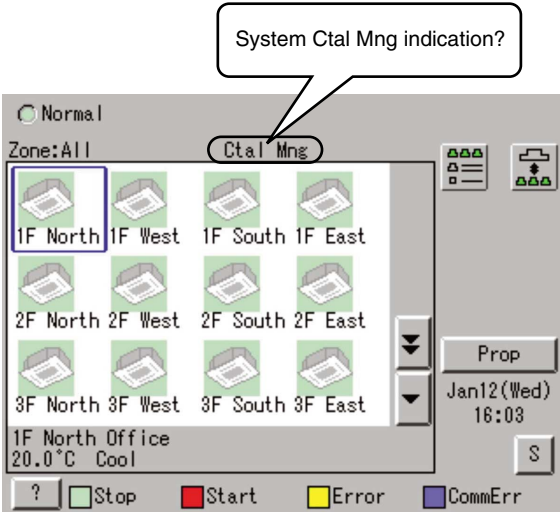
| Item  | Description and Corrective Action  |
|---|--|
| Collective Operation, Start and Stop buttons are not shown on the Monitoring screen of the intelligent Touch Controller and operation of air conditioners is made impossible. | <p>Is the indication System Ctal Mng on the Monitoring screen, as shown below?</p> <p>This indication is shown in the following cases.</p> <p>When iPU, BAC net Gateway is connected to the intelligent Touch Controller, the low order control inhibit setting is available for iPU, BAC net Gateway.</p> <p>The lower order control inhibit is a setting that inhibits operation of air conditioners from the intelligent Touch Controller central management controller and ON/OFF controller and enables commands from iPU, BAC net Gateway only. When this setting is made, System Ctal Mng indication is shown on the intelligent Touch Controller.</p> <p>When the setting is released, the System Ctal Mng indication disappears and operation with the intelligent Touch Controller becomes available.</p> <div><p>The screenshot shows a monitoring interface with a status bar at the top indicating 'Normal'. Below this, a 'Zone: All' label is present. A callout bubble points to a 'Ctal Mng' indicator, which is a small icon with a green background and a white 'X'. The main area of the screen displays a grid of air conditioner icons, each labeled with its location: '1F North', '1F West', '1F South', '1F East', '2F North', '2F West', '2F South', '2F East', '3F North', '3F West', '3F South', and '3F East'. The '1F North' icon is highlighted with a blue border. To the right of the grid, there are several icons for system status and a 'Prop' button. Below the grid, the text '1F North Office' and '20.0°C Cool' is displayed. At the bottom of the screen, there is a row of status indicators: a question mark icon, a green 'Stop' button, a red 'Start' button, a yellow 'Error' button, and a blue 'CommErr' button.</p></div> |

## Before Having the Product Serviced

| Item   | Description and Corrective Action  |
|--|--|
| The air conditioner is supposed to operate, but it is stopped.                     | <p>The followings are possible causes. Check the followings.</p> <ol style="list-style-type: none"> <li>1. Is the stop operation performed with the remote control of the air conditioner?</li> <li>2. When a central unit is connected in addition to this unit, is the stop operation performed with the central unit?</li> <li>3. Was the power supply for air conditioner interrupted?</li> <li>4. Is the schedule of stopping the air conditioner registered with the schedule function of the unit?</li> <li>5. Is Heating Optimization function of this unit activated?<br/>(The above function stops the air conditioner during the heating operation to prevent warm air when the thermo-switch is turned off.) (For details, see P45,46.)</li> </ol> |
| The air conditioner is supposed to be stopped, but it is operating.                | <p>The followings are possible causes. Check the followings.</p> <ol style="list-style-type: none"> <li>1. Is the start operation performed with the remote control of the air conditioner?</li> <li>2. When a central unit is connected in addition to this unit, is the start operation performed with the central unit?</li> <li>3. Is the schedule of starting the air conditioner registered with the schedule function of the unit?</li> <li>4. Is Temperature Limit function of this unit activated?<br/>(The above function operates the air conditioner automatically to avoid excessive increase or decrease of room temperature.) (For details, see P42-44.)</li> </ol>   |
| The set temperature or the operation mode of the air conditioner has been changed. | <p>The followings are possible causes. Check the followings.</p> <ol style="list-style-type: none"> <li>1. Is the set temperature or the operation mode changed with the remote control of the air conditioner?</li> <li>2. When a central unit is connected in addition to this unit, is the set temperature or the operation mode changed with the central unit?</li> <li>3. Is the schedule of changing the set temperature or the operation mode registered with the schedule function of the unit?</li> <li>4. Is Change Over function of this unit activated?<br/>(The above function changes the operation mode and set temperature of the air conditioner automatically to maintain an optimum room temperature. (For details, see P37-41.)</li> </ol> |

Before Having the Product Serviced

| Item  | Description and Corrective Action  |
|---|--|
| Collective Operation, Start and Stop buttons are not shown on the Monitoring screen of the intelligent Touch Controller and operation of air conditioners is made impossible. | <p>Is the indication System Compulsory Stop on the Monitoring screen, as shown below?<br/>This indication is shown in the following cases.</p> <p>When compulsory stop command is input to central management devices (central remote controller, ON/OFF controller, etc.) including the intelligent Touch Controller, the indication appears. Inputting compulsory command stops all air conditioners connected to the central management device. While the command is input, neither the central management devices nor remote control can operate air conditioners.</p> <p>When the compulsory stop input command is canceled, the System Compulsory Stop disappears, which allows control with the intelligent Touch Controller.</p> |

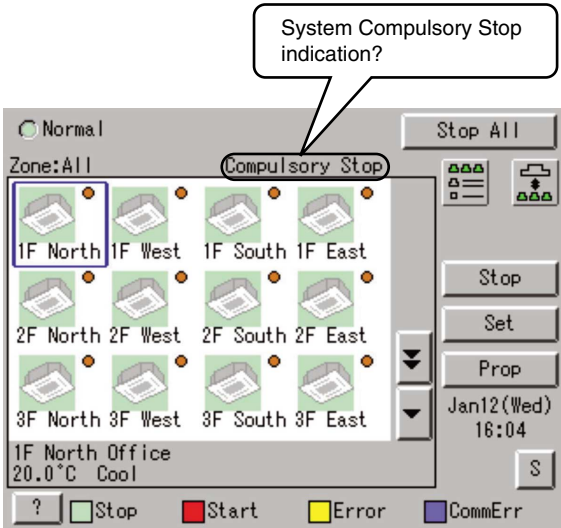




# Emergency Procedure for intelligent Touch Controller Failure


| Item   | Description and Corrective Action  |
|--|--|
| Failure occurs in the intelligent Touch Controller while the remote control is disabled with the intelligent Touch Controller and start/stop setting, etc. of air conditioners cannot be made. | As a temporary measure before our service personnel investigates into the problem, turn OFF the power supply breaker of the intelligent Touch Controller. This allows all kinds of operation with the remote control of air conditioners in about 5 minutes.<br>(When there is any other central management device, turn the power OFF for all of the devices. ) |

Maintenance

When it is desired to adjust screen brightness, contrast and buzzer sound level
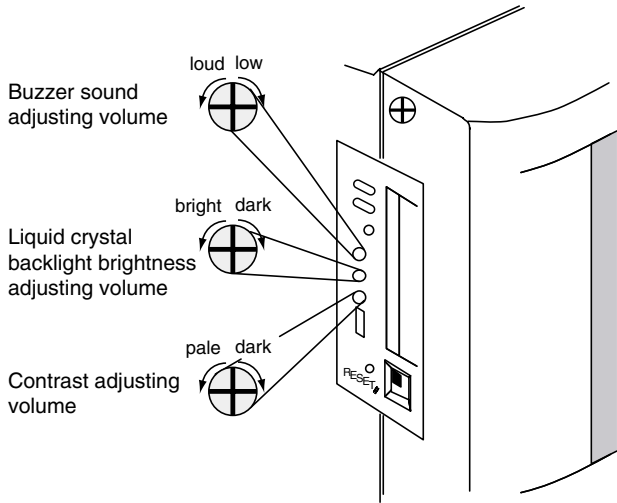
| Item  | Description and Corrective Action   |
|---|---|
| Screen brightness, contrast and buzzer sound adjustment is desired. | <p>The screen brightness, contrast and buzzer sound level are factory adjusted properly before shipment, but in case where the screen is hard to see and the buzzer is hard to hear, for example, according to the actual installation condition and usage, the screen brightness, contrast and buzzer sound level can be adjusted by the following method.</p> <p>[Adjustment Method]</p> <p>Adjust the volume (variable resistor) on the left side of the intelligent Touch controller with a Phillips head screwdriver while checking each level.</p> <p>The buzzer sound, screen brightness and screen contrast volume switches are located in sequence from the top as shown below.</p>  <p>The diagram shows a side view of the intelligent Touch controller. On the left side, there are three vertical sliders. The top slider is labeled 'Buzzer sound adjusting volume' with 'loud' and 'low' indicators. The middle slider is labeled 'Liquid crystal backlight brightness adjusting volume' with 'bright' and 'dark' indicators. The bottom slider is labeled 'Contrast adjusting volume' with 'pale' and 'dark' indicators. A 'RESET' button is located below the sliders. Arrows point from the text labels to their respective sliders.</p> <p><b>Note</b></p> <ul style="list-style-type: none"><li>• Since each volume is a precision component part, do not turn the volume switch with excessive force. It should be noted that a fault is caused to the switch.</li><li>• Do not touch other switches.<br/>(The buzzer sound volume and liquid crystal backlight brightness can be adjusted with the volume switch described above; normally, however, no such adjustment is required.)</li></ul> <p><b>Caution</b></p> <p>If electric components in the intelligent Touch Controller are charged with static electricity, it may cause failure. Be sure to discharge the static electricity accumulated in your body before attempting any operation. To discharge yourself, touch a grounded metal object (control panel, etc.).</p> |

Connecting Unification adaptor allows using the contact for normal and abnormal operation signal and collective start/stop with a contact. For details, contact the vendor you purchased the product from.  
Also, by connecting D III NET-plus adaptor, it is possible to operate and monitor the indoor units of 64 groups (intelligent Touch Controller plus D III NET – plus adapter–128 groups in total) additionally.

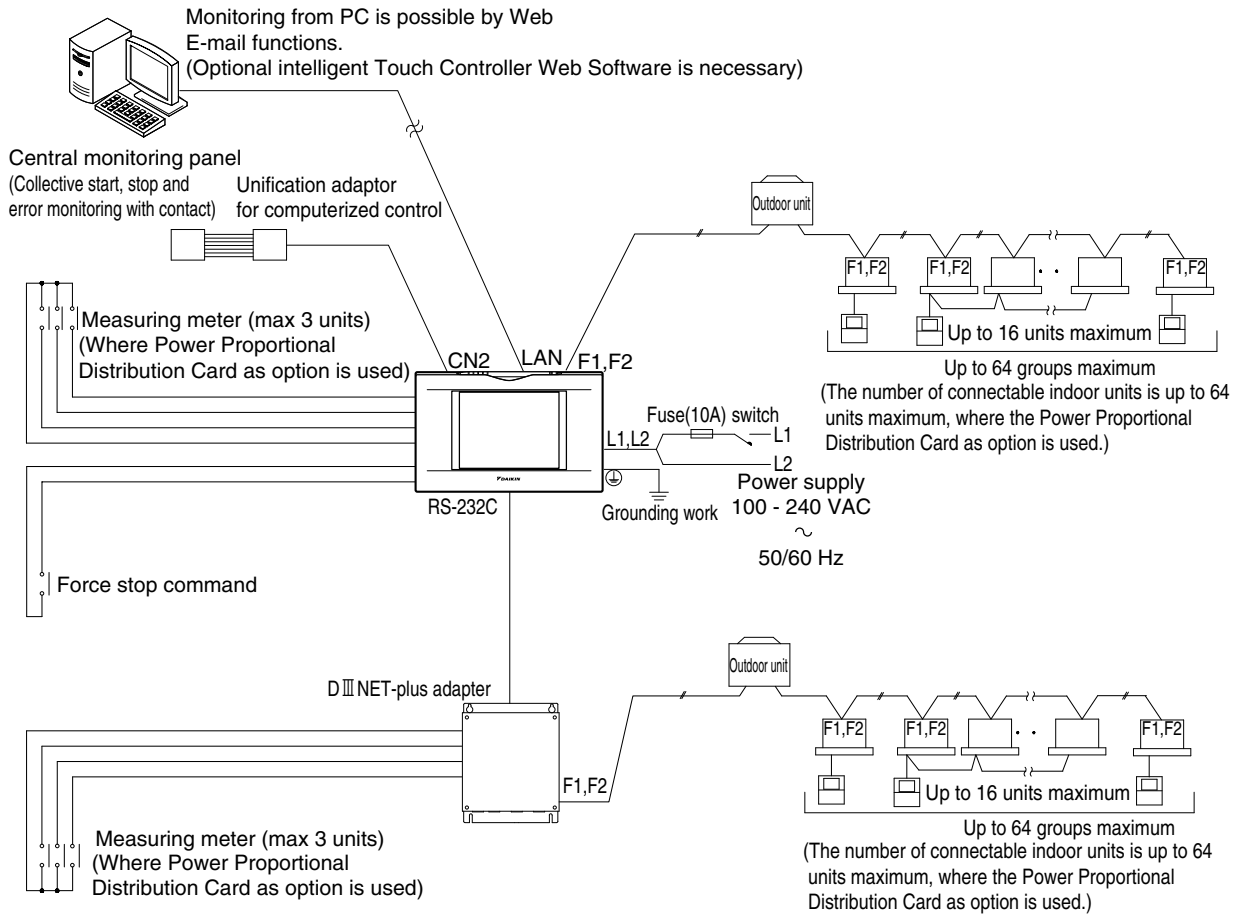


# Specification

## Specification

|                   |  |
|-------------------|--|
| Power             | AC100 - 240V 50/60Hz   |
| Power consumption | 10 W maximum   |
| Force stop input  | Normally-open contact<br>Contact current approximately 10 mA |
| Size              | 230 × 147 × 107 (W × H × D)                                  |
| Mass              | 1.2kg  |

## Dimensions

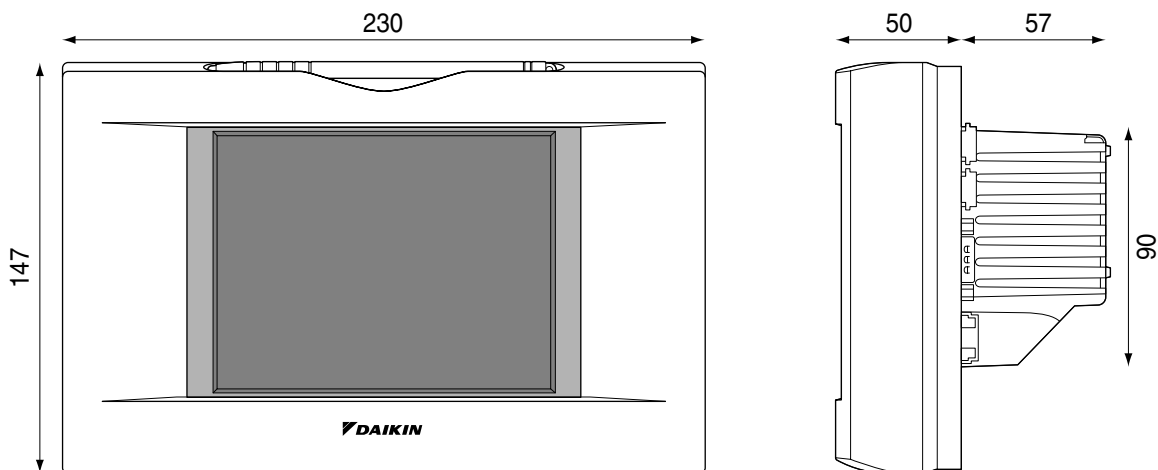

The specification and appearance of the product may be modified for improvement without prior notice.

## After-sales Service

---

- To have the product repaired, prepare the following information

- Model
- Date of installation
- Circumstances - as detailed as possible
- Address, name, phone number

- **Transfer**

Transfer requires professional technique. Be sure to contact the vendor you purchased the product from or service station.

The customer will be charged for the expense required for transfer work.

- **Repair after the guarantee period for free repair**

Contact the vendor. When the functions can be maintained by repair, the product will be repaired according to the request and the customer will be charged.

(Guarantee period ... one year from the date of installation)

- **Questions**

For after-sales service, contact the vendor you purchased the product from or the nearest service station.

***DAIKIN INDUSTRIES, LTD.***

Head office:

Umeda Center Bldg., 4-12, Nakazaki-Nishi 2 chome,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 18-1 Konan  
2-chome, Minato-ku, Tokyo, 108-0075 Japan

***DAIKIN EUROPE NV***

Zandvoordestraat 300, B-8400 Oostende, Belgium